

3. Disassembly and Reassembly

This section of the service manual describes the disassembly and reassembly procedures for the LED TV.



This LED TV contains electrostatically sensitive devices. Use caution when handling these components.

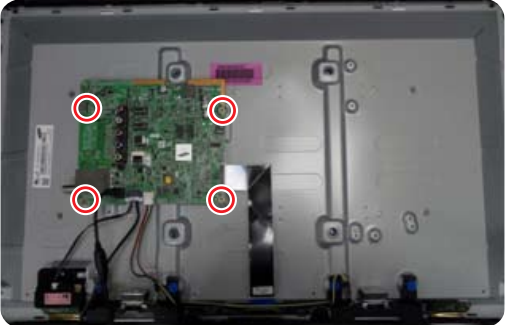
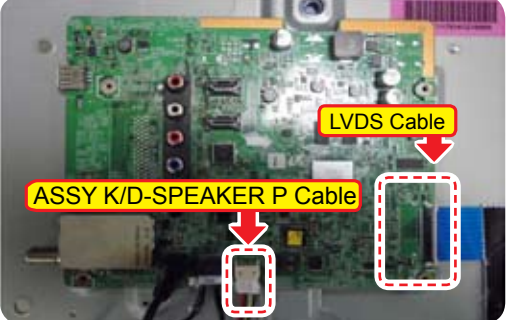
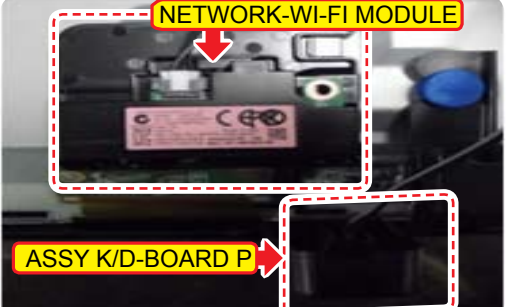
3-1. Disassembly and Reassembly



1. Disconnect the LED TV from the power source before disassembly.
2. Follow these directions carefully; never use metal instruments to pry apart the cabinet.
3. If there is no additional coment, it is same for all inches.

Description	Picture Description	Screws
1 Place TV face down on cushioned table.		
2 Remove the DC VSS(A) and 4 Screws from the ASSY STAND P-BASE.		Torque : 9~ 10Kgf.cm 6003-001782
3 Remove the ASSY STAND P-BASE.		

3. Disassembly and Reassemble

Description	Picture Description	Screws
4 Remove screws of COVER-REAR. • 7EA		Torque : 7~ 8Kgf.cm  6003-002755
5 Remove 4 Screws of ASSY PCB MAIN.		Torque : 7~ 8Kgf.cm  6001-003016
6 Remove the ASSY K/D-SPEAKER P (R/L).		
7 Remove the LVDS Cable, NETWORK-WI-FI MODULE and ASSY K/D-BOARD P.	 	

Description	Picture Description	Screws
8 Completed disassembly.		



NOTE

Reassembly procedures are in the reverse order of disassembly procedures.

3-2. Disassembly and Reassembly_COVER-REAR

Description	Picture Description
1 Pull the Lower left(or right) corner of COVER-REAR.	
2 Opened that point.	
3 Pull the upper left(or right) corner of COVER-REAR.	
4 Opened that point.	
 CAUTION Don't disassemble only using lower two point. It cause the breakage of RIB(panel).	