

3. Disassembly and Reassembly

This section of the service manual describes the disassembly and reassembly procedures for the LED TV.



This LED TV contains electrostatically sensitive devices. Use caution when handling these components.

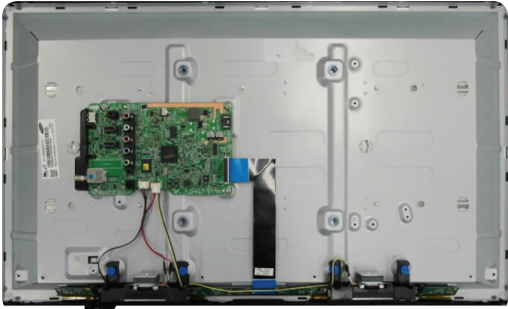
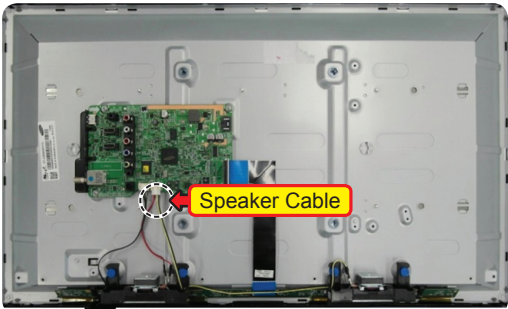
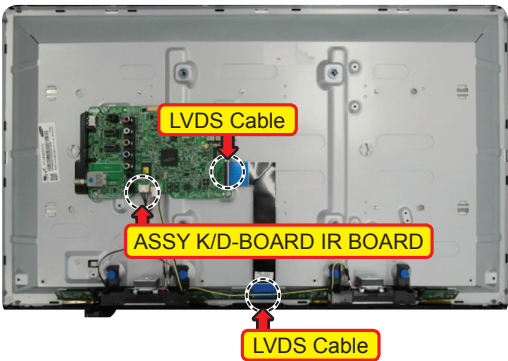
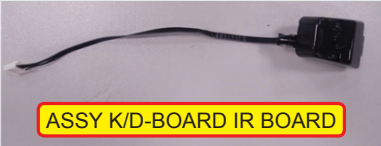
3-1. Disassembly and Reassembly

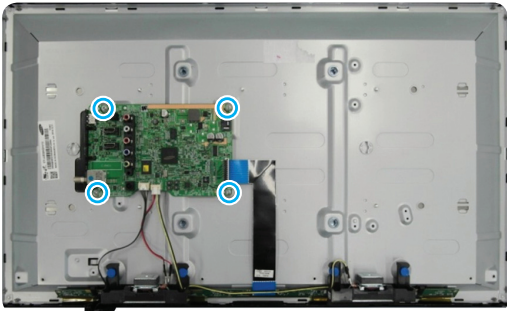
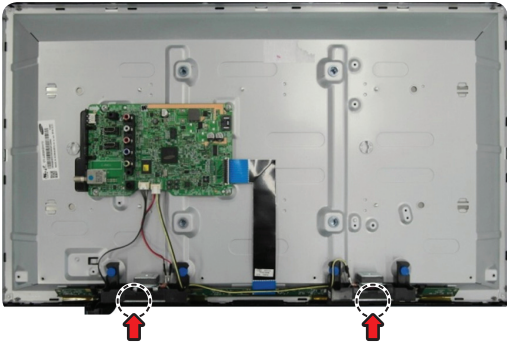


1. Disconnect the LED TV from the power source before disassembly.
2. Follow these directions carefully; never use metal instruments to pry apart the cabinet.
3. If there is no additional coment, it is same for all inches.

Description	Picture Description	Screws
1 Place a soft cloth over the table to protect the TV, and then place the TV on the cloth screen-side down.		
2 Remove the screws from the ASSY STAND P-BASE. • 32" : 4EA		6003-001782 SCREW-TAPTYPE M4,L12,ZPC(BLK)
3 Remove the ASSY STAND P-BASE.		

3. Disassembly and Reassemble

Description	Picture Description	Screws
4 Remove the screws from the ASSY COVER P-REAR. • 32" : 7EA		 6001-002755 SCREW-MACHINE M3,L6,ZPC(BLK)
5 Remove the ASSY COVER P-REAR.		
6 Remove the Speaker Cables.		
Remove the LVDS Cable, ASSY K/D-BOARD IR BOARD Cable.		
When you want to disable the Function Key  ASSY K/D-BOARD IR BOARD Factory Option > Option > Engineer Option > Type of PANEL Key > 5 way : IR + Key => Default Old : Touch Function (C model) Key IR Only : Do not work Function key		

Description	Picture Description	Screws
7 Remove the screws of ASSY PCB MAIN and DC VSS-LED TV PD BD. • ASSY PCB MAIN : 4EA		 6001-003016 SCREW-MACHINE M3.0,L5.0,ZPC(WHT)
8 Remove the ASSY K/D-SPEAKER P (L/R).		
9 Completed disassembly.		



NOTE

Reassembly procedures are in the reverse order of disassembly procedures.