

3. Disassembly and Reassembly

This section of the service manual describes the disassembly and reassembly procedures for the PDP TV.



WARNING

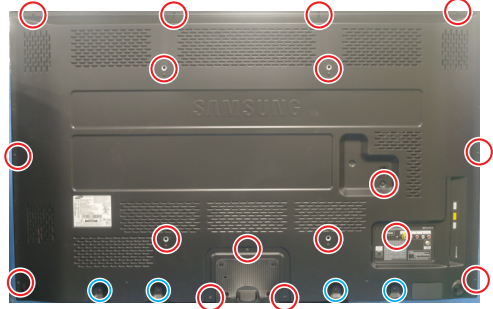
This PDP TV contains electrostatically sensitive devices. Use caution when handling these components.

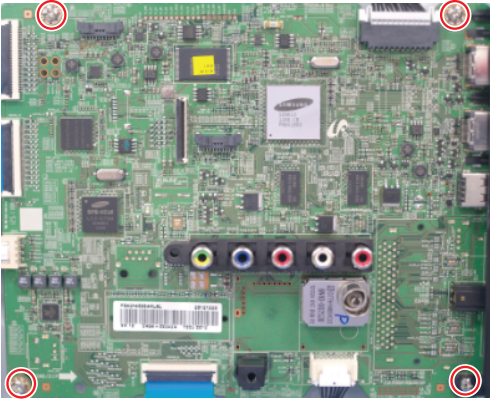
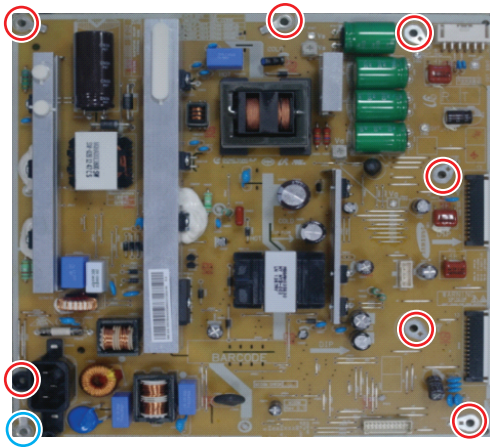
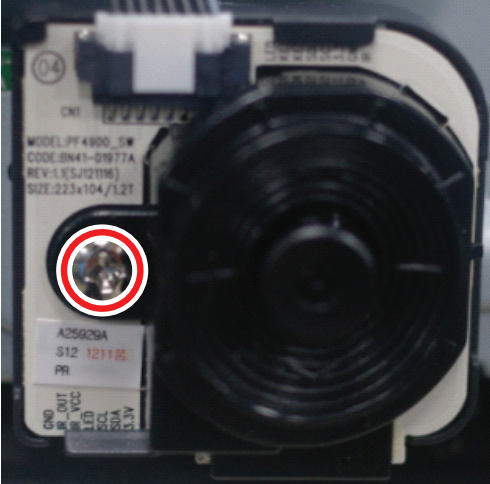
3.1. Overall Disassembly and Reassembly

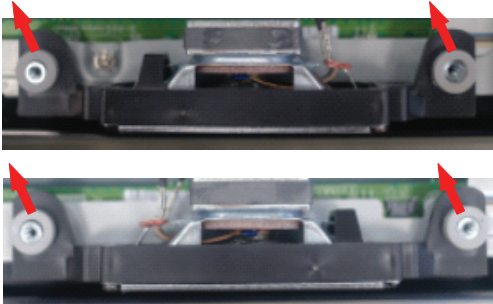
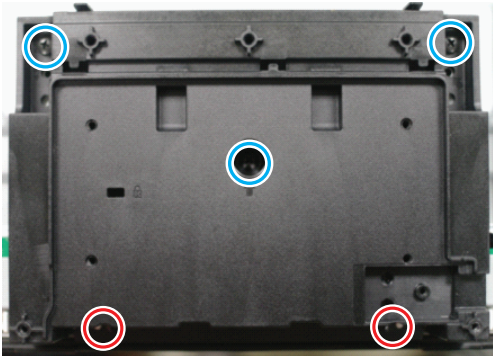
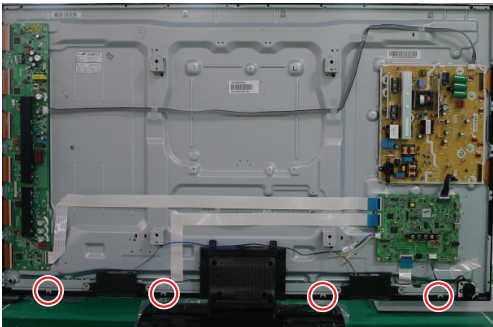


CAUTION

- Disconnect the PDP TV from the power source before disassembly.
- Follow these directions carefully; never use metal instruments to pry apart the cabinet.

Description	Description Photo	Screw
1. Place monitor face down on cushioned table. Remove screws from the Stand. Remove stand.		 6003-001782 M4 * L12
2. Remove the screws of rear-cover.		 6003-001782 M4 * L12  6003-000337 M4 * L10

Description	Description Photo	Screw
3. Lift up and remove the rear-cover. 4. Remove the screws of main board.  CAUTION Disconnect all connectors prior to removing boards.	 	 6001-002606 M3 * L10
5. Remove the screws of SMPS. Remove the SMPS.		 6001-002606 M3 * L10  6003-001439 M3 * L10
6. Remove the screw of Function. Remove the Function.		 6001-002606 M3 * L10

Description	Description Photo	Screw
7. Remove the speakers (R / L).		
8. Remove the screw of Cover bottom		 6003-001782 M4 * L12  6003-000337 M4 * L10
9. Remove the screws of the front-cover.		 6003-001782 M4 * L12