

EPSON

STYLUS PHOTO 950

(Part numbers in brackets are the old numbers for otherwise identical components)

Page No.:1

REF	PART NO	DESCRIPTION	SPEC	QTY
100	1112147	STACKER ASSY.;B		1
101	1112145	HOUSING,LOWER UNIT;B		1
102	1109626	HOUSING,REAR;B;EDG		1
103	1107948	HOUSING,UPPER UNIT;B		1
104	1107944	PAPER SUPPORT UNIT;B		1
105	1108508	LABEL,CAUTION;B		1
106	1081689	MOUNTING PLATE,HOUSING,RIGHT		1
107	1081692	MOUNTING PLATE,HOUSING,LEFT		1
108	1024145	C.B.P.SCREW,4X12,F/ZN		4
109	1005019	C.B.P-TITE SCREW,3X8,F/ZN	M3X8 F/ZN	2
111	1003164	C.B.P-TITE SCREW,3X12,F/ZN		2
112	1024130	C.B.P-TITE SCREW,3X6,F/ZN		2
113	1108155	COVER,PRINTER;B		1
114	1092489	WASTE INK PAD		1
115	1092490	WASTE INK PAD		1
116	1110091	POROUS PAD,INK,STOPPER,FRONT		1
117	1091067	POROUS PAD,PUMP,FRONT		1
118	1091068	POROUS PAD,PUMP,LEFT		1
119	1091283	POROUS PAD,PUMP,RIGHT		1
150	1081686	SHIELD PLATE,UPPER		1
151	1104579	MOUNTING PLATE,AC INLET;B		1
152	1081687	SHIELD PLATE,LOWER		1
153	1030609	COVER,SHIELD PLATE,M/B,RIGHT		1
154	1112143	ROLL PAPER UNIT;B		1
155	1090131	FOOT CLAMP		1
156	1073165	C.B.S. SCREW(B300204211)	M3X6	14
157	1004539	C.P.SCREW(B010103311)	M3X6	3
200	2055634	BOARD ASSY., MAIN	SEE NOTE BELOW	1
201	2055648	HARNESS		1
300	2056055	BOARD ASSY.,POWER SUPPLY	5820A,STANDARD	1
400	2002364	POWER CABLE,(VD31303SA-10A)	230V	1
500	2071635	PRINTER MECHANISM(ASP)M-A710-101		1
501	1112602	FRAME,PAPER EJECT UNIT;B		1
502	1082566	FRAME ASSY.,PF		1
503	1081696	PAPER GUIDE,LOWER		1
504	1081816	SPRING,STACKER		2
505	1090030	TORSION SPRING,186		4
506	1081766	CAP ASSY.		1
507	1081770	PUMP ASSY.		1
508	1091178	LEAF SPRING,LEVER,CLEANER		1
509	2055615	CONNECTOR,MAIN	„	1
510	1081802	HOLDER,MOUNT,RIGHT		1
511	1108947	GROUNDING SPRING,CUTTER;B		2
512	1081719	SPUR GEAR,12,IDLER		1
513	1059849	REUSE,LOCK,MINI CLAMP		1
514	1073165	C.B.S. SCREW(B300204211)	M3X6	9
515	1024130	C.B.P-TITE SCREW,3X6,F/ZN		2
516	2055616	HARNESS,CUTTER,MAIN		1
517	1091621	POROUS PAD,SLIDER,CAP		1
518	1105305	EXTENSION SPRING,0.393;B		6
518	1108130	EXTENSION SPRING,0.393;C		6

EPSON

STYLUS PHOTO 950

Page No.:2

REF	PART NO	DESCRIPTION	SPEC	QTY
550	1082446	PAPER GUIDE,REAR		1
551	1083043	TORSION SPRING,7.41		2
552	1090576	PAPER GUIDE,UPPER,LEFT UNIT		1
553	1090575	PAPER GUIDE,UPPER UNIT		3
554	1068973	COMBINATION GEAR,12,16		1
555	1080399	SPACER,4.1X0.5,L/NA		3
556	1070240	SCALE ASSY.,PF		1
557	1068912	TIMING BELT,PF		1
558	2060235	BOARD ASSY.,ENCODER;B UNIT		1
559	1068915	COMBINATION GEAR,9.5,14.7		1
560	1090582	ROLLER,EJECT UNIT		1
561	1090591	PAPER GUIDE,FRONT UNIT		1
562	1068909	BUSHING,12,RIGHT		1
563	1081725	GROUNDING SPRING,EJ		1
564	1068935	SCREW,MOUNT,PF		1
566	1084649	EXTENSION SPRING,17.2		1
567	2055766	MOTOR ASSEMBLY,PF	,	1
568	2060230	HARNESS ASSY.,PF		1
569	1090574	ROLLER,PF UNIT		1
570	1082582	GROUNDING SPRING,PF		1
571	1017597	PLAIN WASHER,3.3X0.5X8,F/UC		1
572	1073165	C.B.S. SCREW(B300204211)	M3X6	2
573	1006058	CUP SCREW(B040302311)	M3X4	1
574	1081724	POROUS PAD,PAPER GUIDE,FRONT		1
600	1090592	CARRIAGE UNIT		1
601	1090187	TORSION SPRING,112.7		1
602	1108509	LABEL,POSITION,CARTRIDGE;B		1
603	1081754	FASTENER,HEAD		1
604	1109900	COVER,CARTRIDGE;B		1
605	1109362	CABLE,HEAD ASSY.;B		1
606	1104729	SHEET,CABLE,HEAD;B		1
607	1081757	HOLDER,CABLE,HEAD		1
608	1081700	LEVER,RELEASE,DRIVEN,FRONT		1
609	1090762	LABEL,PG LEVER		1
610	1081701	LINK,RELEASE,DRIVEN		1
611	1090579	SHAFT,RELEASE,DRIVEN UNIT		1
612	1109899	LEVER,PG;B		1
613	1090029	SPRING,LEVER,PG		1
614	1081697	BUSHING,LEFT		1
615	1081750	BUSHING,PARALLEL ADJUST,LEFT		1
616	1081752	MOUNTING PLATE,SHAFT,CR,LEFT		1
617	1081714	RING,LEVER,PG		2
618	1076289	LEAF SPRING(B101254590)	6.2X0.15X11	2
619	1082253	REUSE LOCK MINI CLAMP		2
620	1081698	SPUR GEAR,RELEASE,STAR WHEEL		1
621	1091354	SUPPORT PLATE,SHAFT,RELEASE,STAR WHEEL		1
622	2060240	DETECTOR,RE UNIT		1
623	2060239	DETECTOR, PG UNIT		1
624	2055764	MOTOR ASSEMBLY,CARRIAGE	,	1
625	1081759	SCALE,CR		1
626	1048888	EXTENSION SPRING,1.494		1
627	1081685	GUIDE PLATE,CARRIAGE		1

EPSON

STYLUS PHOTO 950

Page No.:3

REF	PART NO	DESCRIPTION	SPEC	QTY
628	1081727	MOUNTING PLATE,ASF		1
629	1082567	FRAME ASSY.,CARRIAGE		1
630	1070703	STOPPER,HOLDER,PULLEY,DRIVEN		1
631	1081753	MOUNTING PLATE,SHAFT,CARRIAGE,RIGHT		1
632	1081751	BUSHING,PARALLEL ADJUST,RIGHT		1
633	1082102	BUSHING,RIGHT		1
634	1081743	HOLDER,FFC		1
635	1081749	HOLDER,PULLEY,DRIVEN		1
636	1090039	COMPRESSION SPRING,24.5		1
637	1090578	PULLEY,DRIVEN UNIT		1
638	1075741	COVER,ROLLER,LD		1
639	1084481	HOLDER,LEVER,LOCK		1
640	1084480	CAM,LEVER,LOCK		2
641	2060238	DETECTOR,PE UNIT		1
642	1084190	PLATE SPRING,CARTRIDGE,UPPER		1
643	1081761	SPRING,CARTRIDGE		1
644	1073171	C.B.S. SCREW(B300204311)	M3X8	2
645	1073165	C.B.S. SCREW(B300204211)	M3X6	20
646	1004539	C.P.SCREW(B010103311)	M3X6	2
647	1024130	C.B.P-TITE SCREW,3X6,F/ZN		1
648	1074104	RETAINING RING(B150300611)	TYPE-E(3)	2
700	1113867	ASF UNIT;D		1
701	1084260	FRAME,ASF,LEFT;B		1
702	1068970	COMBINATION GEAR,18.4,32.8		1
703	1068969	SPUR GEAR,22.4		1
704	1090597	LEVER,PLATEN UNIT		1
705	1068972	SPUR GEAR,12		1
706	1090596	DRIVE,LD ASSY		1
707	1068967	TORSION SPRING,5.88		1
708	1091357	LEVER,CHANGE		1
709	1090595	SHAFT,ROLLER,LD UNIT		1
710	1084259	FRAME,ASF,RIGHT;B		1
711	1068962	LEVER,SUB,PAPER BACK		1
712	1069149	CAM,SILENCE		1
713	1104316	LEVER,TRANSMISSION,PAPER BACK;B		1
714	1082560	COVER,CAM,SILENCE		1
715	1068963	CAM,LEVER,PAPER BACK		1
716	1083597	LEVER,PAPER BACK,SUPPORT		1
717	1069150	LEVER,SILENCE		1
718	1068966	EXTENSION SPRING,0.5		1
719	1069157	TORSION SUPING,1.41		1
720	1069153	SUPPORT,LEVER,SILENCE		1
721	1069146	SPUR GEAR,28.8		1
722	1069164	TORSION BAR,HOPPER		1
723	1052673	EXTENSION SPRING,0.143		2
724	1083693	PLAIN WASHER 3.1X0.5X8.85 S/NA		3
725	1024130	C.B.P-TITE SCREW,3X6,F/ZN		4
726	1073171	C.B.S. SCREW(B300204311)	M3X8	3
727	1008637	U-TYPE,11.2X0.13X16S/NA		1
750	1091417	FRAME ASF,LOWER		1
751	1069167	HOLDER,TORSION BAR,HOPPER		1
752	1083613	HOLLER,ASF,MIDDLE,LEFT		1

EPSON

STYLUS PHOTO 950

Page No.:4

 
REF	PART NO	DESCRIPTION	SPEC	QTY
753	1068959	HOLDER,ASF,MIDDLE		1
755	1084327	TORSION SPRING,66.1		1
756	1104315	LEVER,PAPER BACK;B		1
757	1084202	TORSION SPRING,5.6		1
758	1091415	HOLDER,PAD		1
759	1068954	COMPRESSION SPRING,2.94		1
760	1090594	HOPPER EDGE GUIDE UNIT		1
761	1091414	PAD,LD		1
800	F138000	PRINT HEAD	672	1
801	1081776	CLEANER,HEAD		1
802	1108158	TRAY,CDR;B		1
803	1061518	SHEET,CD,DUMMY		1
804	1091418	ADAPTER,CDR		1
805	1108022	AUTO CUTTER UNIT		1
850	1090603	ROLL PAPER UNIT		1
851	1112142	PAPER GUIDE,ROLL PAPER ASSY;B		1
852	1113868	FRAME,ROLL PAPER,LEFT;E ASSY		1
853	1113869	FRAME,ROLL PAPER,RIGHT;E ASSY		1
855	1107949	GUIDE PLATE CDR ASSY UNIT;B		1
N/A	1104259	INK CARTRIDGE,BLACK,,AS	4C8080--AS-B	1
N/A	1104260	INK CARTRIDGE,CYAN,,AS	4C8080--AS-C	1
N/A	1104261	INK CARTRIDGE,MAGENTA,,AS	4C8080--AS-M	1
N/A	1104262	INK CARTRIDGE,YELLOW,,AS	4C8080--AS-Y	1
N/A	1104263	INK CARTRIDGE,LIGHT CYAN,,AS	4C8080--AS-LC	1
N/A	1104264	INK CARTRIDGE,LIGHT MAGENTA,,AS	4C8080--AS-LM	1
N/A	1108202	UPPER CASE OPENER		1
END				

NOTE: REFER TO "TECHEXCHANGE" FOR INFORMATION ABOUT ORDERING IC'S


EPSON

STYLUS PHOTO 950

Page No.:5

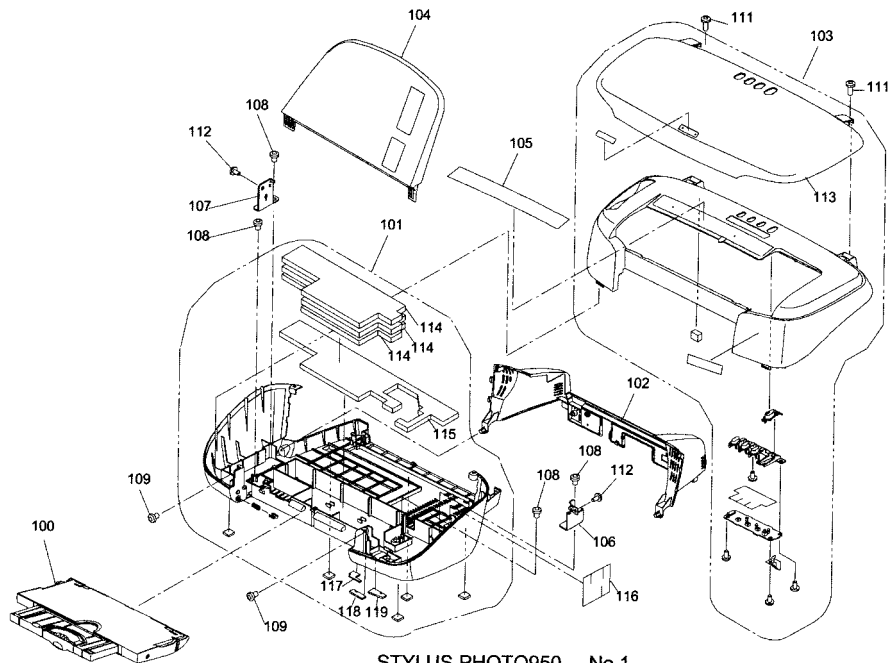

STYLUS PHOTO950 No.1

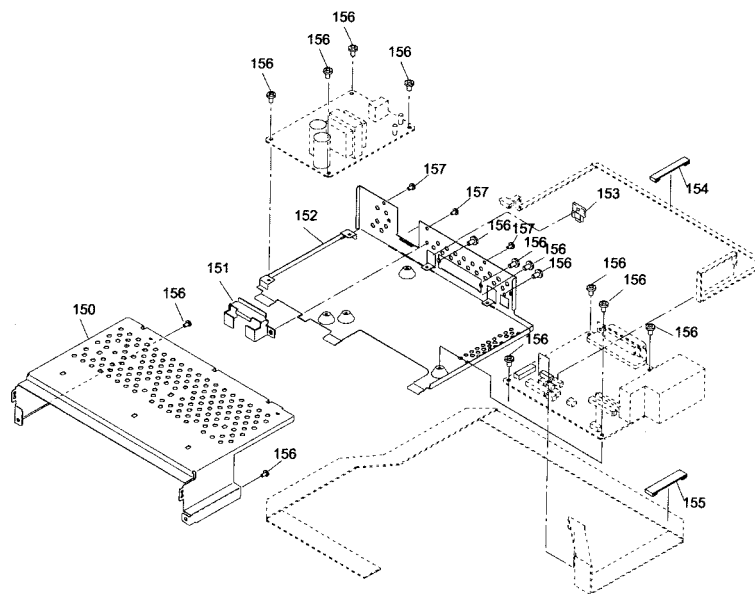 


STYLUS PHOTO 950 No.2


EPSON

STYLUS PHOTO 950

 Page No.:6

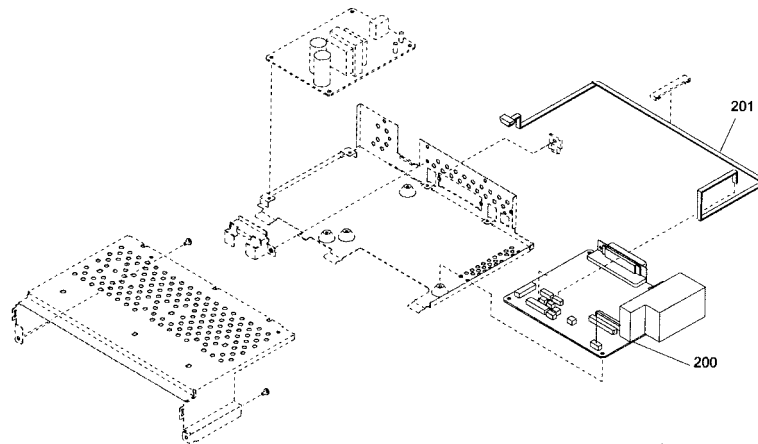

STYLUS PHOTO 950 No.3


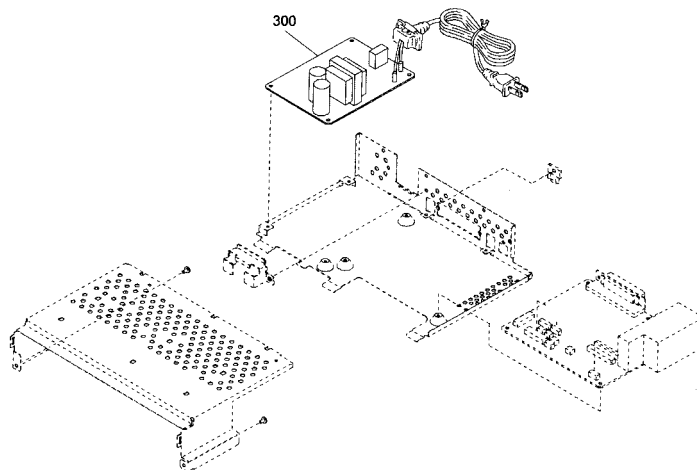 


STYLUS PHOTO 950 No.4

EPSON

STYLUS PHOTO 950

  
Page No.:7

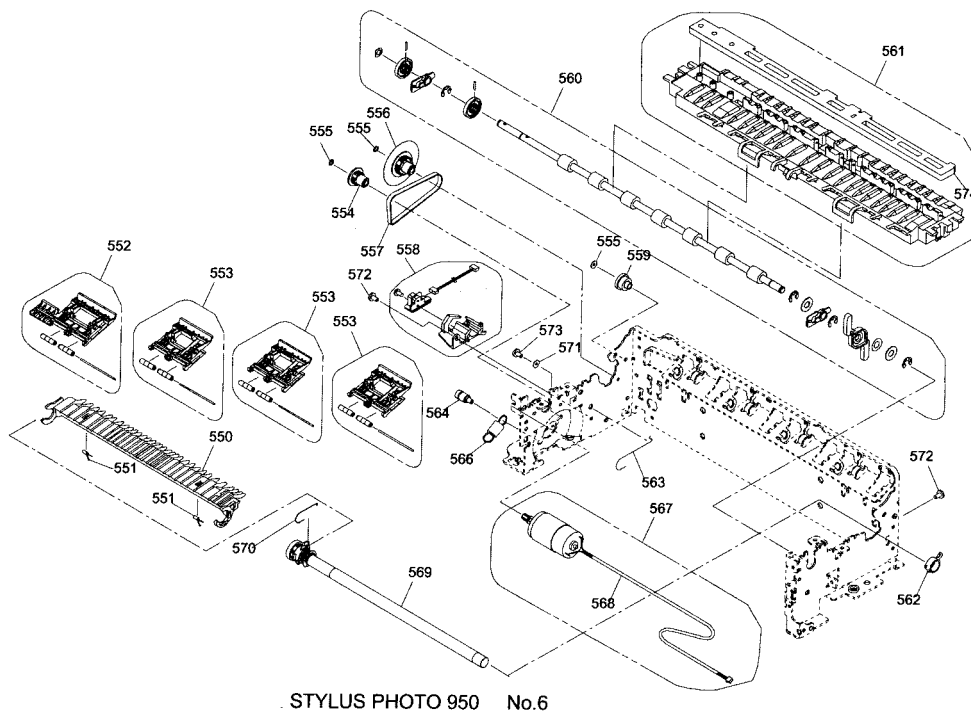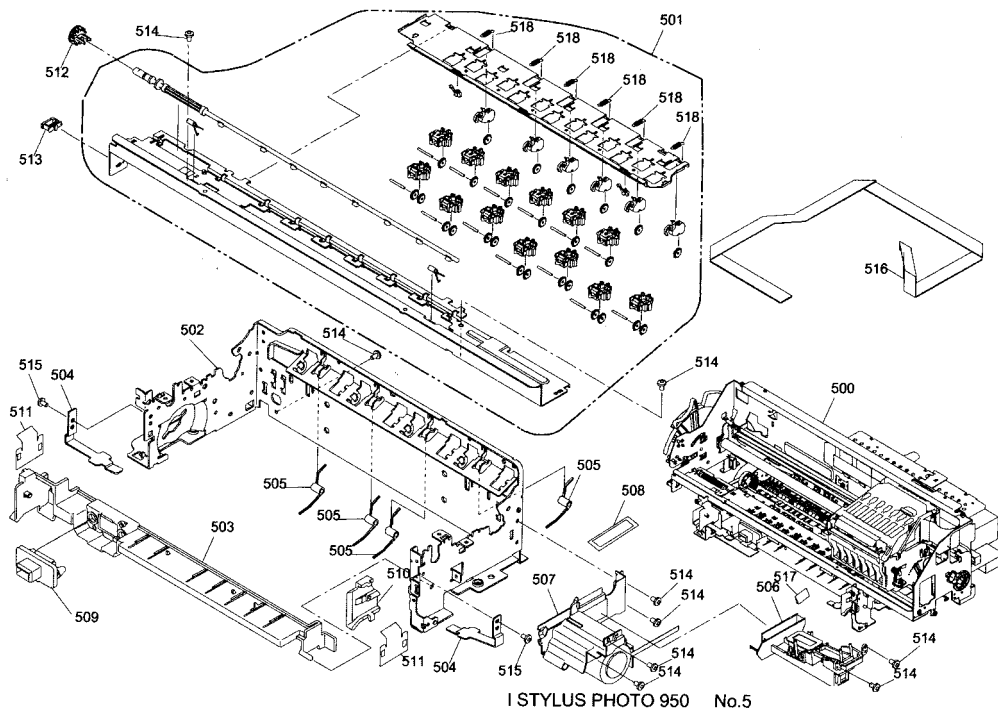


EPSON

STYLUS PHOTO 950

 Page No.:8

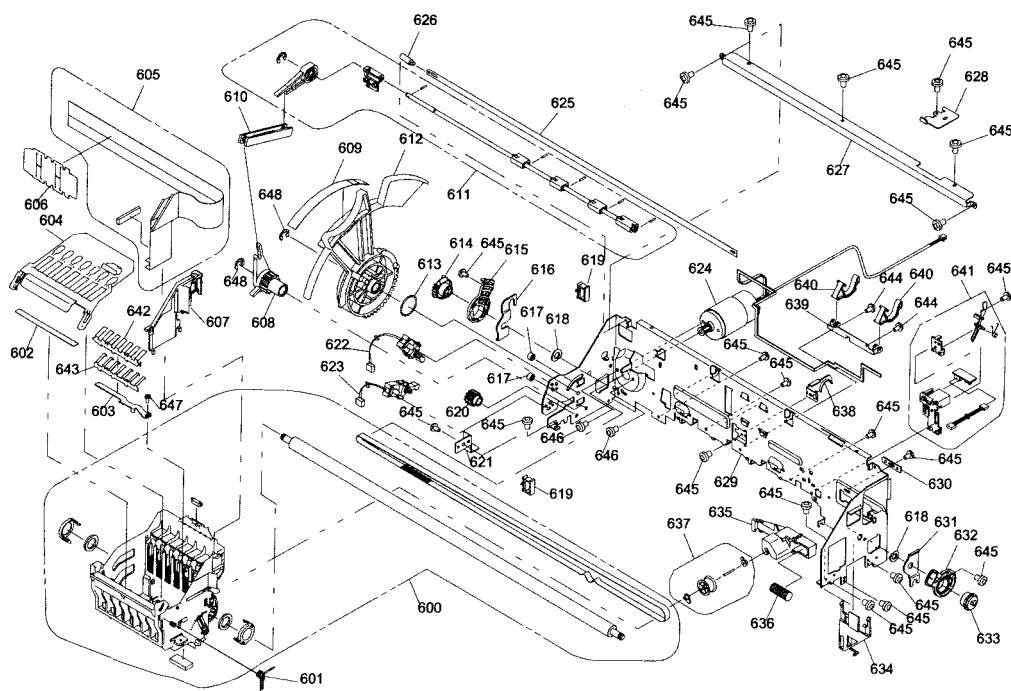

STYLUS PHOTO 950 No.7

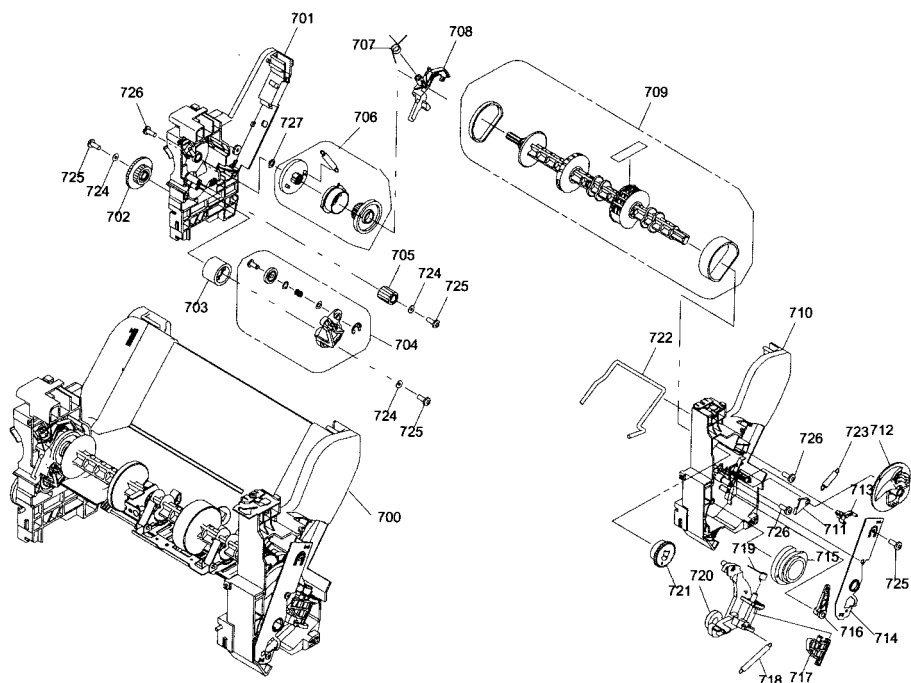 


STYLUS PHOTO 950 No.8


EPSON

STYLUS PHOTO 950

 Page No.:9

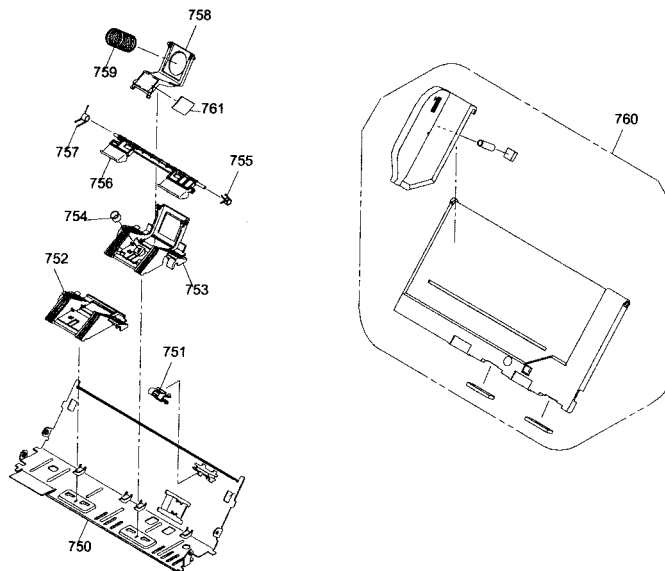

STYLUS PHOTO 950 No.9

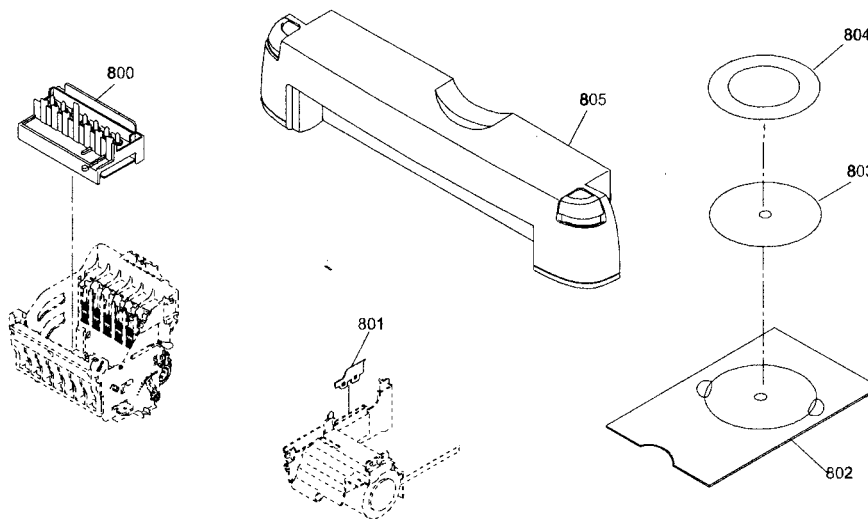 


STYLUS PHOTO 950 No.10

EPSON

STYLUS PHOTO 950

 Page No.:10

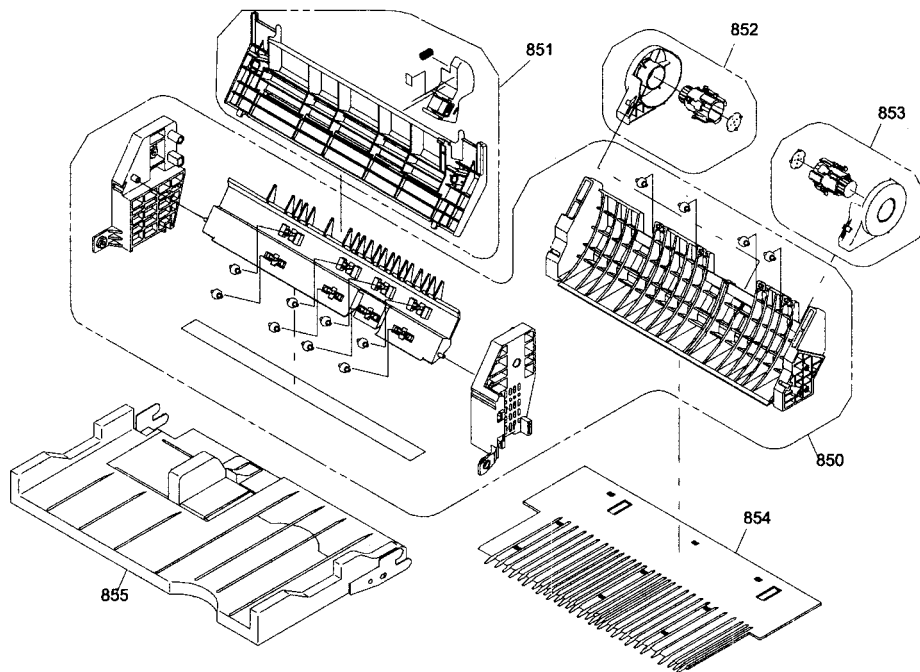

STYLUS PHOTO 950

No.11