

EPSON

STYLUS PHOTO 925

(Part numbers in brackets are the old numbers for otherwise identical items)

Page No.:1

REF	PART NO	DESCRIPTION	SPEC	QTY
100	1109498	HOUSING;B		1
101	1112505	PAPER,SUPPORT;	DARK GREY	1
102	1109500	HOUSING,COVER,RIGHT;B		1
103	1109502	HOUSING,COVER,LEFT;B		1
104	1154378	COVER,PRINTER ASSY.;B		1
105	1112506	COVER,ASF;EDG		1
106	1215827	COVER,CUTTER,LOWER;	DARK GREY	1
107	1154379	STACKER ASSY.;B		1
108	1154381	HOUSING,SUPPORT,LEFT,FRONT ASSY.;B		1
109	1154380	HOUSING,SUPPORT,RIGHT,FRONT ASSY.;B		1
110	1084897	COVER,SLOT		1
111	1109522	HOUSING,SUPPORT,LEFT,REAR;B		1
112	1217972	EDGE GUIDE ASSY.;D		1
113	1109517	HOUSING,SUPPORT,RIGHT,REAR;B		1
120	1024130	C.B.P-TITE SCREW,3X6,F/ZN		2
121	1004539	C.P.SCREW(B010103311)	M3X6	1
122	1073165	C.B.S. SCREW(B300204211)	M3X6	5
122	1073165	C.B.S. SCREW(B300204211)	M3X6	38
124	1070802	C.P.SCREW(B010102311)	M2.5X6	1
125	1005019	C.B.P-TITE SCREW,3X8,F/ZN	M3X8 F/ZN	7
125	1005019	C.B.P-TITE SCREW,3X8,F/ZN	M3X8 F/ZN	9
126	1073162	C.B.S. SCREW(B300200111)	M3X4	4
126	1073162	C.B.S. SCREW(B300200111)	M3X4	1
127	1109511	BUTTON,MOVE;B		1
128	1109504	BUTTON,PANEL;B		1
129	1109510	BUTTON,PRINT;B		1
130	1109507	BUTTON,CANCEL;B		1
131	1109505	BUTTON,PS;B		1
132	1109509	BUTTON,MEMORY;B		1
133	1084901	OPTICAL TUBE,PANEL		1
134	1112507	COVER,COLOUR, LCD;C		1
135	1109304	COVER,LCD;B		1
136	1084904	DOUBLE SIDED TAPE,3.5X34		2
137	1084903	DOUBLE SIDED TAPE,4.5X55		2
138	1047689	FOOT		5
139	1104787	SHEET,PRINT;B		1
140	1104790	SHEET,CANCEL;B		1
141	1108263	SHEET,CUSTOM;B		1
142	1108265	SHEET,SELECT;C		1
143	1108264	SHEET,BACK;C		1
144	1217968	ARM,STACKER,SUPPORT ASSY.;EDG		1
148	1091819	GROUNDING PLATE,CONN		1
149	1109508	BUTTON,SET;B		1
200	2077642	BOARD ASSY.,MAIN 5865J, (ROM MOUNTING)	SEE NOTE BELOW	1
300	2060487	BOARD ASSY.,POWER SUPPLY	5875A,STANDARD	1
330	2075677	HARNESS		1
400	2002364	POWER CABLE,(VD31303SA-10A)	230V	1
450	1156274	PANEL,LCD ASSY.;B		1
500	2071485	PRINTER MECHANISM(ASP)MA212-100		1
501	1114059	FRAME ASSY.,MAIN;B		1
502	1056427	COMBINATION GEAR,9.6,24		1
503	1056426	SPUR GEAR,36.8		1

EPSON

STYLUS PHOTO 925

(Part numbers in brackets are the old numbers for otherwise identical items)

Page No.:2

REF	PART NO	DESCRIPTION	SPEC	QTY
504	1056429	COMBINATION GEAR,37.6,44.4		1
505	1213009	PUMP ASSY.;C		1
506	1212966	CAP ASSY.;B		1
507	2069113	MOTOR ASSY.,CARRIAGE	21W,	1
508	2069116	MOTOR ASSY.,PAPER FEED	21W,	1
509	1061405	COMBINATION GEAR,14.4,38.4		1
510	1056423	LEVER,CHANGE		1
511	1080777	COMPRESSION SPRING,2.94;B		1
512	2055436	MOTOR ASSEMBLY,ASF	,	1
513	1030392	BUSHING,PARALLELISM ADJUST,LEFT		1
514	1050347	SHAFT,PULLEY,DRIVEN		1
515	1050346	BUSHING,PULLEY,DRIVEN		2
516	1090129	MOUNTING PLATE,CUTTER,R		1
517	1030957	COMPRESSION SPRING,5.85		1
518	1050345	PULLEY,DRIVEN		1
519	1091442	COMPRESSION SPRING,21.56;B		1
520	1048810	HOLDER,PULLEY,DRIVEN		1
521	1080979	COMBINATION GEAR,13.6,33		1
522	1082548	EXTENSION SPRING,1.45		1
523	1048921	SCALE,CR		1
524	1079298	BUSH,ROLLER,PF,LEFT;B		1
525	1037094	SPACER,FASTEN,ROLLER,PF		1
526	1058563	GROUNDING WIRE,PF		1
527	1031164	C-RING		2
528	1108251	SLEEVE,ROLLER,PF		1
529	1080982	ROLLER,PF		1
530	1038159	PLAIN WASHER,12.2X0.5X17		2
531	1056416	SHAFT,CARRIAGE,GUIDE		1
532	1048928	SPUR GEAR,76		1
533	1048913	TAPE,D50		1
534	1032301	SCALLOP SPRING PIN-AW,2X16,F/B		1
536	1048923	SCALE,PAPER FEED		1
537	1214725	BUSHING,ROLLER,PF,RIGHT		1
539	1052671	TORSION SPRING,52.92		4
540	1090057	PAPER GUIDE ASSY.,LEFT		1
541	1090056	PAPER GUIDE ASSY.,UPPER		3
542	1215021	POROUS PAD,PAPER GUIDE,FRONT		1
543	1214729	PAPER GUIDE,FRONT		1
544	1090050	ROLLER EJECT ASSY.,		1
545	1214730	FRAME,FRONT;B		1
547	1090055	STAR WHEEL ASSY.,.FRONT		7
548	1090054	STAR WHEEL ASSY.,.REAR		7
549	1091337	SPUR GEAR,19.2		1
550	1090105	SHAFT,SPUR GEAR,CONNECT		1
551	1091338	SPUR GEAR,13.6		1
552	1030971	PLAIN WASHER,4.1X0.5X6.5		3
553	1090047	CARRIAGE ASSY.,		1
554	1073162	C.B.S. SCREW(B300200111)	M3X4	3
554	1073162	C.B.S. SCREW(B300200111)	M3X4	2
555	1073165	C.B.S. SCREW(B300204211)	M3X6	8
555	1073165	C.B.S. SCREW(B300204211)	M3X6	2
556	1004527	C.P.SCREW(B010109511)	M3X4	2

EPSON

STYLUS PHOTO 925

(Part numbers in brackets are the old numbers for otherwise identical items)

Page No.:3

REF	PART NO	DESCRIPTION	SPEC	QTY
557	1030393	BUSHING,PARALLELISM ADJUST,RIGHT		1
558	1056415	TIMING BELT		1
559	1030395	LEVER,PAPER GUIDE,SUPPORT		1
560	1076289	LEAF SPRING(B101254590)	6.2X0.15X11	1
561	1032240	TORSION SPRING,63.7		1
562	1091224	MOUNTING PLATE ASSY.,CUTTER,LEFT		1
564	1112089	PIPE,INK		1
565	1056444	BUSHING,5		1
566	1090137	GUIDE,TUBE		1
567	1032300	C.B.S-TITE(P4),3X6,F/ZN		2
568	1090106	COMBINATION GEAR,47,19.2		1
591	1090136	TRAY,IS		1
592	1091275	POROUS PAD,INK EJECT,CAP,LOWER		1
593	1104891	POROUS PAD,INK EJECT,CAP,UPPER		1
596	1230873	SUPPORT PLATE POROUS PAD		
700	F095001	PRINT HEAD	288	1
701	1090139	MOUNTING PLATE,ENCODER,PAPER FEED		1
702	2055067	BOARD ASSY.,ENCODER	,	1
703	2060534	FCC,ENCODER		1
704	1080991	GROUNDING PLATE,FFC,HEAD		1
705	1043627	C.B.P-TITE,2.5X5,F/ZN		1
706	1090052	ASF ASSY.,		1
707	1090937	GROUNDING PLATE,P/B,UPPER		1
708	1090935	CLEANER,HEAD,ASP		1
709	1084896	SHIELD PLATE,P/B,UPPER		1
710	1084895	SHIELD PLATE,M/B,UPPER		1
711	1056408	COVER,SHIELD PLATE		1
712	1084894	SHIELD PLATE,M/B		1
713	1084898	GROUNDING PLATE,P/B		1
714	1104419	COMPRESSION SPRING,3.91		1
715	1108015	COVER,FFC;B		1
716	1075955	ROLLER,LD;B		1
717	1052673	EXTENSION SPRING,0.143		1
718	1090051	HOLDER SHAFT ASSY.,		1
719	1091334	GROUNDING PLATE,SLOT		1
721	1039368	SPUR GEAR,23.2		1
722	1084883	GROUNDING PLATE,LCD		1
723	1005019	C.B.P-TITE SCREW,3X8,F/ZN	M3X8 F/ZN	2
724	1217148	CUTTER ASSY.;EDG		1
725	1073165	C.B.S. SCREW(B300204211)	M3X6	4
725	1073165	C.B.S. SCREW(B300204211)	M3X6	3
726	1109534	LEVER,PAPER GUIDE;B		1
727	1091222	COVER,HARNESS		1
728	1156275	CABLE,HEAD;B		1
729	1032300	C.B.S-TITE(P4),3X6,F/ZN		1
730	1084900	TRAY,POROUS PAD		1
731	1091942	POROUS PAD,INK EJECT,LOWER;D		1
732	1091943	POROUS PAD,INK EJECT,MIDDLE;D		2
733	1091763	POROUS PAD,INK EJECT;D		1
734	1090138	PAPER GUIDE,LOWER		1
735	1112590	SPACER,ASF		1
736	1113292	SHEET,PROTECTION,INK		1

EPSON

STYLUS PHOTO 925

(Part numbers in brackets are the old numbers for otherwise identical items)

Page No.:4

REF	PART NO	DESCRIPTION	SPEC	QTY
738	1082919	COVER,CARTRIDGE,BLACK;D		1
739	1057624	COVER,CARTRIDGE,COLOUR;B		1
740	1059196	PLATE SPRING,COVER,CARTRIDGE		4
741	1023043	+.BIND B-TITE SEMS W2,2.5X5,F/ZB		1
800	1059609	MOUNTING PLATE		
801	1058169	FRAME ROLL PAPER LEFT		
802	1058170	FRAME ROLL PAPER RIGHT		
803	1058171	PLUG ROLL PAPER		
804	NOT USED			
805	1113613	STACKER,A4 ROLL		1
806	1075149	LOCKING WASHER		
807	1113868	FRAME,ROLL PAPER,LEFT;E ASSY		1
808	1113869	FRAME,ROLL PAPER,RIGHT;E ASSY		1
N/A	1081992	INK CARTRIDGE,BLACK,,AS		1
N/A	1081994	INK CARTRIDGE,COLOUR,,AS		1
N/A	1081989	CART. SET,BLACK,ASS'Y,WITH IC MODULE		1
N/A	1081990	CART. SET,COLOUR,ASS'Y,WITH IC MODULE		1
END				

NOTE: REFER TO "TECHEXCHANGE" FOR INFORMATION ABOUT
ORDERING
IC'S

(Part numbers in brackets are the old numbers for otherwise identical items)

This exploded view diagram illustrates the assembly of a portable electronic device, likely a portable television or monitor. The components are numbered as follows:

- 101:** A semi-circular protective cover or lens.
- 102:** The main rear housing or chassis.
- 103:** A curved internal frame or support structure.
- 104:** A large, flat rectangular panel, possibly a screen or back cover.
- 105:** A long, narrow component, likely a power supply or battery pack, shown in a separate assembly view.
- 106:** A small rectangular component, possibly a connector or switch.
- 107:** A base plate or mounting bracket.
- 112:** A small circular component, possibly a speaker or microphone.
- 114:** A small rectangular component, possibly a connector or switch.
- 122:** Multiple screws used for assembly.
- 125:** Multiple screws used for assembly.
- 127:** A small circular component, possibly a speaker or microphone.
- 128:** A small circular component, possibly a speaker or microphone.
- 129:** A small circular component, possibly a speaker or microphone.
- 130:** A small circular component, possibly a speaker or microphone.
- 131:** A small circular component, possibly a speaker or microphone.
- 132:** A small circular component, possibly a speaker or microphone.
- 133:** A small circular component, possibly a speaker or microphone.
- 134:** A small rectangular component, possibly a connector or switch.
- 135:** A small rectangular component, possibly a connector or switch.
- 136:** A small rectangular component, possibly a connector or switch.
- 137:** A small rectangular component, possibly a connector or switch.
- 140:** A small circular component, possibly a speaker or microphone.
- 141:** A small rectangular component, possibly a connector or switch.
- 142:** A small rectangular component, possibly a connector or switch.
- 143:** A small rectangular component, possibly a connector or switch.
- 144:** A small rectangular component, possibly a connector or switch.
- 149:** A small circular component, possibly a speaker or microphone.
- 181:** A small rectangular component, possibly a connector or switch.

[illegible]


STYLUS PHOTO 925 No.2

EPSON


STYLUS PHOTO 925

(Part numbers in brackets are the old numbers for otherwise identical items)

Page No.:6

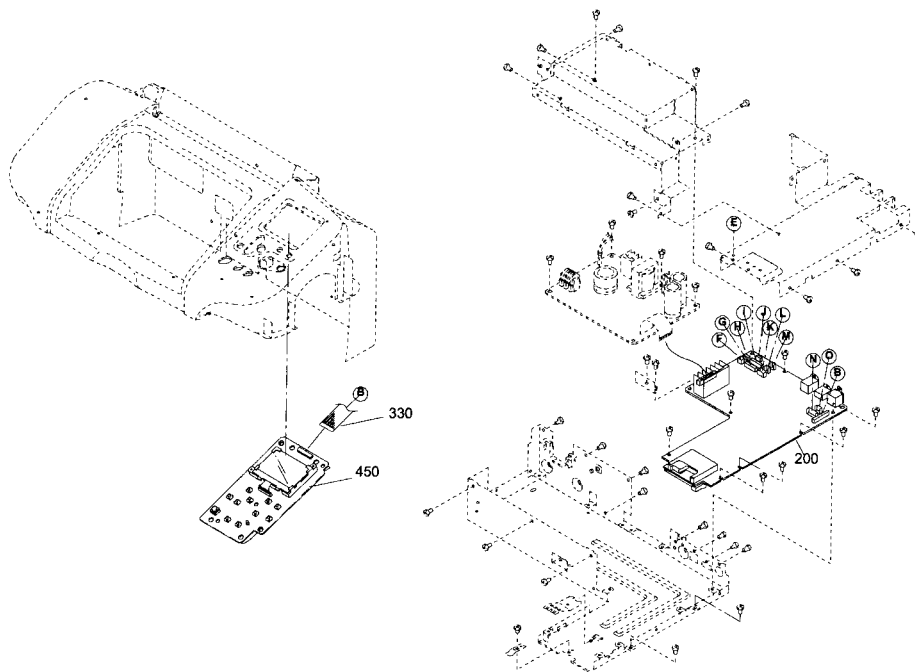

STYLUS PHOTO 925 No.3

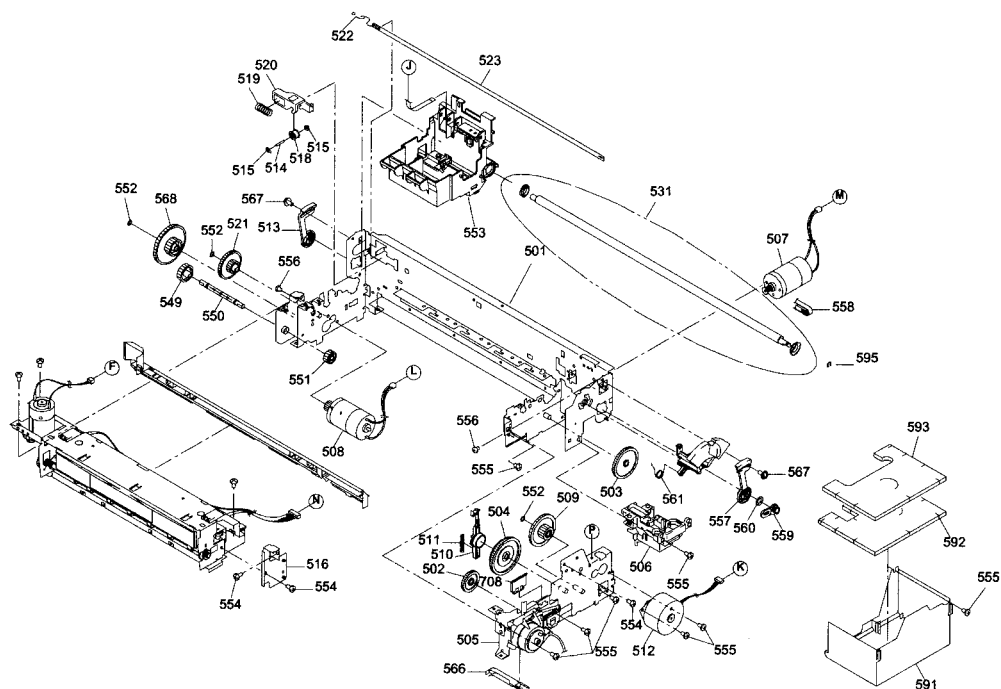

STYLUS PHOTO 925 No.4

(Part numbers in brackets are the old numbers for otherwise identical items)

This diagram shows an exploded view of a mechanical assembly. The main component is a long, rectangular housing (500) with a complex internal mechanism. Various parts are shown in their relative positions, with callout numbers indicating specific components:

- 500: Main housing/assembly
- 536, 533, 532, 527, 525, 530, 528, 527, 526, 517, 530, 534, 529, 537: Components of the top assembly, including a large circular part (536) and a long rod (529).
- 543, 542, 544, 565, 596: Components of the middle assembly, including a long rod (544) and a bracket (542).
- 554, 562, 555, 545, 540, 541, 539, 555, 541, 541, 548, 547, 548, 564: Components of the bottom assembly, including a long rod (545) and various mounting brackets and fasteners.


STYLUS PHOTO 925 No.6

EPSON


STYLUS PHOTO 925

(Part numbers in brackets are the old numbers for otherwise identical items)

Page No.:8

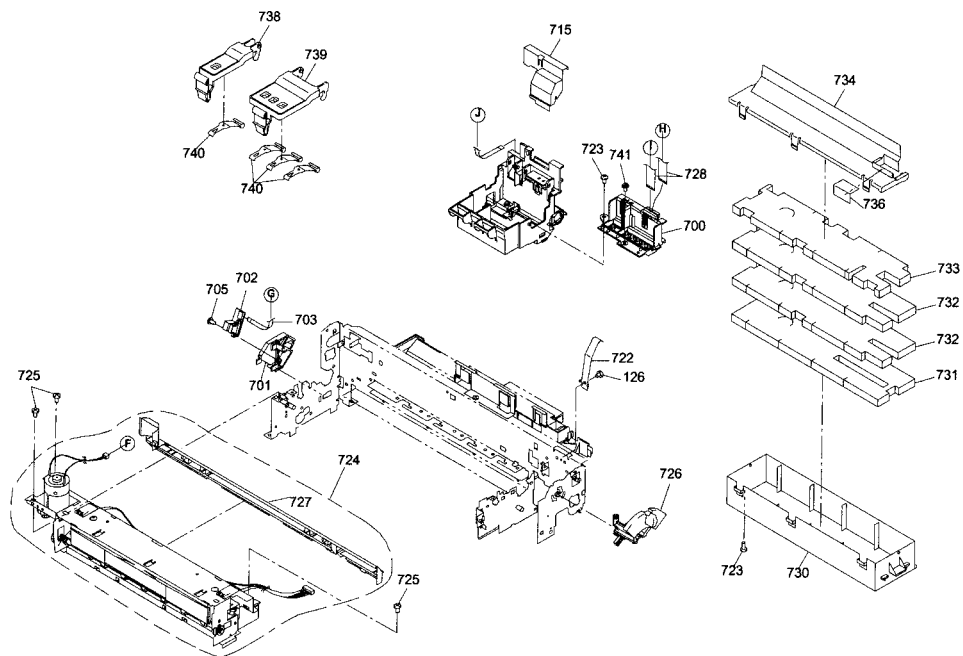

STYLUS PHOTO 925 No.7

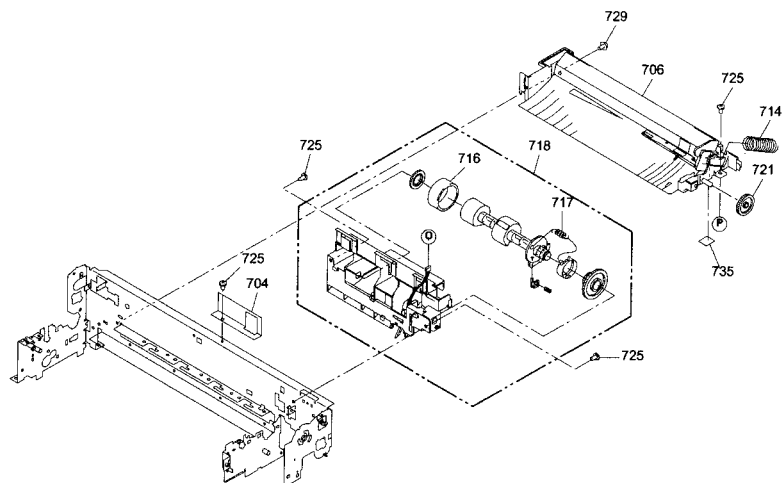


STYLUS PHOTO 925 No.8

EPSON


STYLUS PHOTO 925

(Part numbers in brackets are the old numbers for otherwise identical items)

Page No.:9

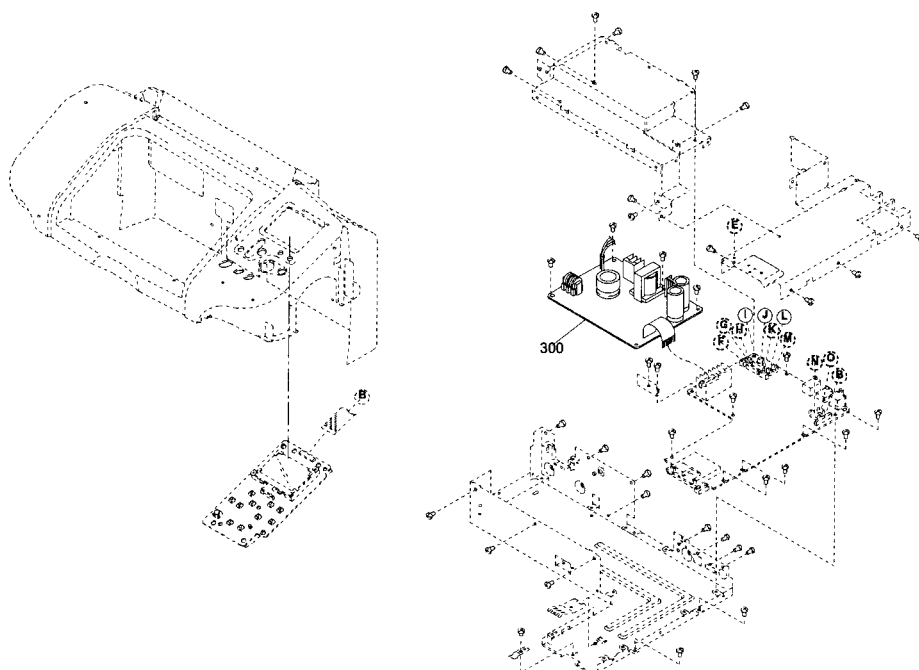

STYLUS PHOTO 925 No. 9

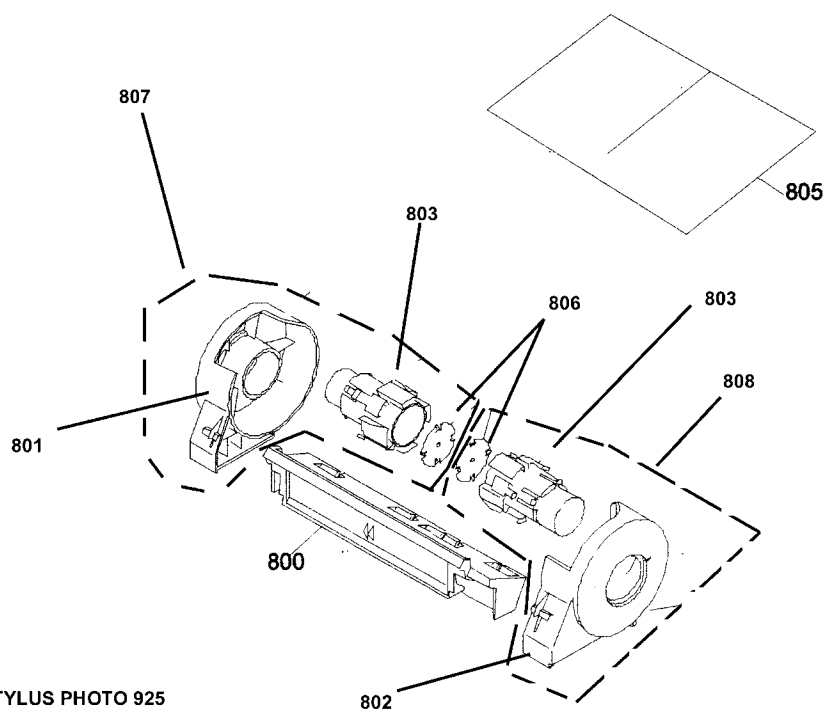

STYLUS PHOTO 925
FIG. 10