

EPSON

ACULASER C4000

Page No.:1

REF	PART NO	DESCRIPTION	SPEC	QTY
01-1-01	2056714	CONTROL PANEL	802K3651X	1
01-1-02	2071848	COVER ASSY FRONT HEAD	802K3632X	1
01-1-03	1110076	COVER FRONT HEAD	802E3361X	1
01-1-09	2071852	FAN FUSER	127E8289X	1
01-1-10	1110078	CVR TOP STOPPER	802E3369X	1
01-1-11	1110079	COVER TOP	802E3368X	1
01-1-12	1110080	COVER ASSY TOP MAIN	802K3636X	1
01-1-19	1110082	LATCH TOP RIGHT	3E5323X	1
01-1-23	1110083	LATCH TOP LEFT	3E5322X	1
01-1-28	1110084	COVER REAR	802E3370X	1
01-1-50	1110077	KIT COVER ASSY TOP	802K3637X	1
01-1-52	1110081	KIT COVER ASSY TOP PHD	604K546X	1
01-2-01	1110085	COVER SIDE LEFT	802E3365X	1
01-2-02	1110086	COVER SIDE RIGHT	802K4283X	1
01-2-04	1110087	SPRING LINK	890E2857X	2
01-2-05	1110088	LINK	12E1005X	2
01-2-06	1110089	COVER ASSY FRONT	802K3631X	1
01-2-10	1110090	COVER ASSY FRONT IN	802K3633X	1
01-2-12	1110092	TRAY ASSY MSI	50K4698X	1
01-2-19	1110093	TRAY ASSY LOW	50K4699X	1
02-1-08	1110097	STRAP	3E5339X	1
03-1-05	1110098	CHUTE RETARD	54E2036X	1
03-1-06	1110099	ROLL ASSY	59K1825X	1
03-2-01	1110100	GUIDE END	32E1810X	1
03-2-07	1110101	SPRING N/F	890E3008X	2
03-2-21	1110103	ACTUATOR SIZE	120E2067X	3
04-1-01	1110105	COVER FDR FRONT	802E3386X	1
04-1-03	1110106	COVER CASSETTE REAR	802E3387X	1
04-1-04	1110107	BLOCK	14E4212X	3
04-1-06	1110108	CHUTE ASSY TURN	54K1800X	1
04-2-01	1110109	HOUSING FDR L	802E3384X	1
04-2-02	1110110	HOUSING FDR R	802E3385X	1
04-2-03	2071858	HARNESS ASSY TMPA	162K6965X	1
04-2-04	2061097	ENVIRONMENT SENSOR	130K6153X	1
04-2-05	1053982	FOOT	17E9208X	4
04-2-06	1110111	STOPPER CST	3E5690X	1
04-2-08	1110112	SWITCH SIZE TRAY 1	110K1124X	1
04-2-09	2071859	HARNESS ASSY OPFREC	162K6970X	1
04-2-10	1110113	LEVER LOW PAPER	11E1068X	1
04-2-11	1110115	INDICATOR	123E214X	1
04-3-01	2071887	PICK UP ASSY	1K7373X	1
04-3-03	1110119	ROLL ASSY FEED	59K1824X	2
04-3-04	2026720	EXIT SENSOR		2
04-3-05	1110120	ACTUATOR NO PAPER	120E1864X	1
04-3-06	1021488	ACTUATOR LINK		1
04-3-17	2071888	SOLENOID FEED TRAY 1	121E8770X	1

EPSON

ACULASER C4000

Page No.:2

REF	PART NO	DESCRIPTION	SPEC	QTY
04-3-18	1110121	CLUTCH ASSY TURN TRAY 1	5K601X	1
04-3-21	1110122	ROLL ASSY TURN	59K1826X	1
04-3-25	1110099	ROLL ASSY	59K1825X	1
04-3-28	2071860	HARNESS ASSY FEEDER	162K6969X	1
05-1-01	2072698	HOUSING ASSY RETARD	802K2484X	1
05-1-02	1111860	ROLL TURN	59K1994X	1
05-1-05	1111861	ROLL ASSY RETARD	59K1995X	1
05-1-09	2072699	CLUTCH TURN MSI	121E8771X	1
06-1-01	2072701	CHUTE ASSY IN	84K573X	1
06-1-02	2072702	WIRE ASSY BTR 2	117K3457X	1
06-1-05	2072703	WIRE ASSY DTSK	117K3456X	1
06-1-09	2072704	HARNESS ASSY FSR 2	962K809X	1
06-1-10	2072706	HARNESS ASSY CTD	162K6962X	1
06-1-11	2072707	SENSOR ASSY ADC	19K9790X	1
06-1-13	2028242	WASTE TONER SENSOR		1
06-1-14	2072708	HARNESS ASSY TFLSNS	162K6983X	1
06-1-18	2072709	DRIVE ASSY FUSER	7K8669X	1
06-1-20	2072710	WIRE ASSY FOR EARTH	117K3458X	1
06-1-21	1111862	LATCH RIGHT	3E5736X	1
06-1-30	1111863	LATCH LEFT	3E5338X	1
06-1-50	1111864	KIT ROLL PINCH TURN	604K547X	2
06-1-51	1111865	KIT ROLL PINCH DUP	604K548X	2
07-1-01	2072711	CHUTE ASSY OUT	84K574X	1
07-1-02	2071861	HARNESS ASSY FRONT 2	162K6959X	1
07-1-03	2071862	HARNESS ASSY	962K637X	1
07-1-04	2021773	E.R.M. SENSOR		3
07-1-05	1111867	ACTUATOR FULL STACK	120E1874X	1
07-1-12	1111866	ROLL DUP	59E9575X	1
07-1-13	1111868	ACTUATOR DUP	120E1875X	1
07-1-23	2072712	HARNESS ASSY DUP	162K6960X	1
07-1-27	1111869	ROLL ASSY FEED	59K1996X	1
07-1-37	1111870	ACTUATOR MSI	120E1873X	1
07-1-40	1111871	SOLENOID FEED MSI	121E8825X	1
07-1-43	2072713	WIRE ASSY DUP EARTH	962K436X	1
07-1-50	1111873	KIT ROLL PINCH EXIT	604K549X	2
07-1-51	1111874	KIT ROLL PINCH	604K550X	2
08-1-01	1111875	CHUTE ASSY EXIT	54K1810X	1
08-1-04	1111876	ROLL EXIT	59E9643X	1
08-1-05	1111877	ROLL MID	59E9577X	1
08-1-08	2072714	MOTOR ASSY DUP	127K3171X	1
09-1-01	2072792	FUSER ASSY	84K577X	1
10-1-01	2072788	CHUTE ASSY REG	54K2053X	1
10-1-12	2072790	CLUTCH REG.	121E8824X	1
10-1-20	2021773	E.R.M. SENSOR		1
10-1-21	1112416	ACTUATOR REGI	120E2068X	1
10-1-23	1112417	HOUSING ASSY	802K2483X	1

EPSON

ACULASER C4000

Page No.:3

REF	PART NO	DESCRIPTION	SPEC	QTY
10-1-30	2071863	KIT SENSOR OHP	604K252X	1
11-1-01	2072791	ROS ASSY	62K1086X	1
11-1-04	1112434	HSG ASSY BIAS	802K2482X	1
11-1-05	1112438	STUD PLUNGER	26E7767X	8
11-1-50	1112431	KIT HSG ASSY BIAS	604K551X	1
12-1-06	2071864	HARNESS ASSY TNR	162K6967X	1
12-1-08	2071865	PWB EEPROM	160K8320X	1
12-1-09	2071866	HVPS SUB	105K1952X	1
12-2-01	2072815	HOLDER TONER ASSY (Y)	84K595X	1
12-2-02	2072818	HOLDER TONER ASSY (M)	84K596X	1
12-2-03	2072819	HOLDER TONER ASSY (C)	84K597X	1
12-2-04	2072820	HOLDER TONER ASSY (K)	84K598X	1
12-2-09	2072816	SENSOR TONER LOW	130E8520X	4
12-2-10	1112443	SWITCH TCRU ASSY	110K1125X	4
12-3-01	2072821	PLATE ASSY DISPENSER	15K5536X	1
12-3-08	2071867	HARNESS ASSY DRUM	162K6968X	1
12-3-13	1112451	RACK V	7E7519X	1
12-3-14	1112452	GEAR SLIDE	7E6611X	1
12-3-15	1112453	RACK H	7E6609X	1
13-1-02	1112454	BRACKET LEVER	830E9825X	2
13-1-04	1112455	LEVER DRUM	11E1073X	8
13-1-05	1112456	SPRING LEVER 30N	809E2843X	8
13-1-08	1112457	ACTUATOR I/L	120E1868X	1
13-1-10	1112459	GEAR IDLER PRESS	7E6581X	2
13-1-11	1112460	GEAR ASSY PR R	7K8725X	1
13-1-14	1112461	FILM REG.	35E5813X	1
13-1-17	2071868	PWBA ASSY EARTH	160K7078X	1
13-1-18	1112462	GEAR ASSY PR L	7K8726X	1
13-1-20	1112463	CHASSIS MAIN	101E1569X	1
14-1-01	2072825	DRIVE ASSY MAIN	7K8753X	1
14-1-02	2072824	DRIVE ASSY DEV.	7K8752X	1
15-1-02	2071869	PWBA ASSY MCU&LVPS	160K8645X	1
15-1-03	2071870	FAN REAR	127E8290X	1
15-1-05	2071871	CLAMP GUIDE HARNESS	19E4901X	8
15-1-09	2037314	POWER CORD	673K6981X	1
15-1-10	2071872	LVPS	105K1950X	1
15-1-11	2071874	HARNESS ASSY AC SW	162K6958X	1
15-1-15	2071875	PWBA DRIVER	160K7836X	1
15-2-01	2071876	HARNESS ASSY LVNC	162K6971X	1
15-2-02	2071877	HARNESS ASSY DRV 1	162K6972X	1
15-2-03	2071878	HARNESS ASSY DRV 2	162K6973X	1
15-2-04	2071879	HARNESS ASSY LVRPG	162K6974X	1
15-2-05	2071880	HARNESS ASSY ROS	162K6975X	1
15-2-06	2071881	HARNESS ASSY 24V	162K6976X	1
15-2-07	2071882	HARNESS ASSY FRONT 1	162K6977X	1
15-2-08	2071883	HARNESS ASSY OPF MAIN	162K6978X	1

EPSON

ACULASER C4000

 
Page No.:4

[illegible]

EPSON

ACULASER C4000

Page No.:5

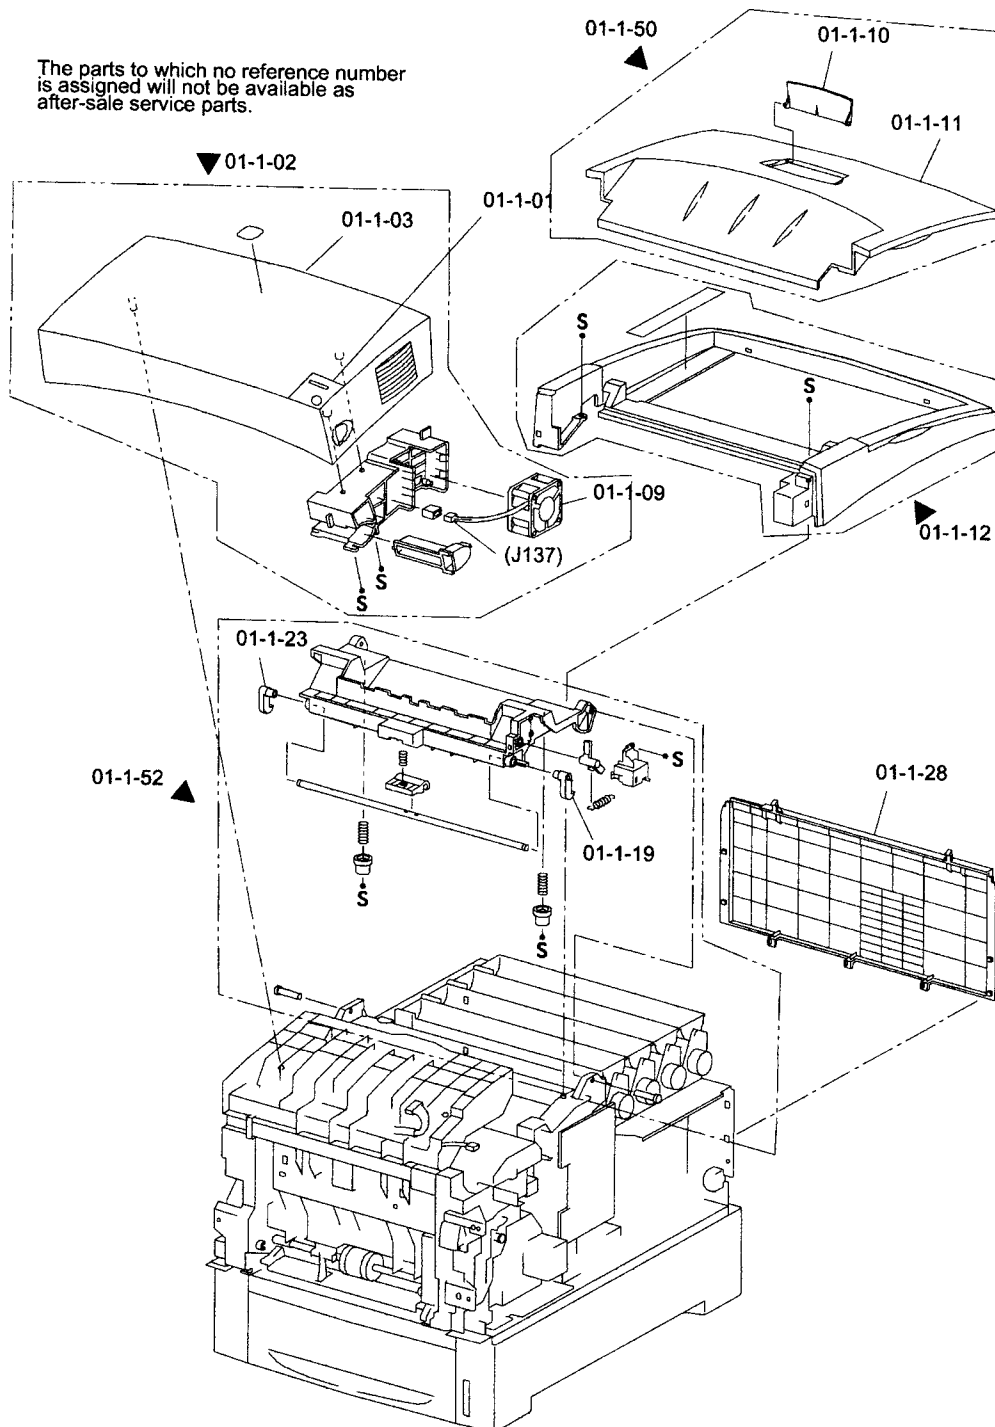


AcuLaserC4000 (1.1)

EPSON

ACULASER C4000

Page No.:6

 The parts to which no reference numb
is assigned will not be available as
after-sale service parts.

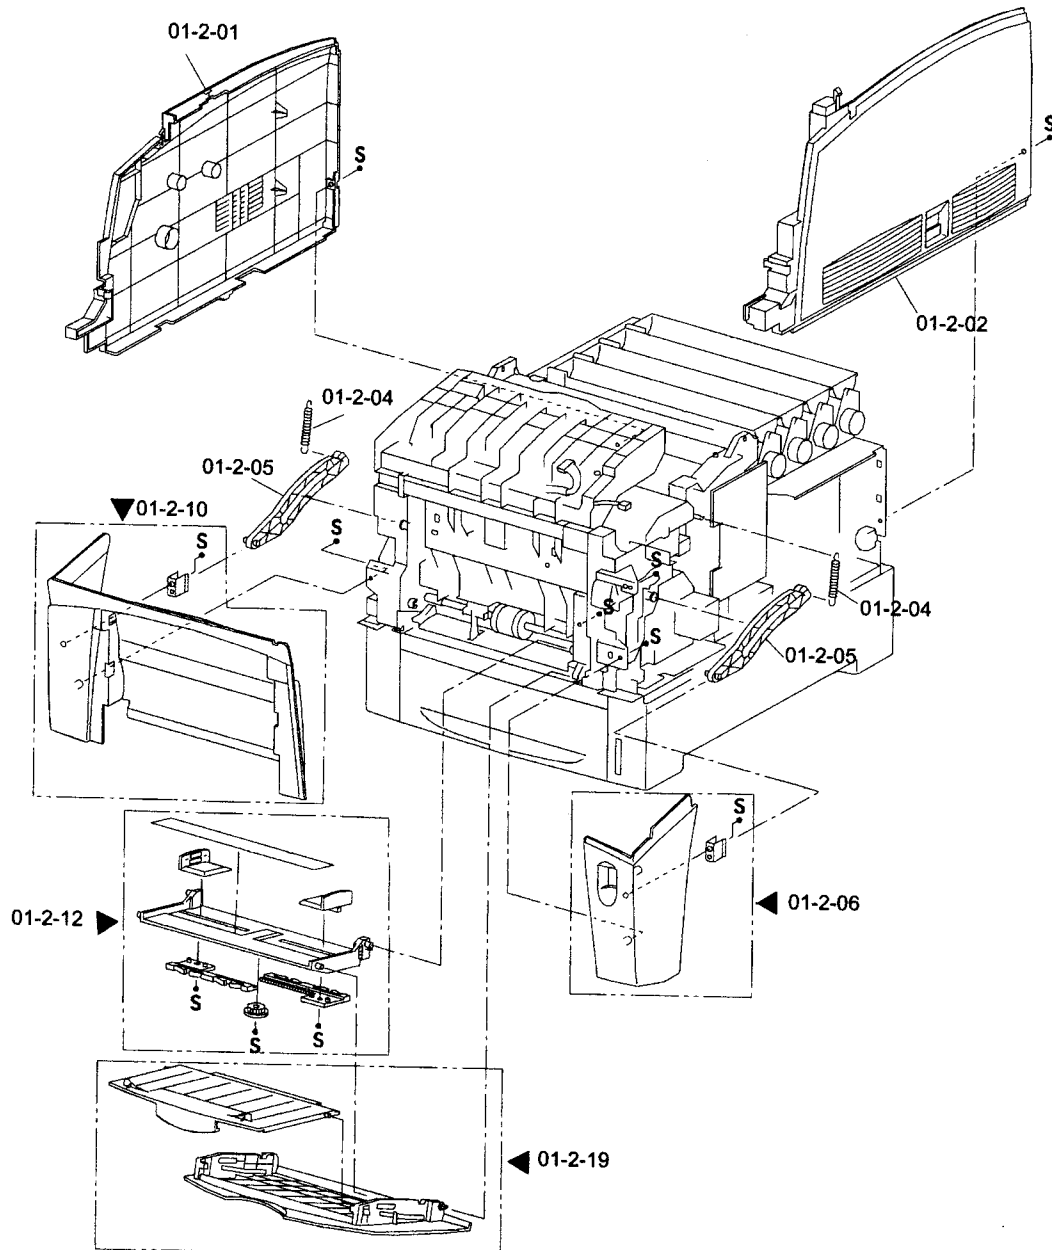


AcuLaser C4000 (1.2)

EPSON

ACULASER C4000

Page No.:7

 The parts to which no reference number is assigned will not be available as after-sale service parts.

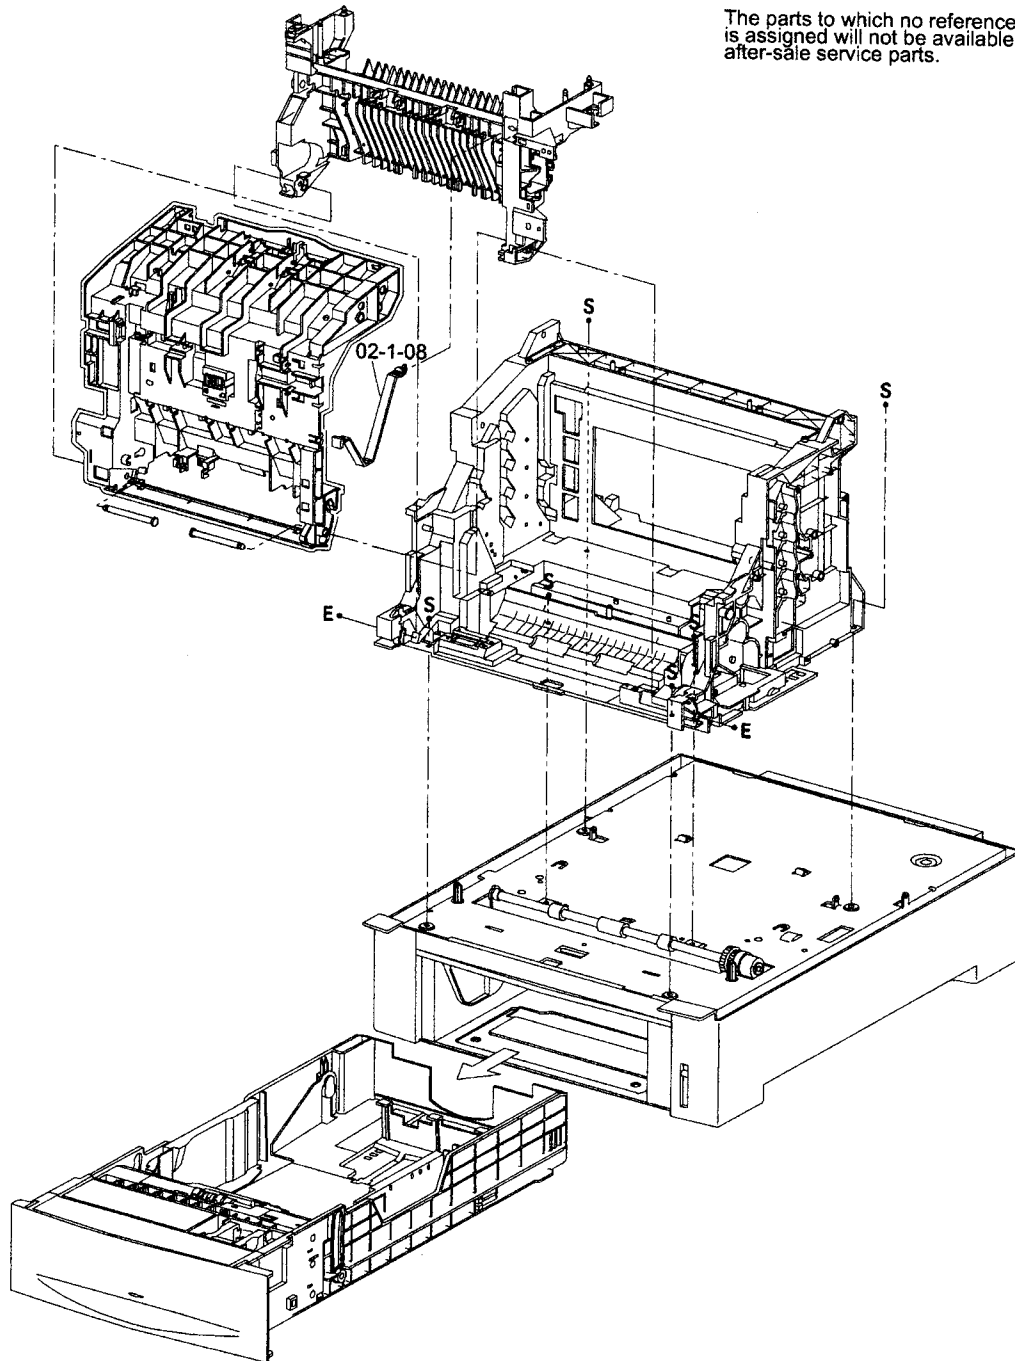


AcuLaserC4000 (2.1)

EPSON

ACULASER C4000

Page No.:8

 The parts to which no reference number is assigned will not be available as after-sale service parts.

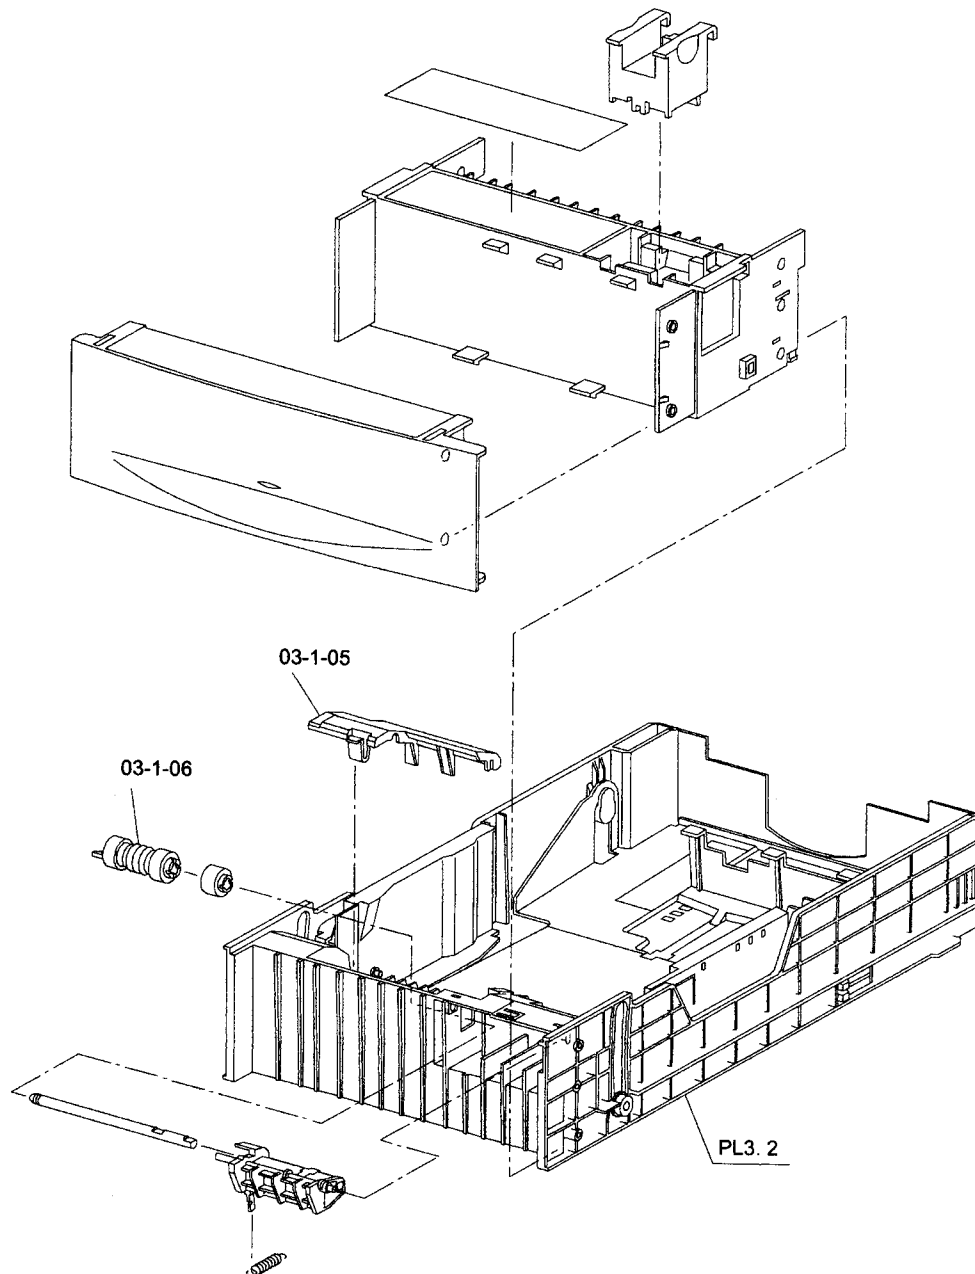


AcuLaserC4000 (3.1)

EPSON

ACULASER C4000

 Page No.:9

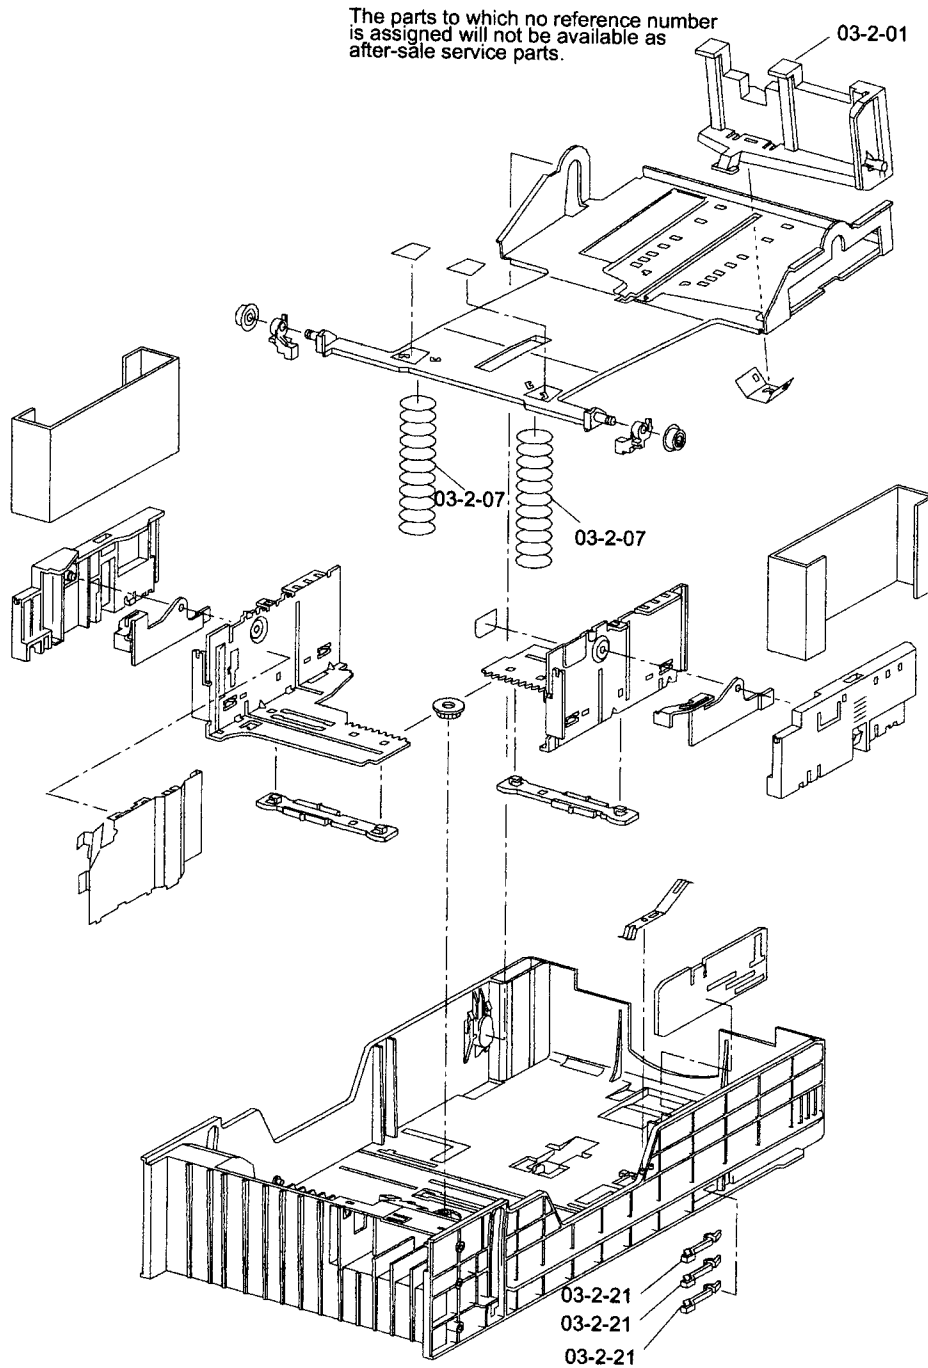


AcuLaserC4000 (3.2)

EPSON

ACULASER C4000

Page No.:10

 The parts to which no reference number is assigned will not be available as after-sale service parts.

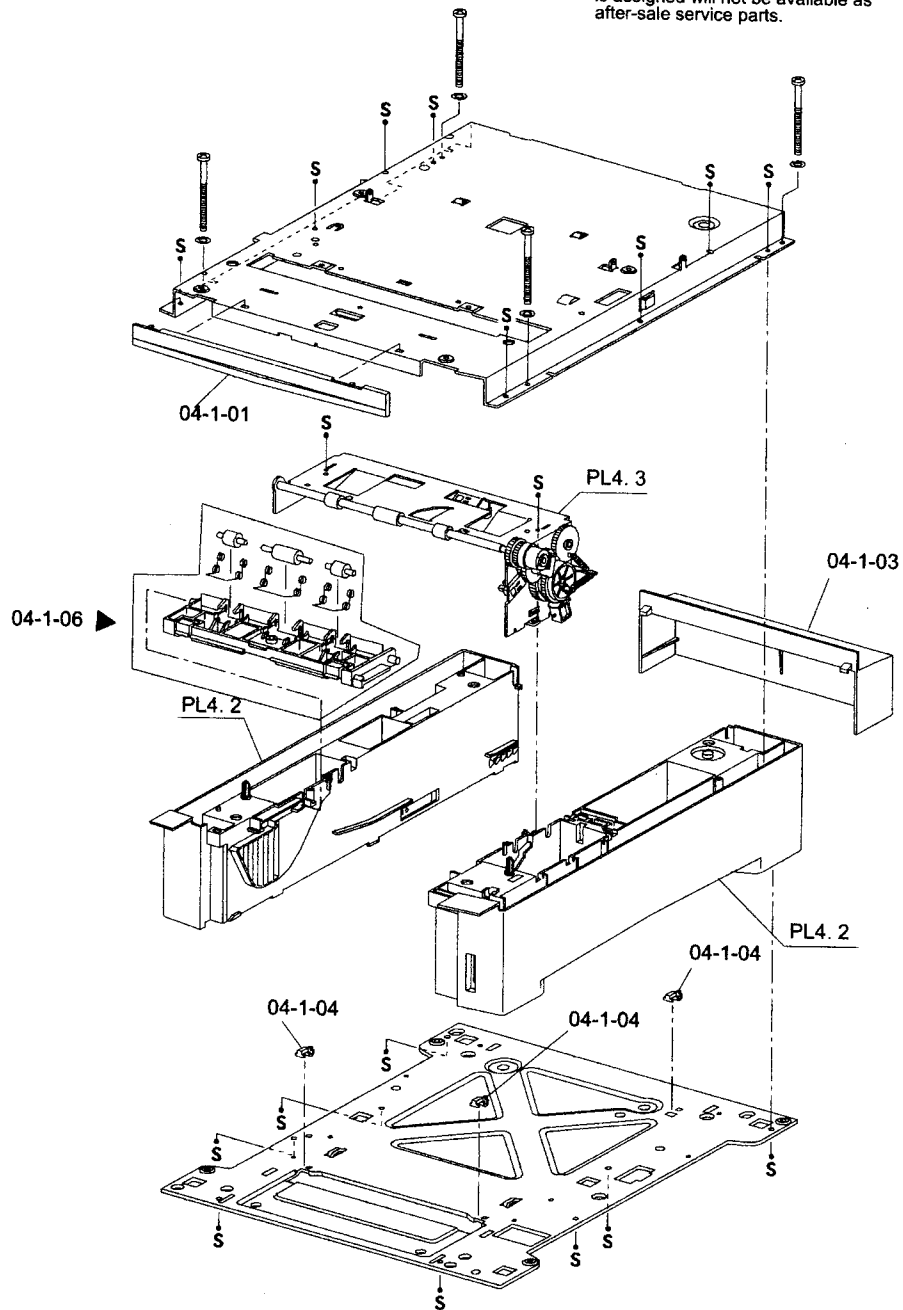


AcuLaserC4000 (4.1)

EPSON

ACULASER C4000

Page No.:11

 The parts to which no reference number is assigned will not be available as after-sale service parts.

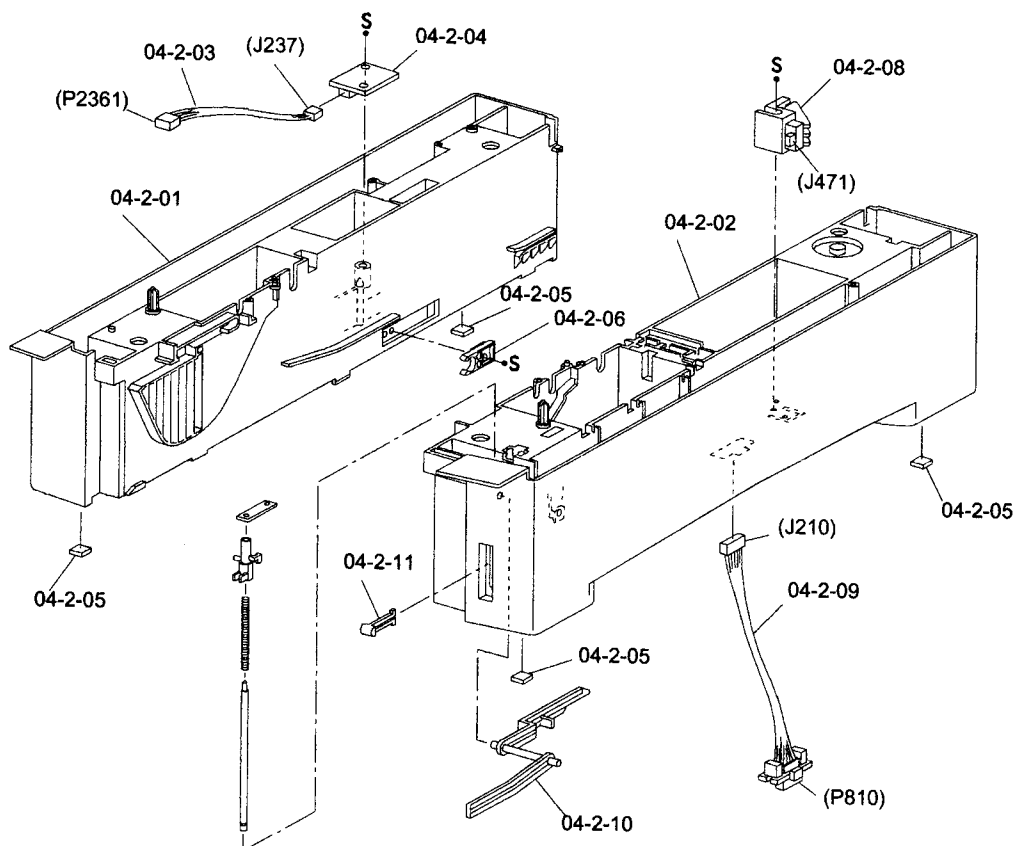


AcuLaserC4000 (4.2)

EPSON

ACULASER C4000

Page No.:12

 The parts to which no reference number is assigned will not be available as after-sale service parts.

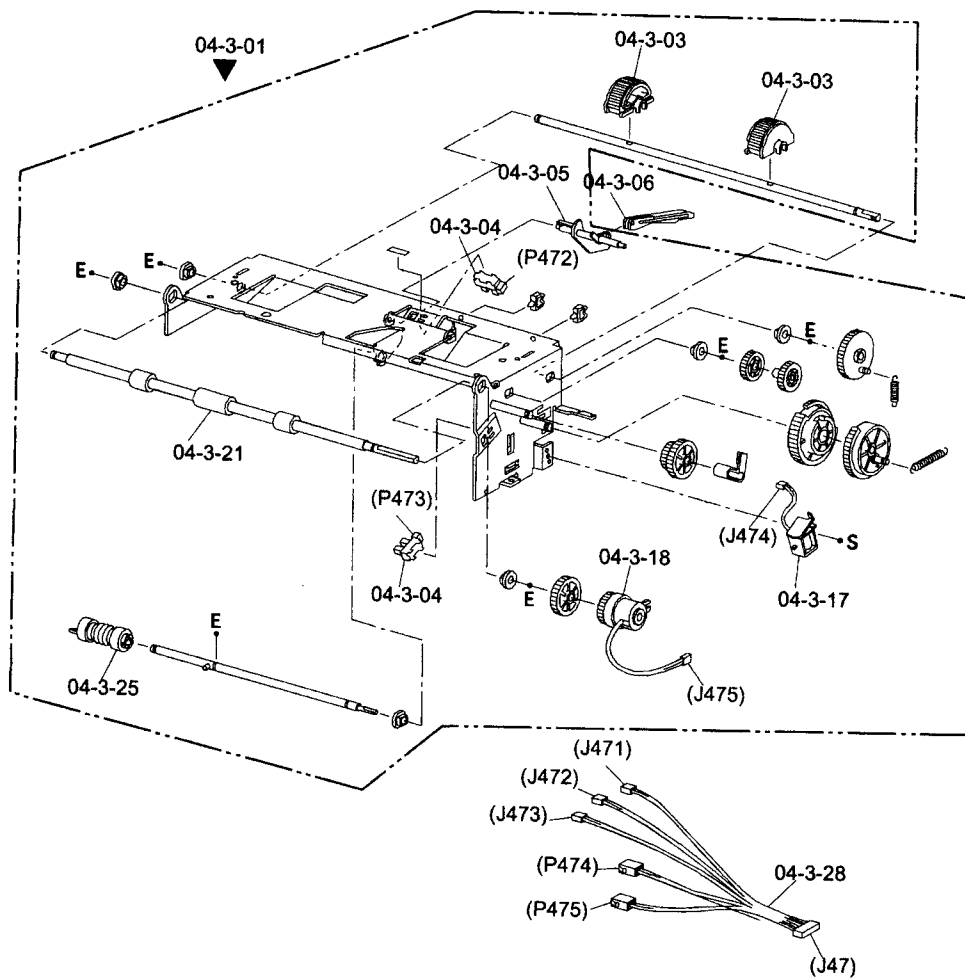


AcuLaserC4000 (4.3)

EPSON

ACULASER C4000

Page No.:13

 
The parts to which no reference number is assigned will not be available as after-sale service parts.

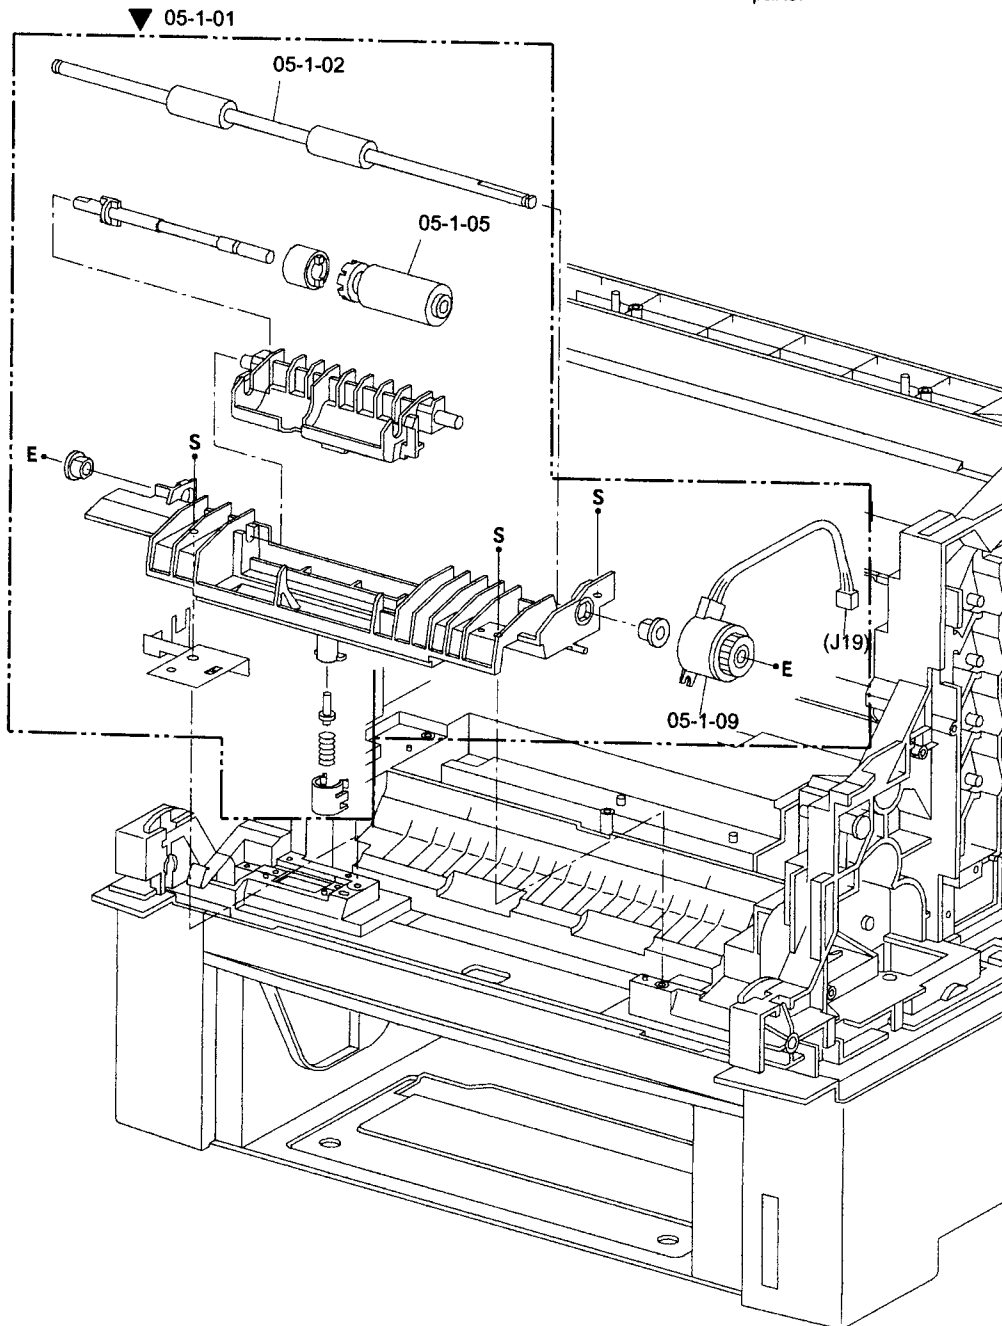

AcuLaserC4000 (5.1)

EPSON
ACULASER C4000

 Page No.:14

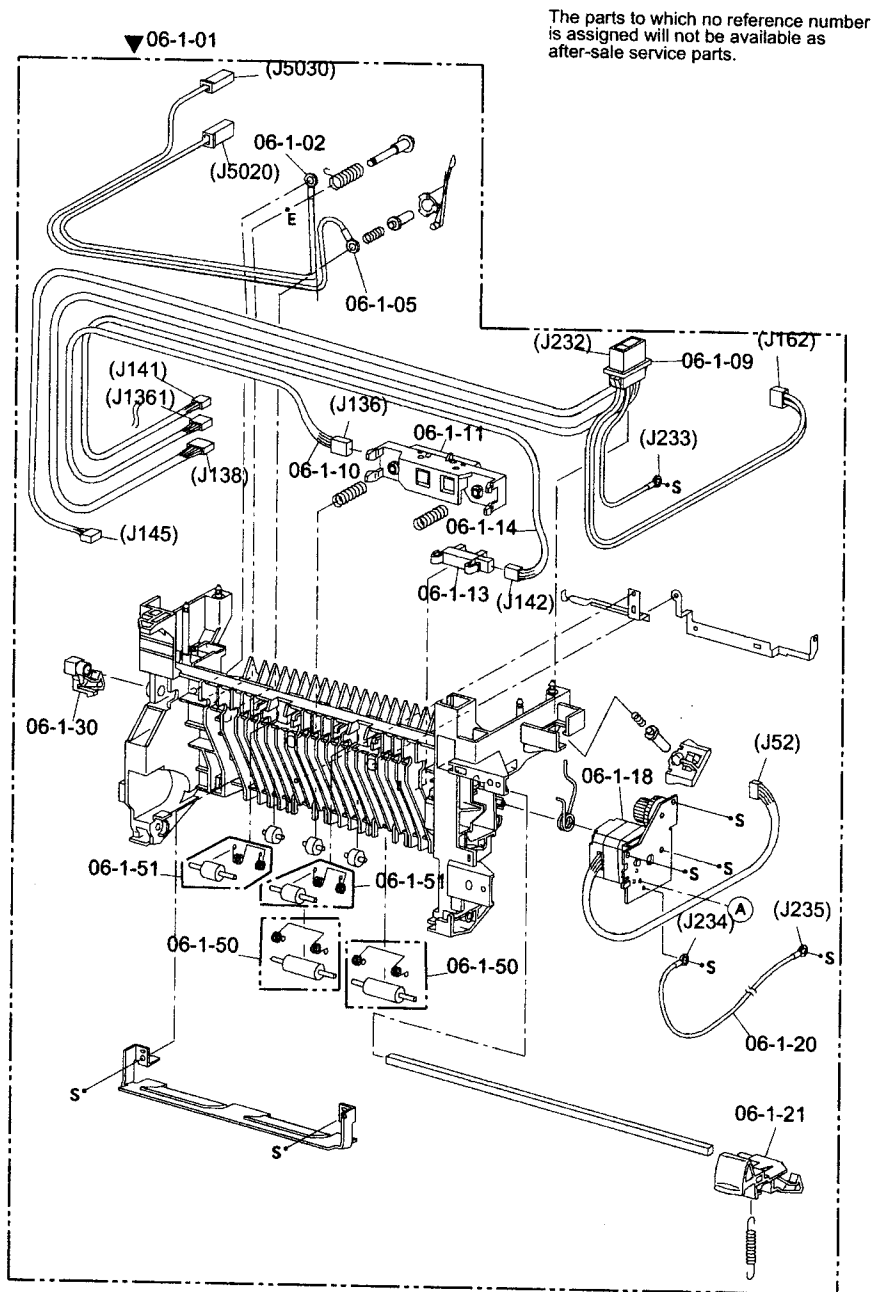

AcuLaserC4000 (6.1)

EPSON


ACULASER C4000

Page No.:15

ACULASER C4000

FIG. 7

 The parts to which no reference number is assigned will not be available as after-sale service parts.

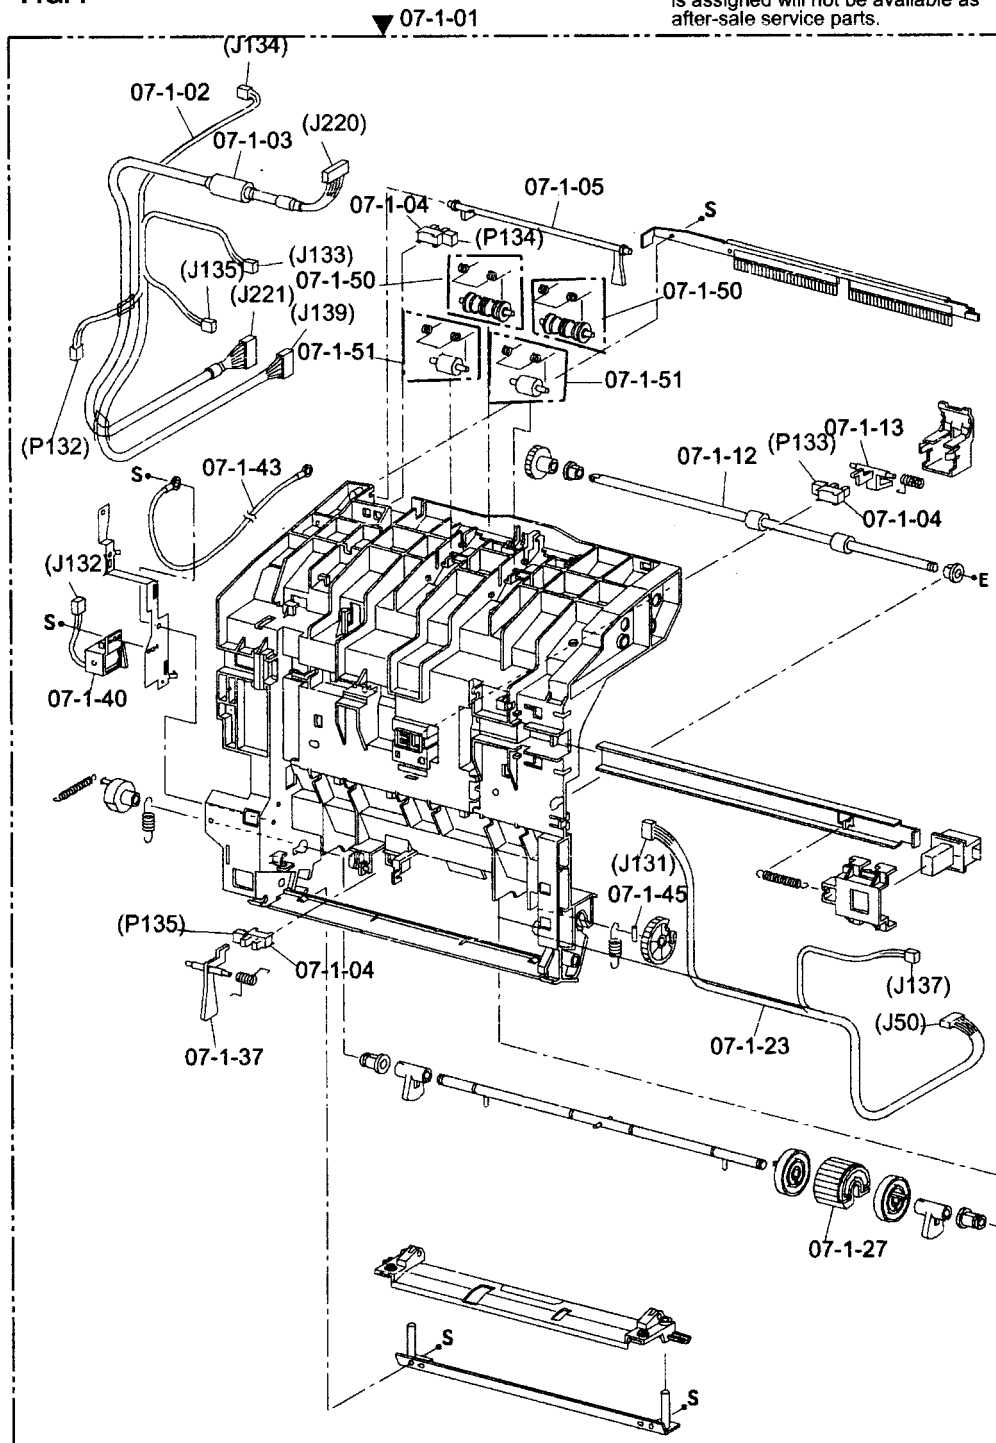


EPSON

ACULASER C4000

Page No.:16

 The parts to which no reference number is assigned will not be available as after-sale service parts.

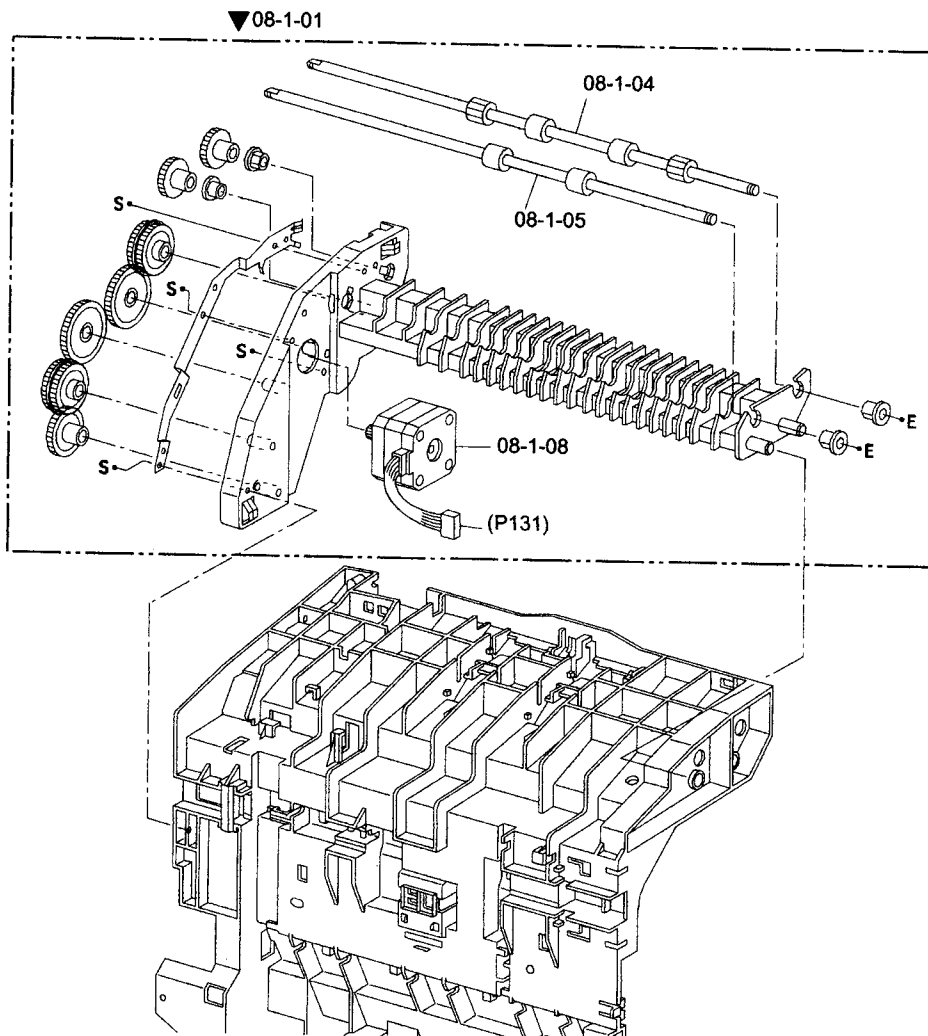


AcuLaserC4000 (8.1)

EPSON

ACULASER C4000

Page No.:17

 The parts to which no reference number is assigned will not be available as after-sale service parts.

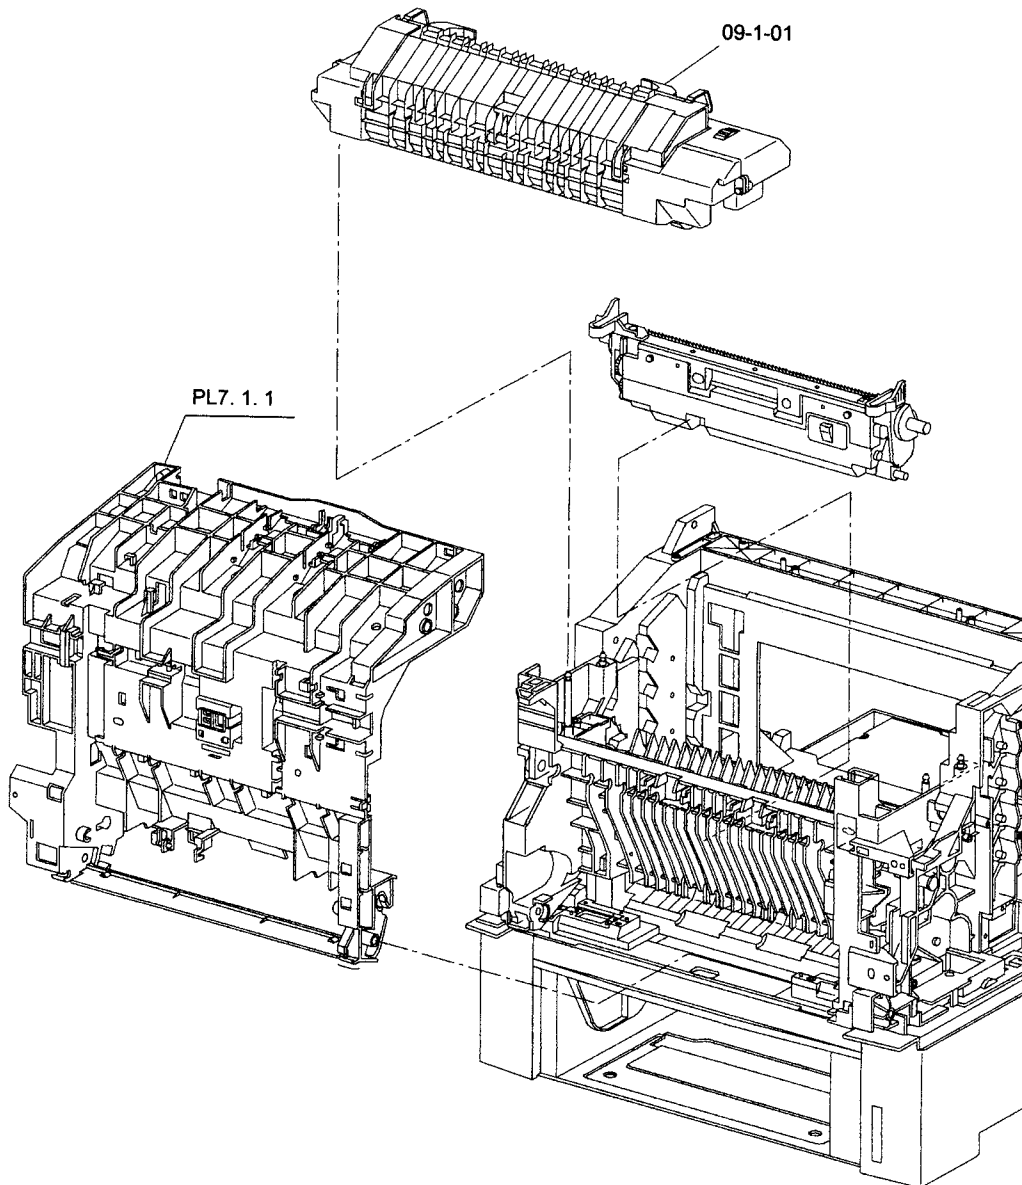


AcuLaserC4000 (9.1)

EPSON

ACULASER C4000

 Page No.:18

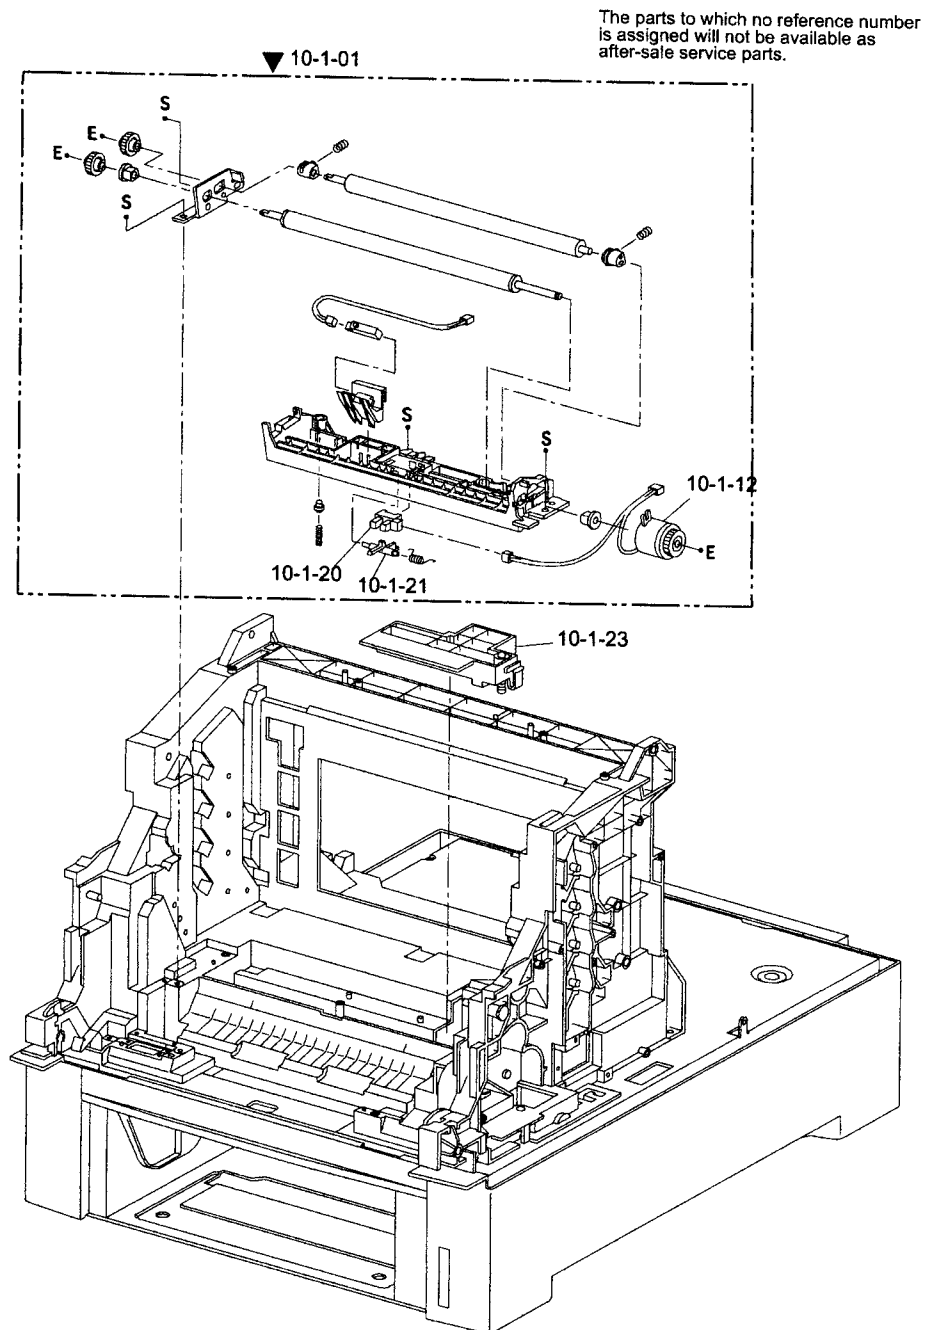


AcuLaserC4000 (10.1)

EPSON

ACULASER C4000

Page No.:19

 The parts to which no reference number is assigned will not be available as after-sale service parts.

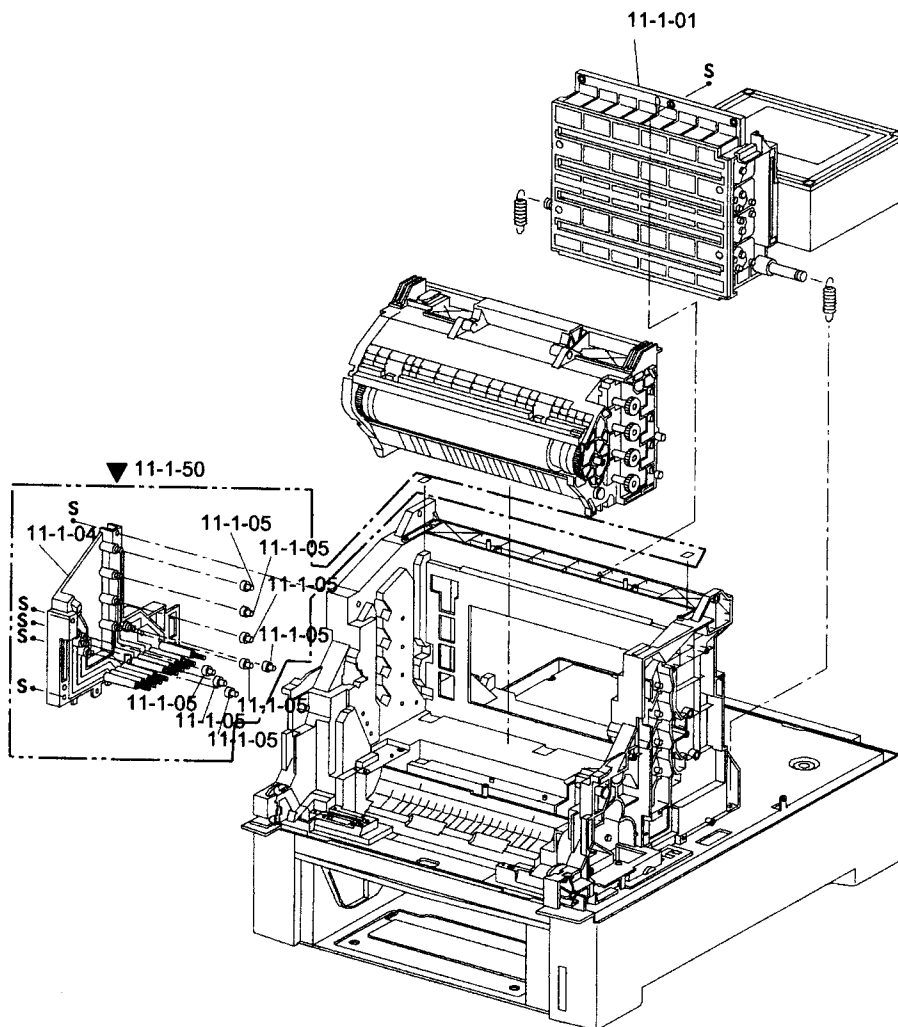


AcuLaserC4000 (11.1)

EPSON

ACULASER C4000

Page No.:20

 The parts to which no reference number is assigned will not be available as after-sale service parts.

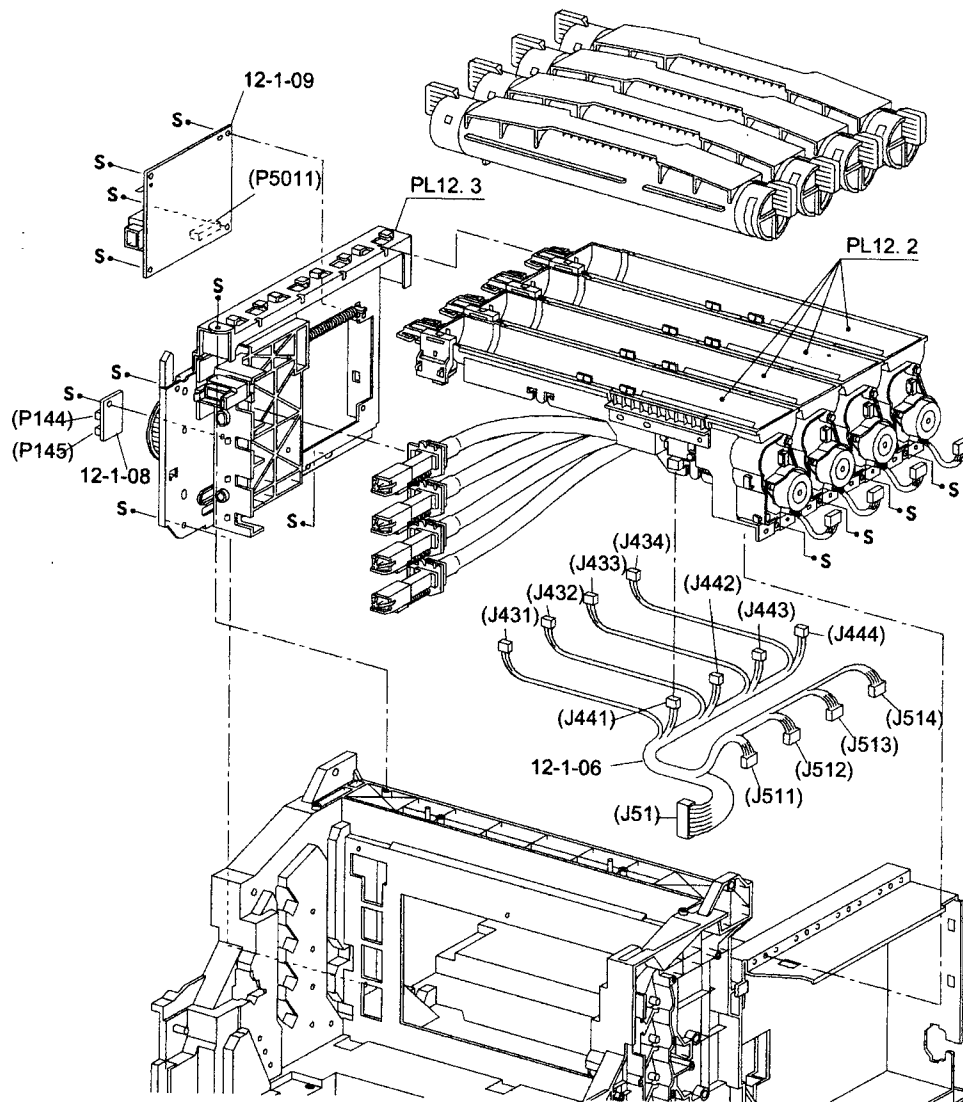


AcuLaserC4000 (12.1)

EPSON

ACULASER C4000

Page No.:21

 The parts to which no reference number is assigned will not be available as after-sale service parts.

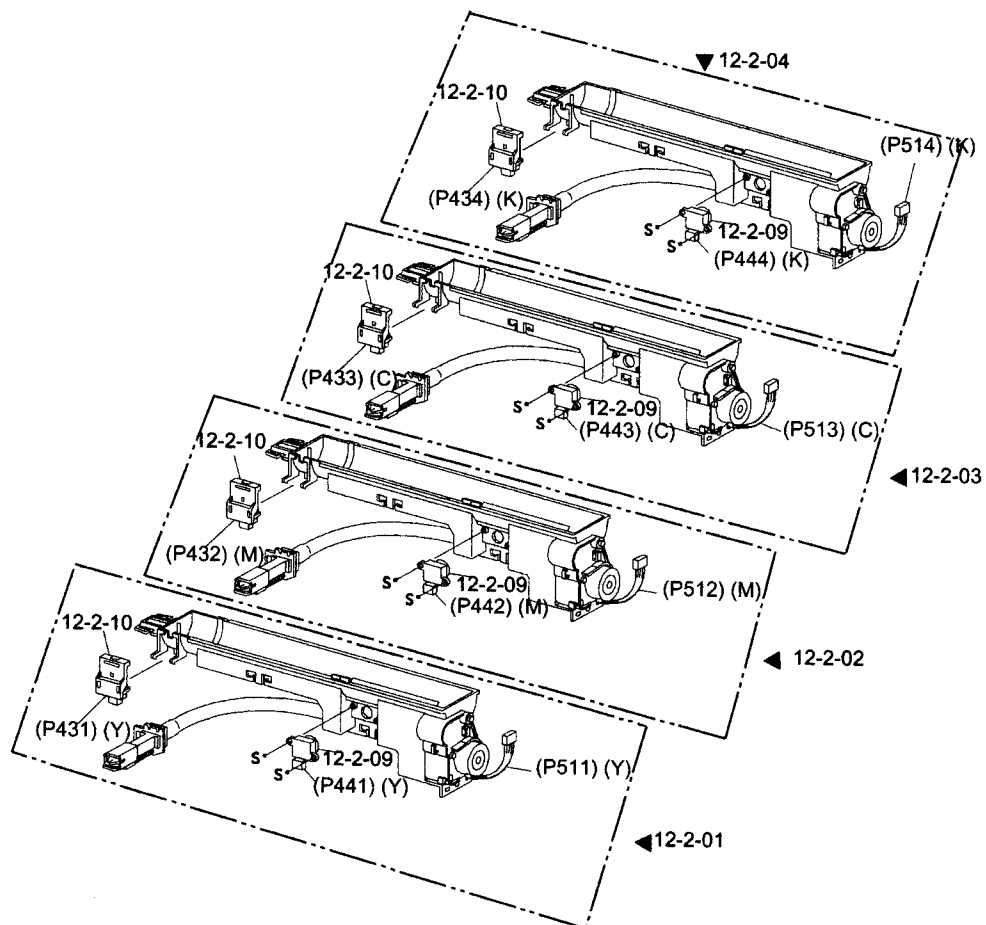

AcuLaserC4000 (12.2)

 
EPSON

ACULASER C4000

Page No.:22

The parts to which no reference number is assigned will not be available as after-sale service parts.

▼12-3-01

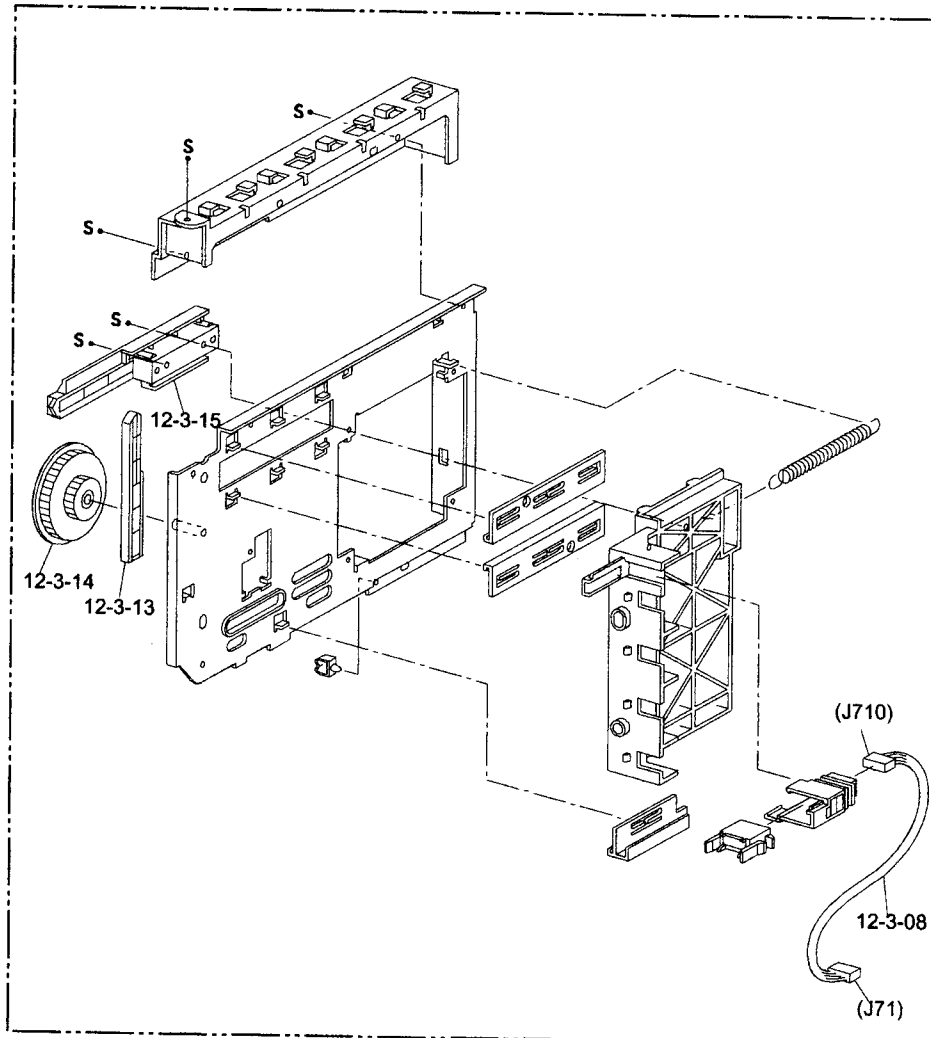


AcuLaserC4000 (12.3)

EPSON

ACULASER C4000

Page No.:23

 The parts to which no reference number is assigned will not be available as after-sale service parts.

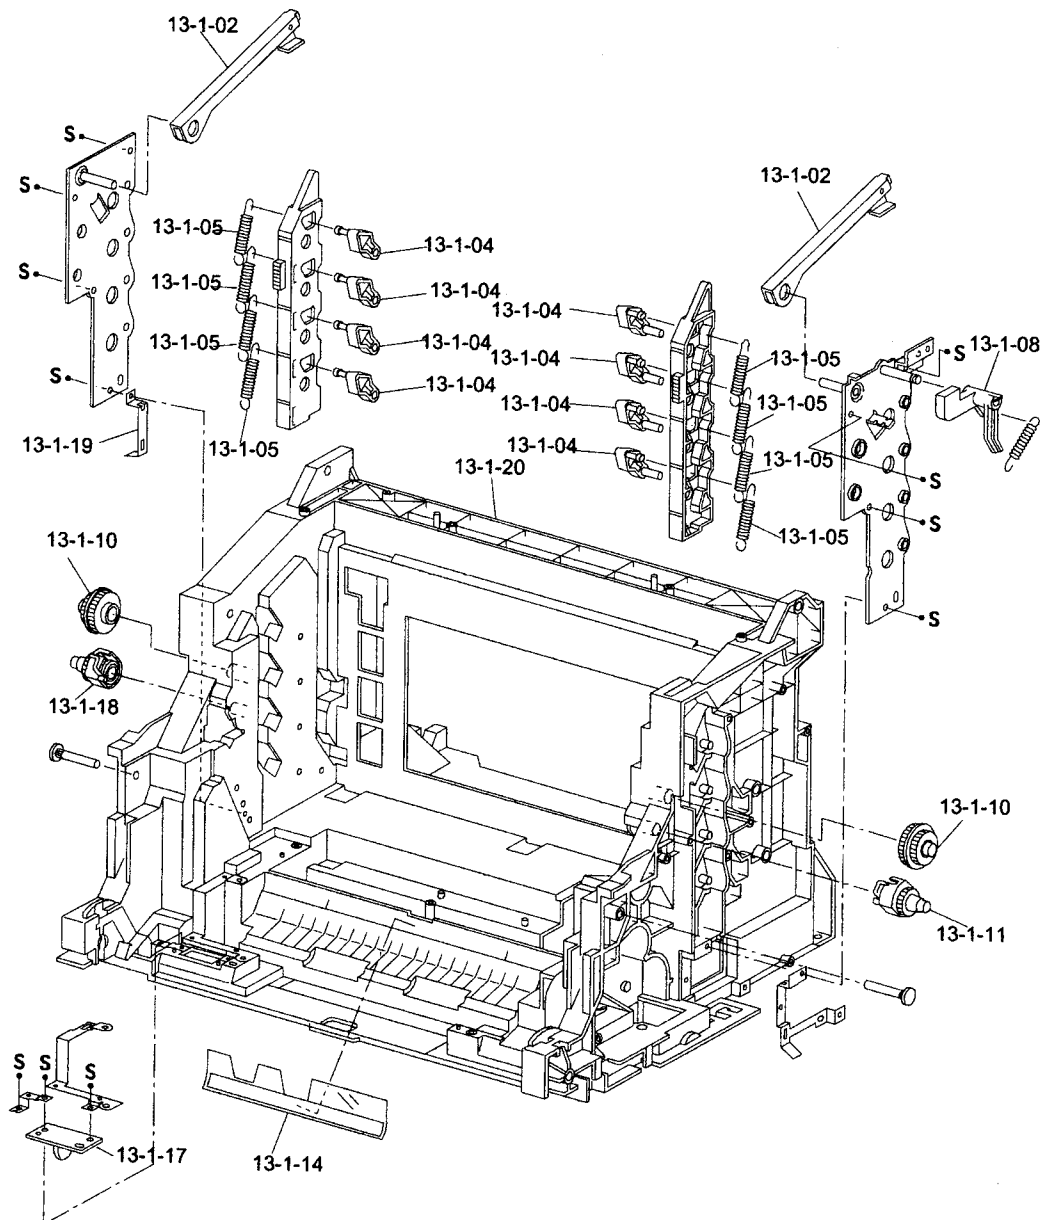


AcuLaserC4000 (13.1)

EPSON

ACULASER C4000

Page No.:24

 The parts to which no reference number is assigned will not be available as after-sale service parts.

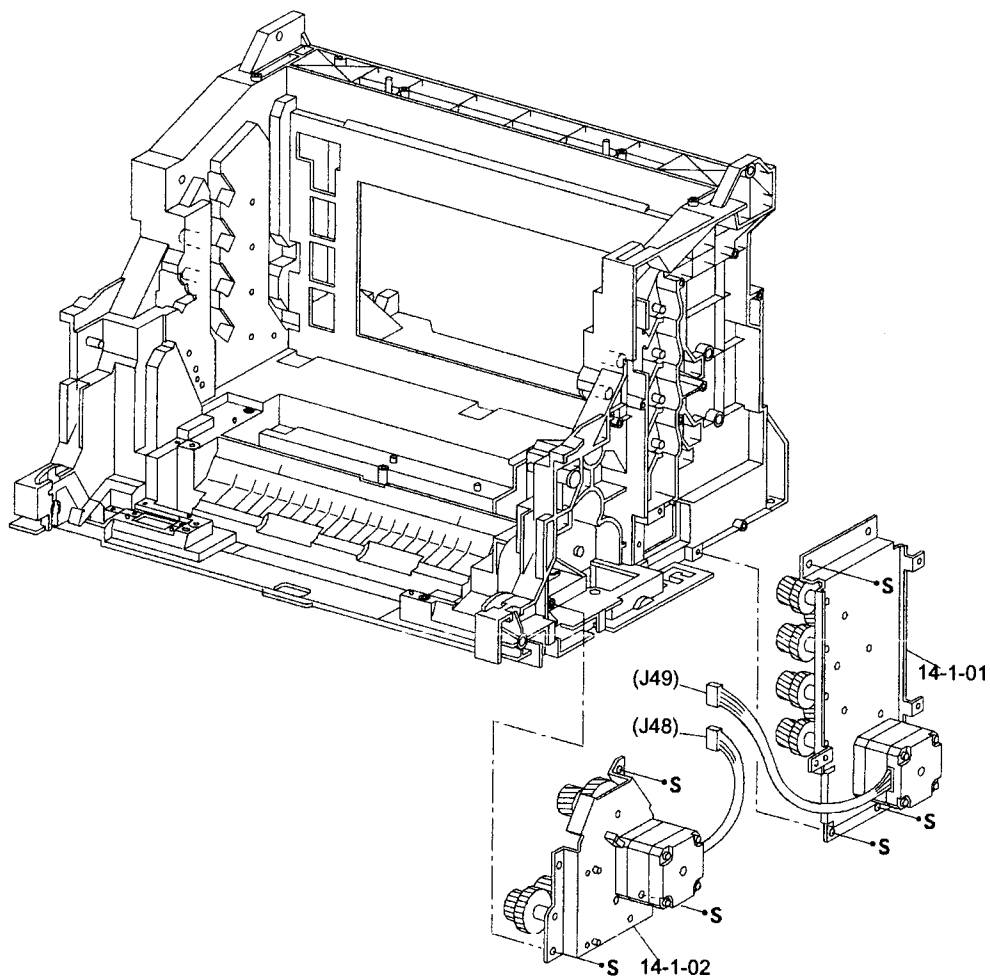


AcuLaserC4000 (14.1)

EPSON

ACULASER C4000

Page No.:25

 The parts to which no reference number is assigned will not be available as after-sale service parts.

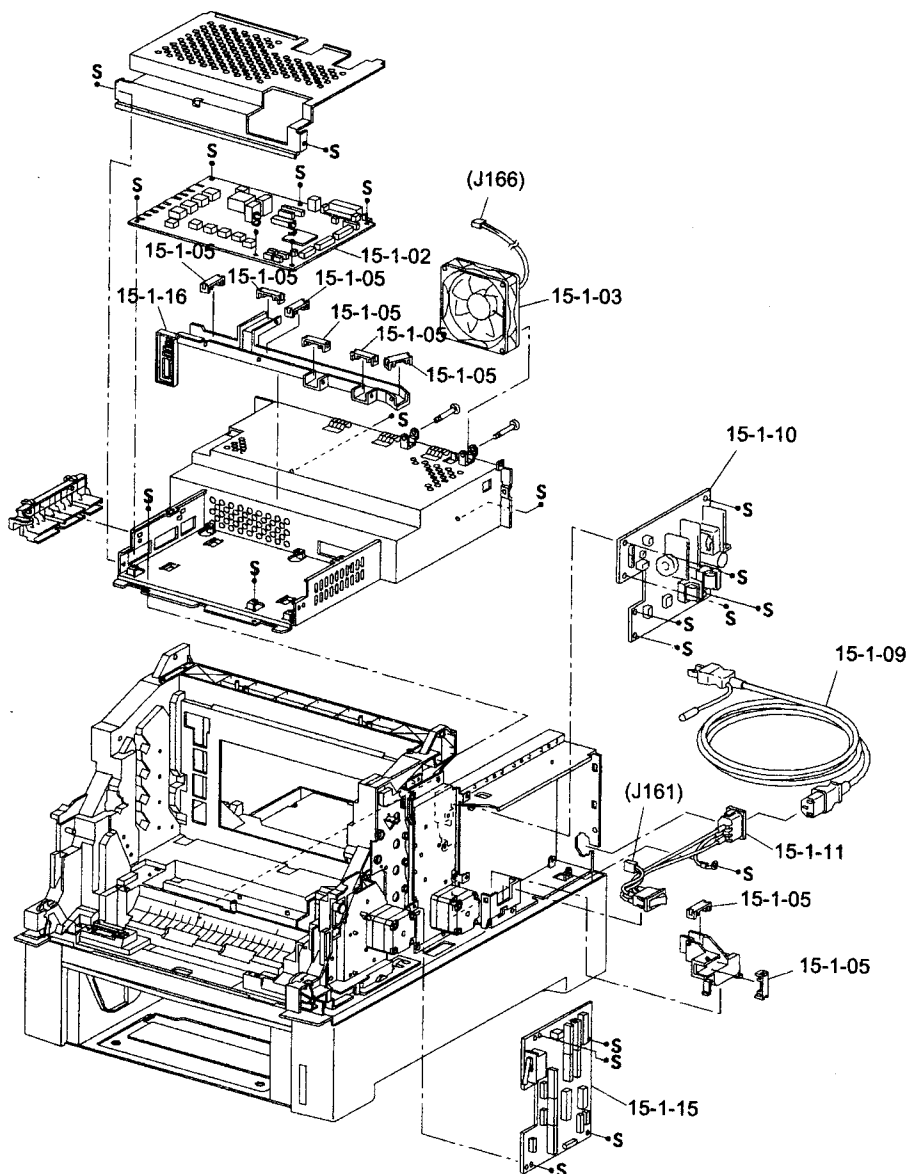


AcuLaserC4000 (15.1) Rev.01 C470

EPSON

ACULASER C4000

Page No.:26

 The parts to which no reference number is assigned will not be available as after-sale service parts.

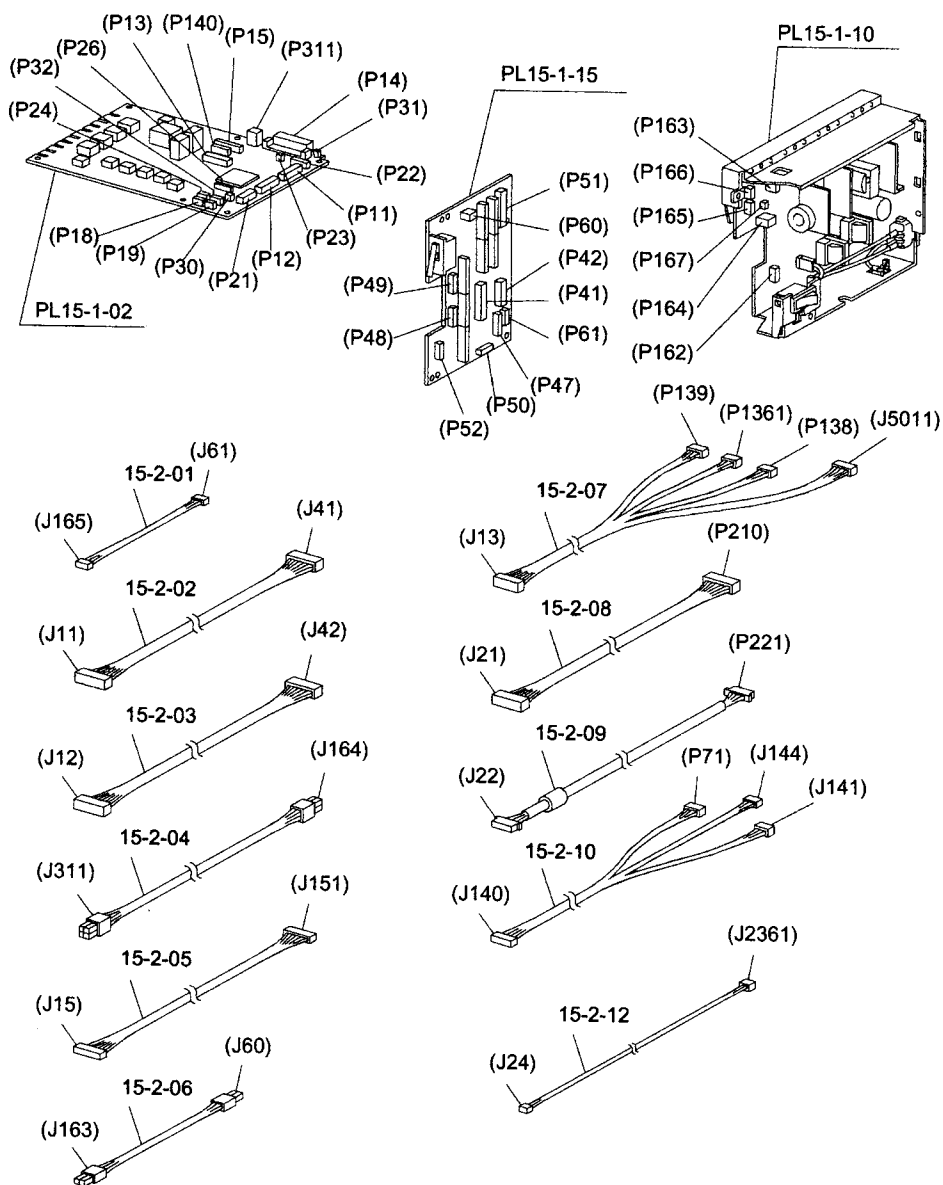

HANABI_BE_CHAP05_022Fb

EPSON

ACULASER C4000

Page No.:27

