




LASER PRINTER

ML-5100A

SERVICE *Manual*


LASER PRINTER

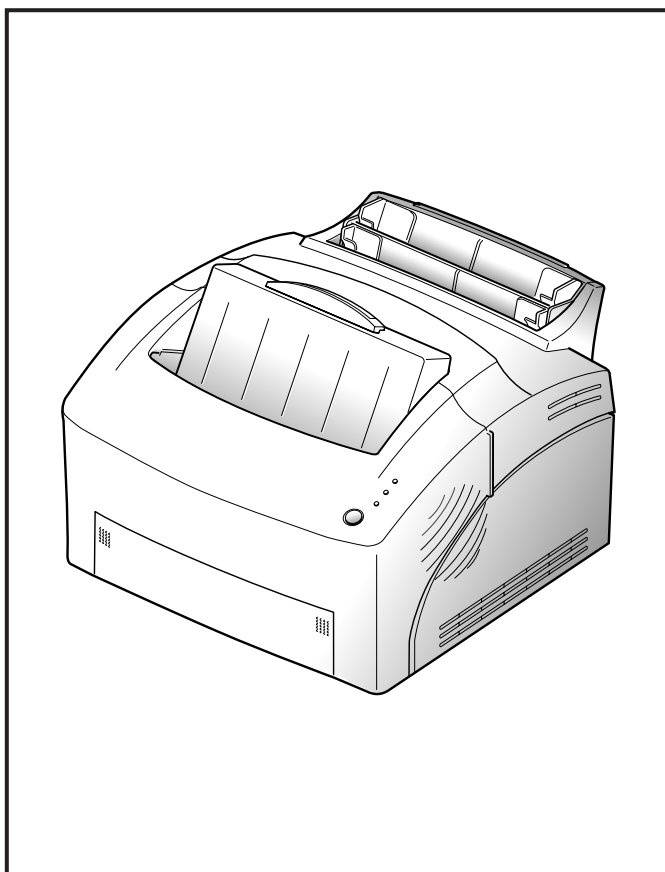


CONTENTS

1. Precautions
2. Specifications
3. Disassembly and Reassembly
4. Troubleshooting
5. Exploded Views and Parts List
6. Electrical Parts List
7. Schematic Diagrams


7-1 Controller 1/9

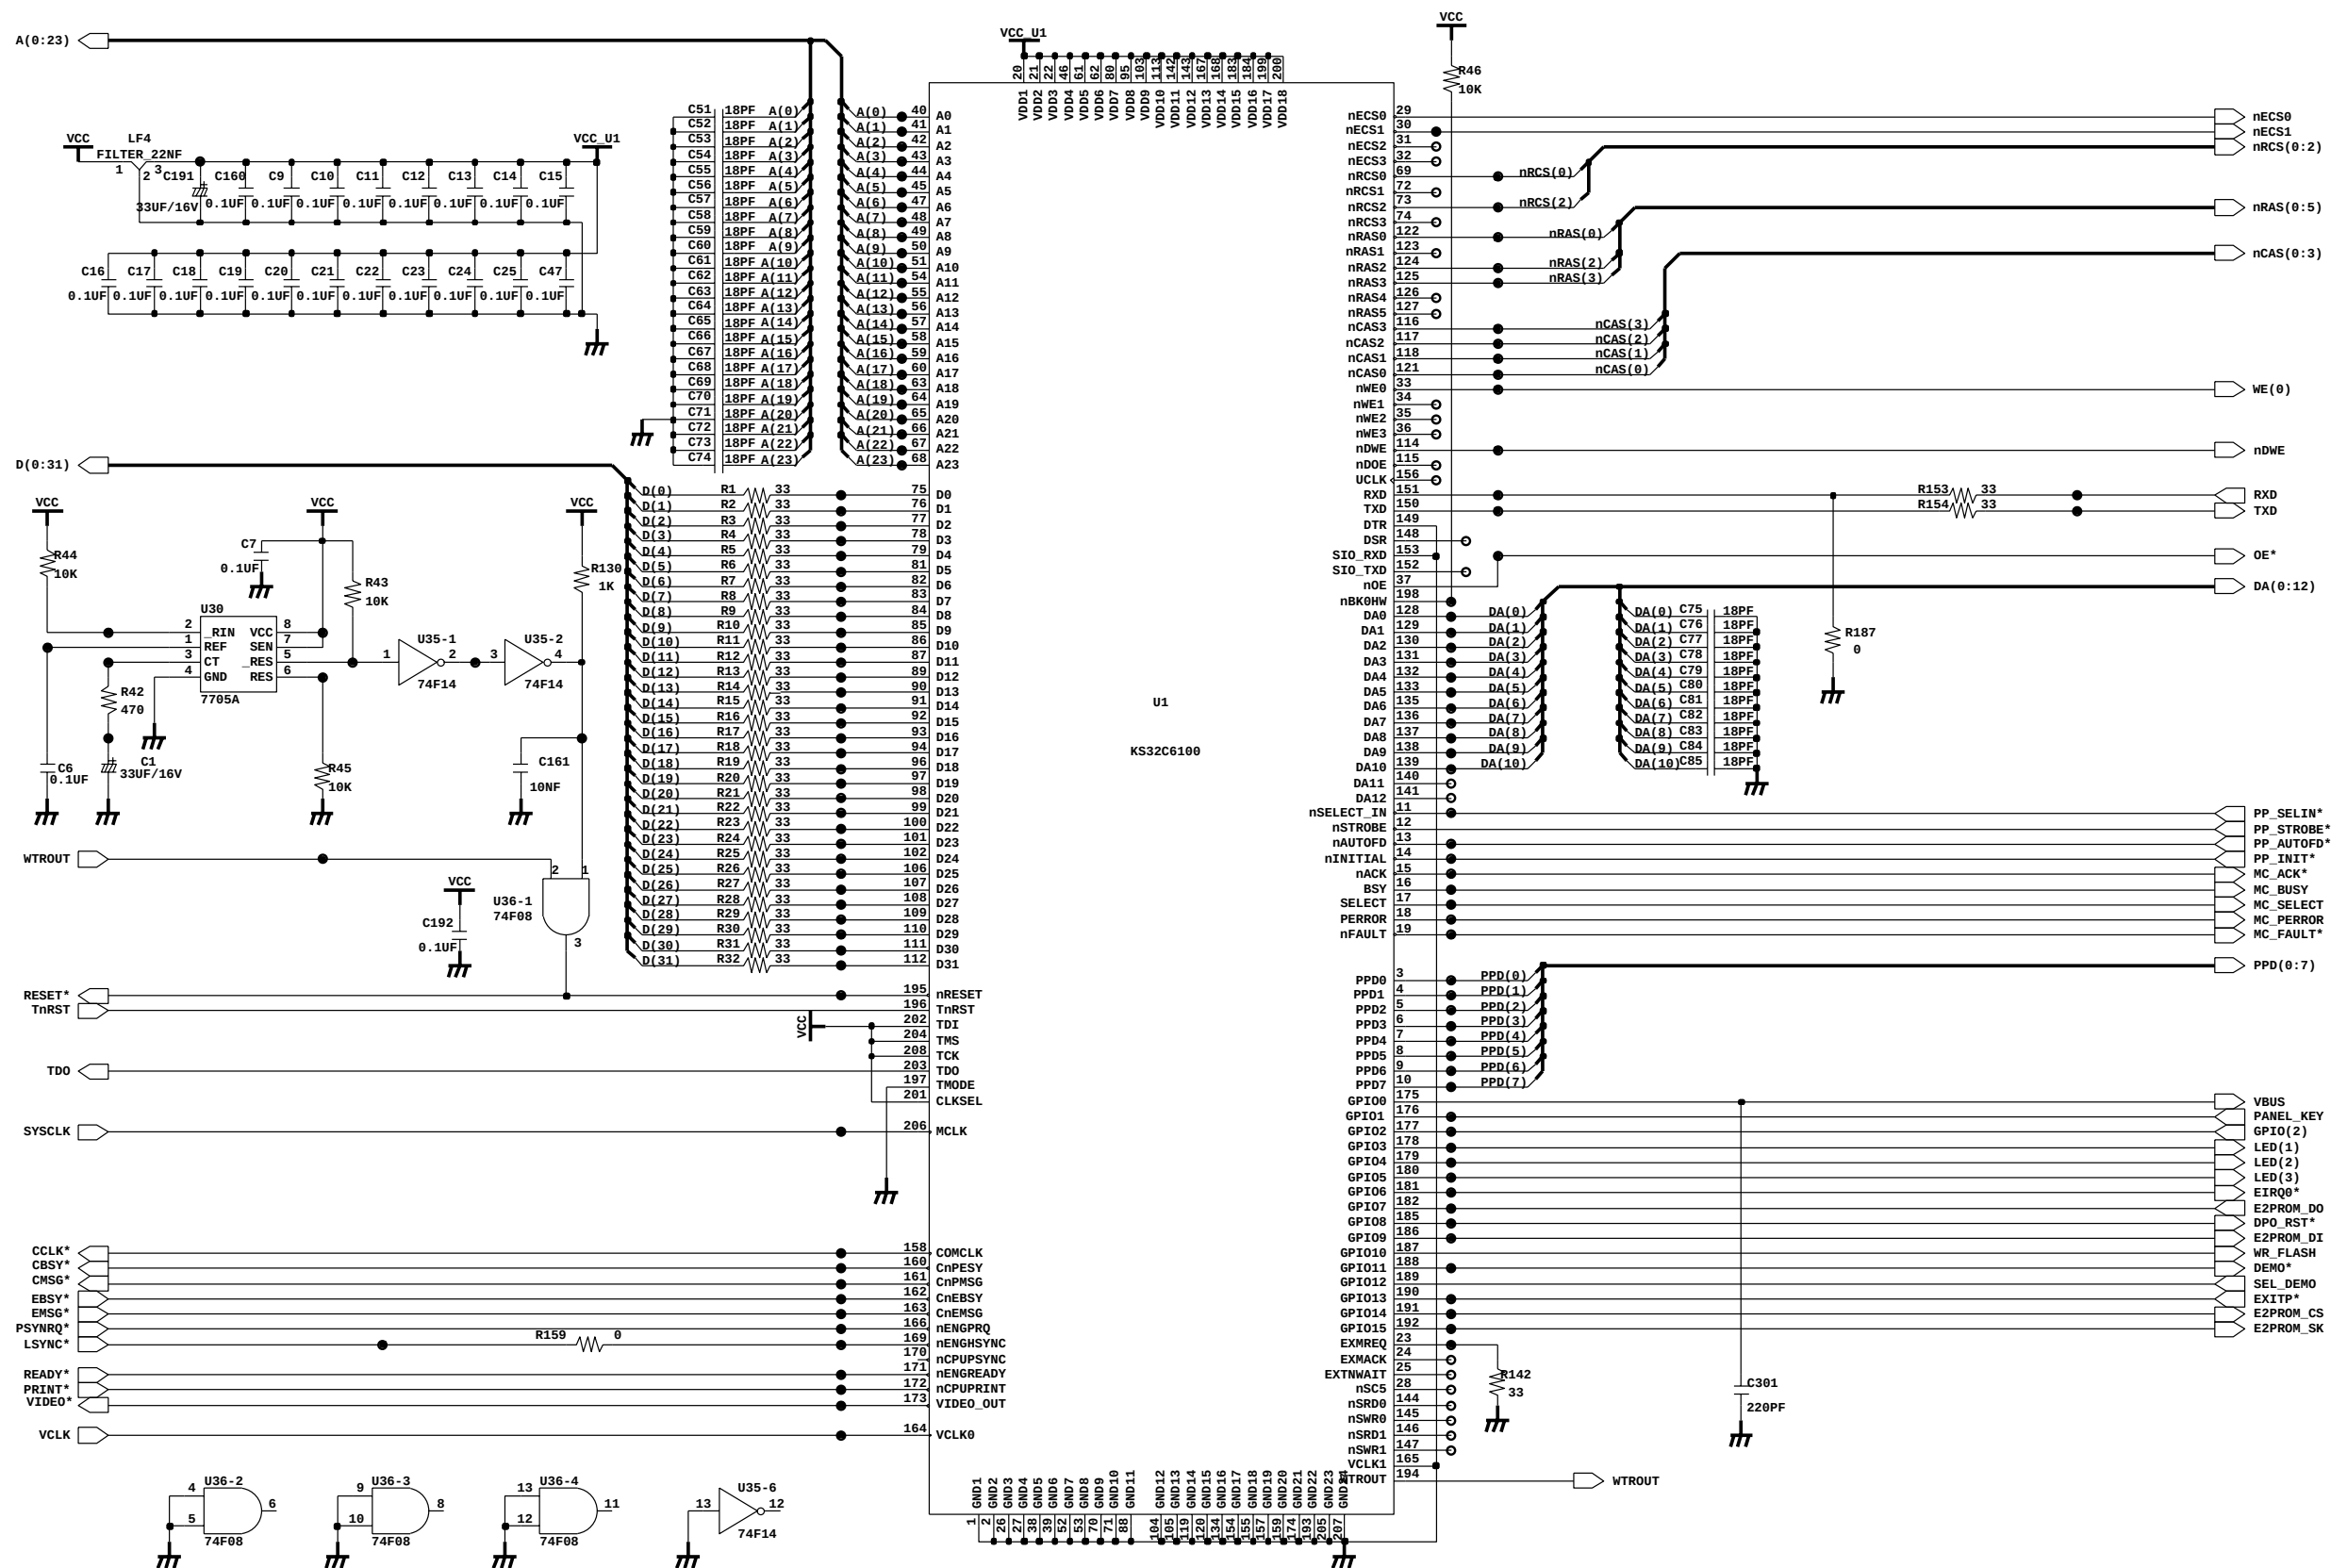


Controller 2/9

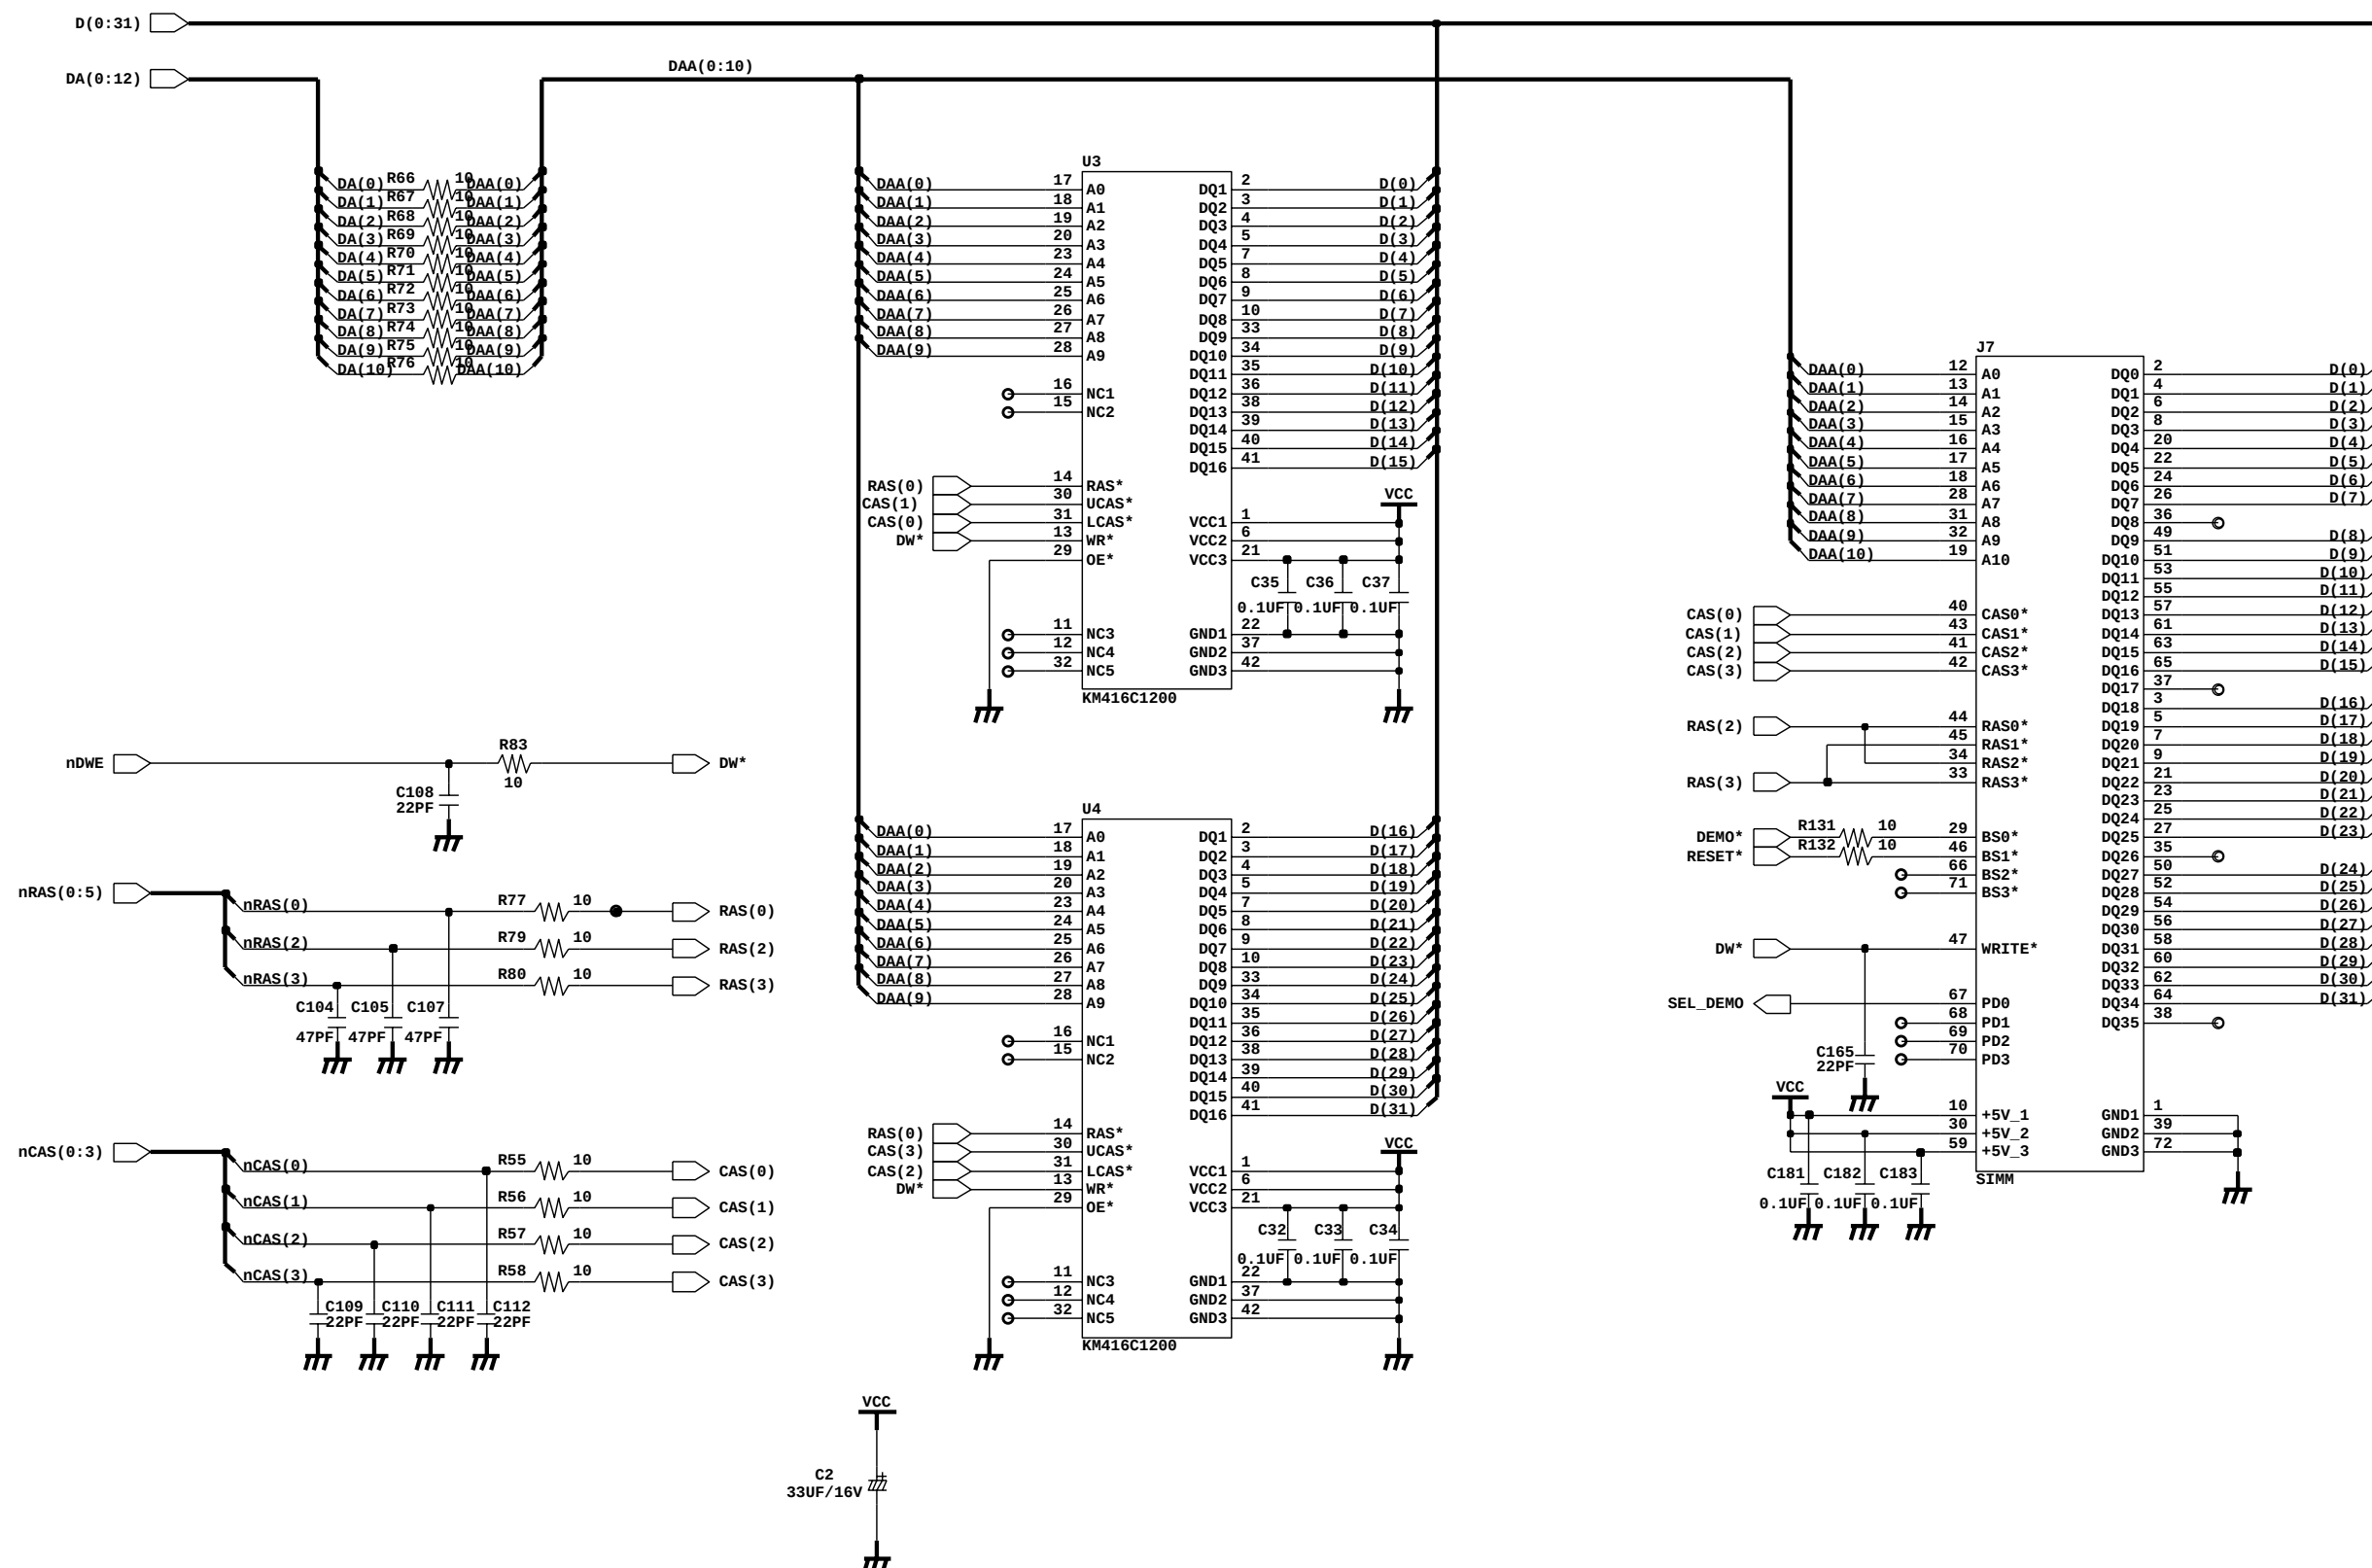


Controller 3/9

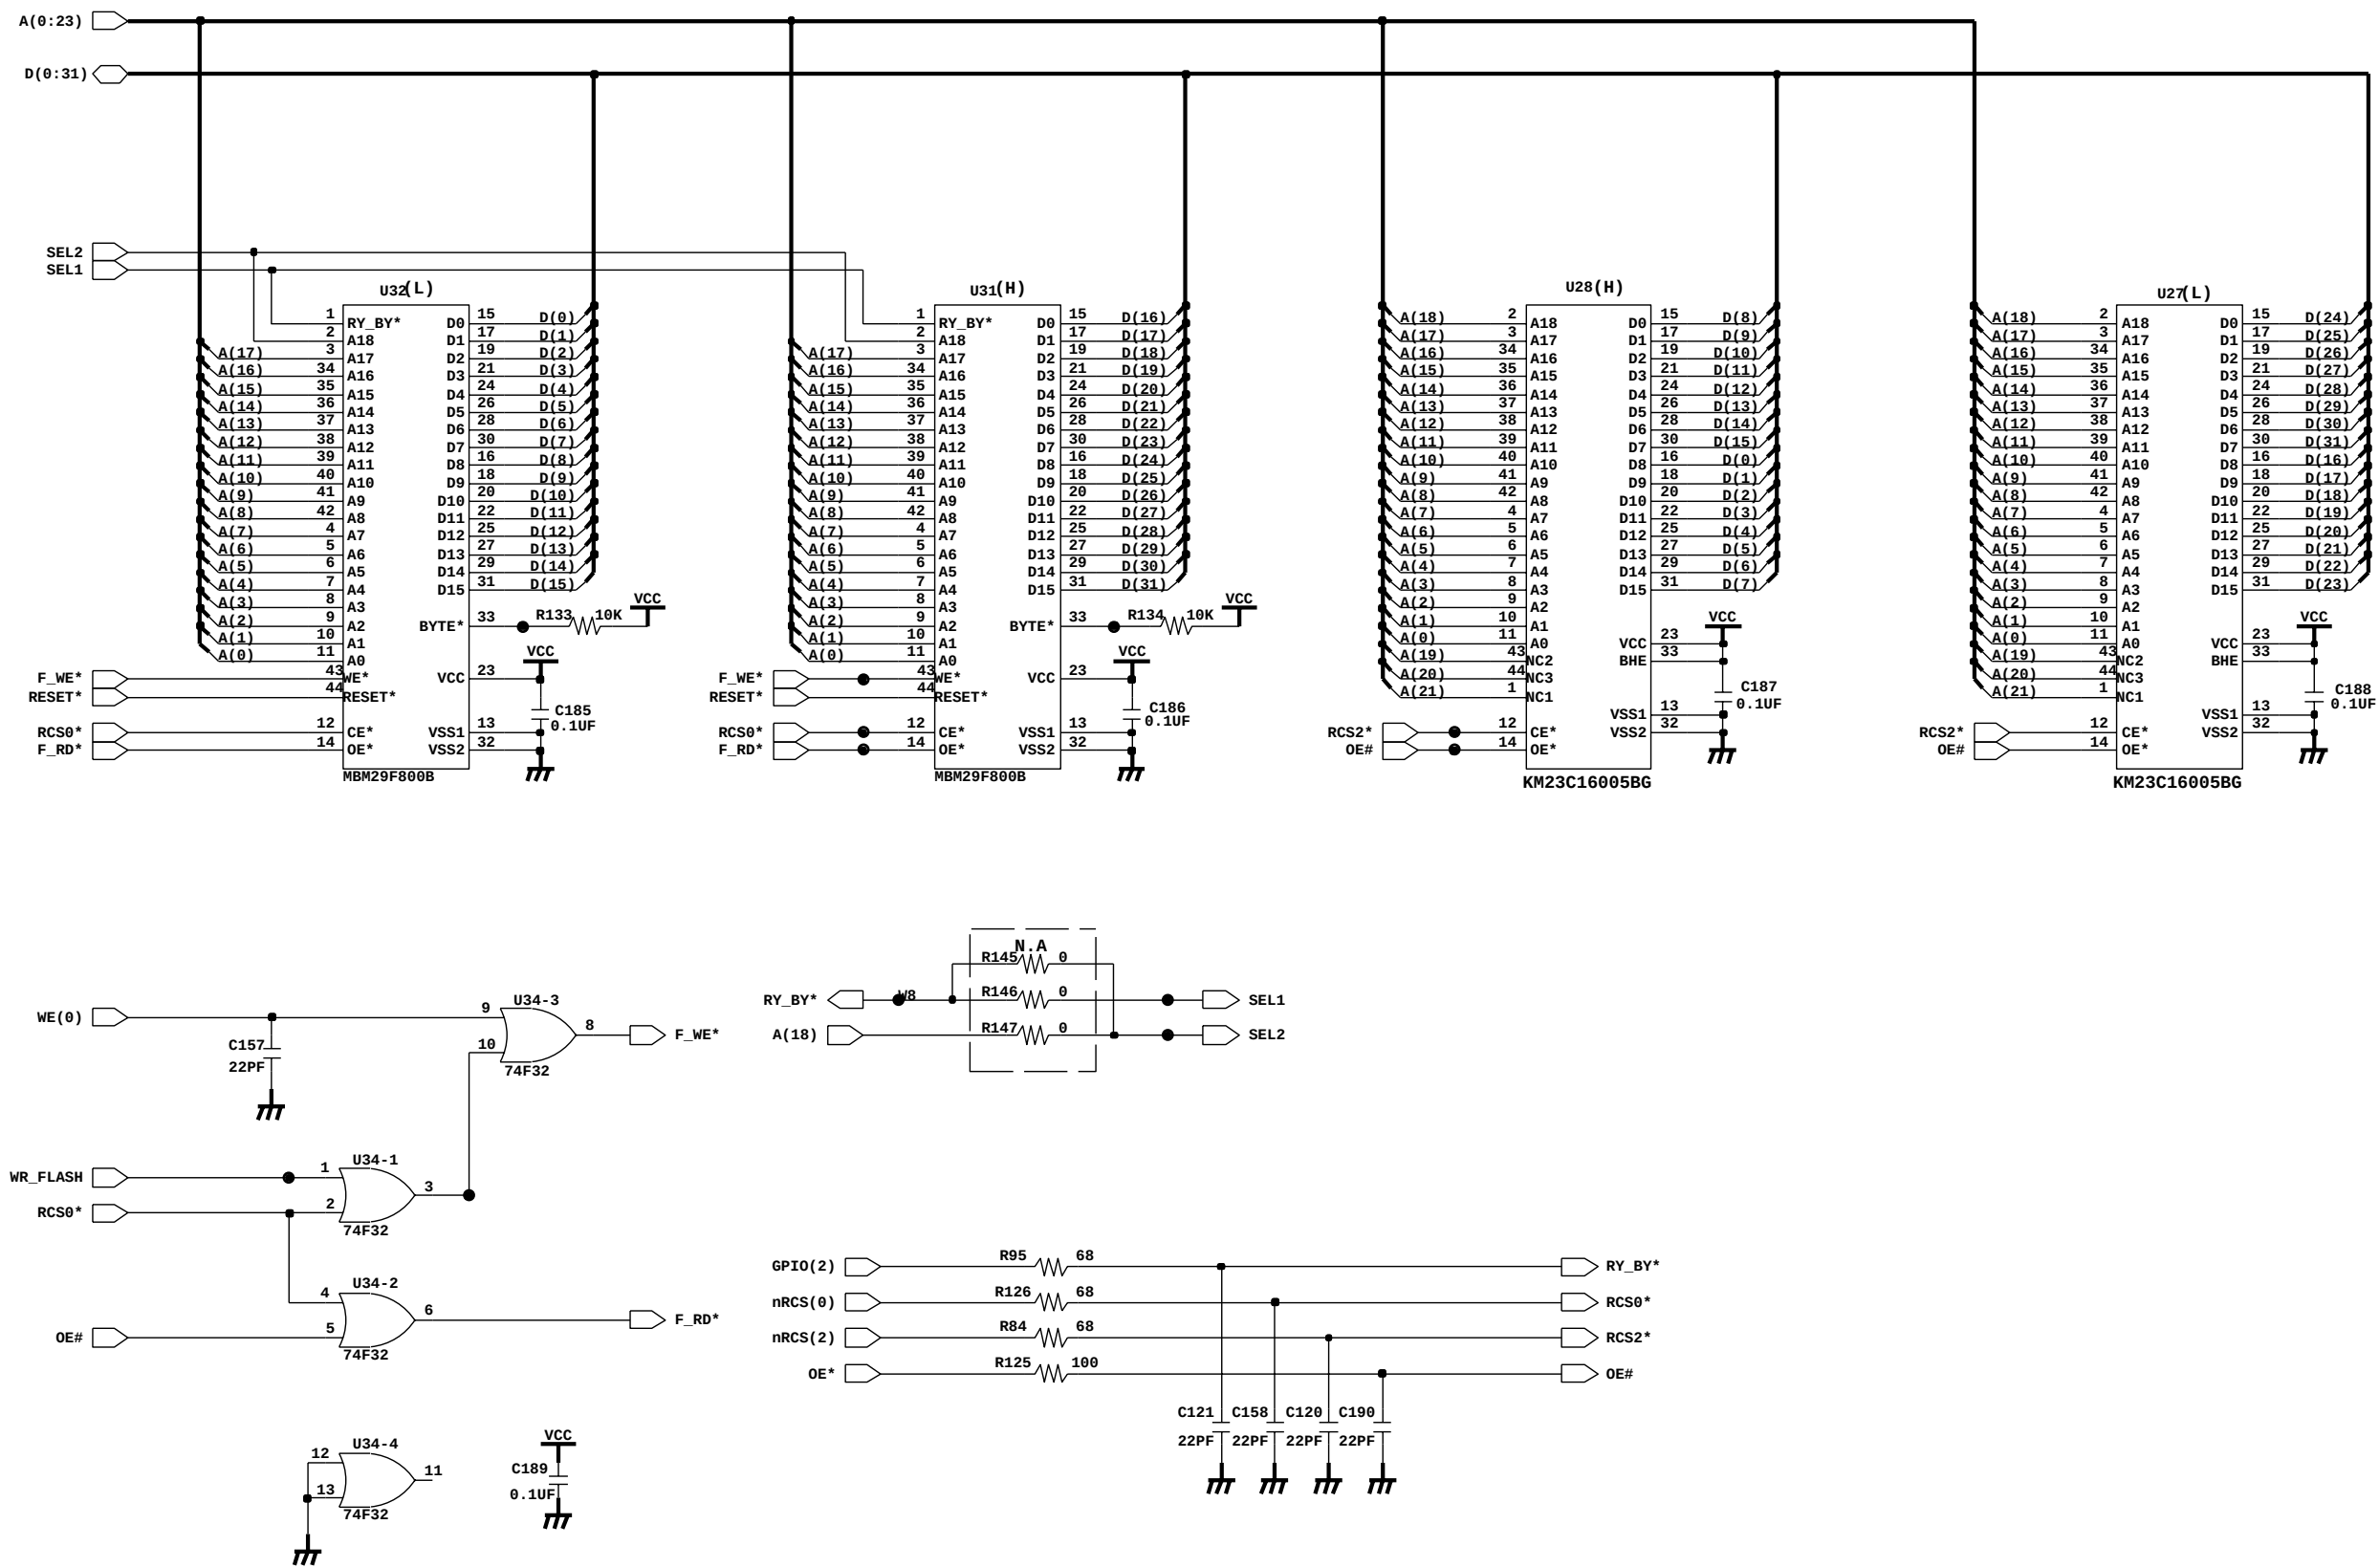


Controller 4/9

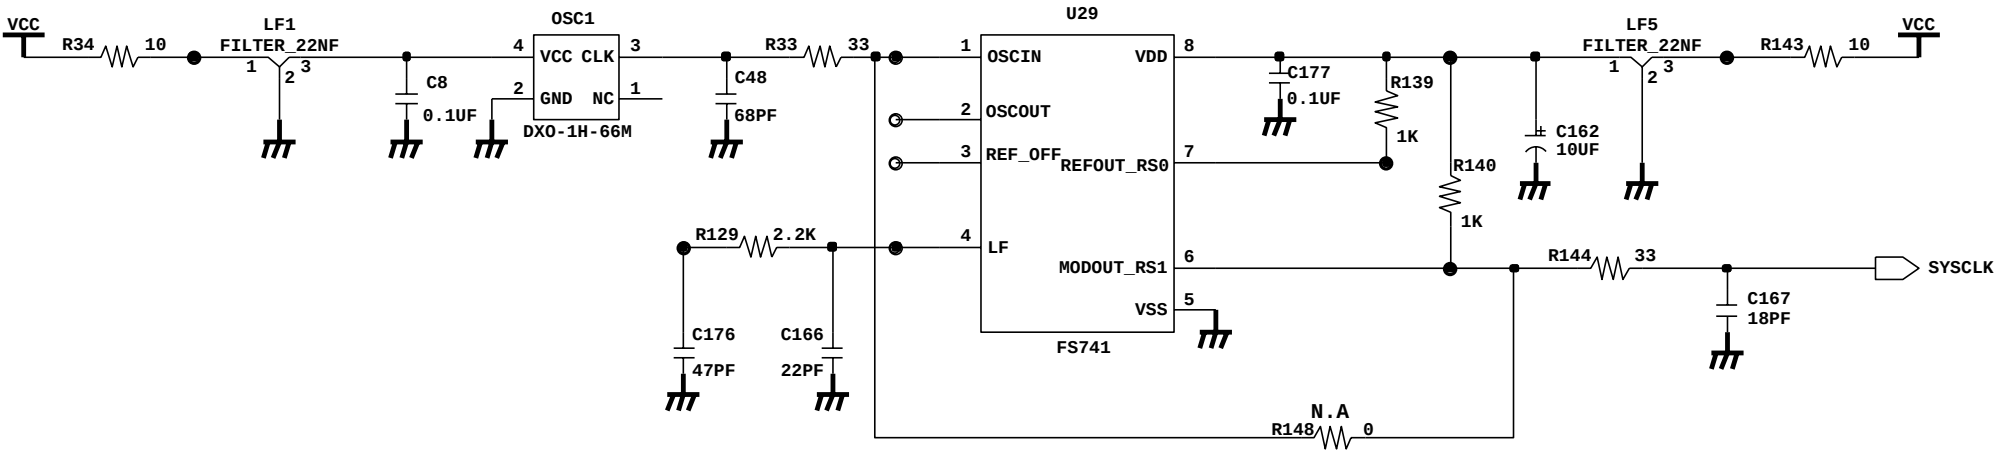




Controller 5/9

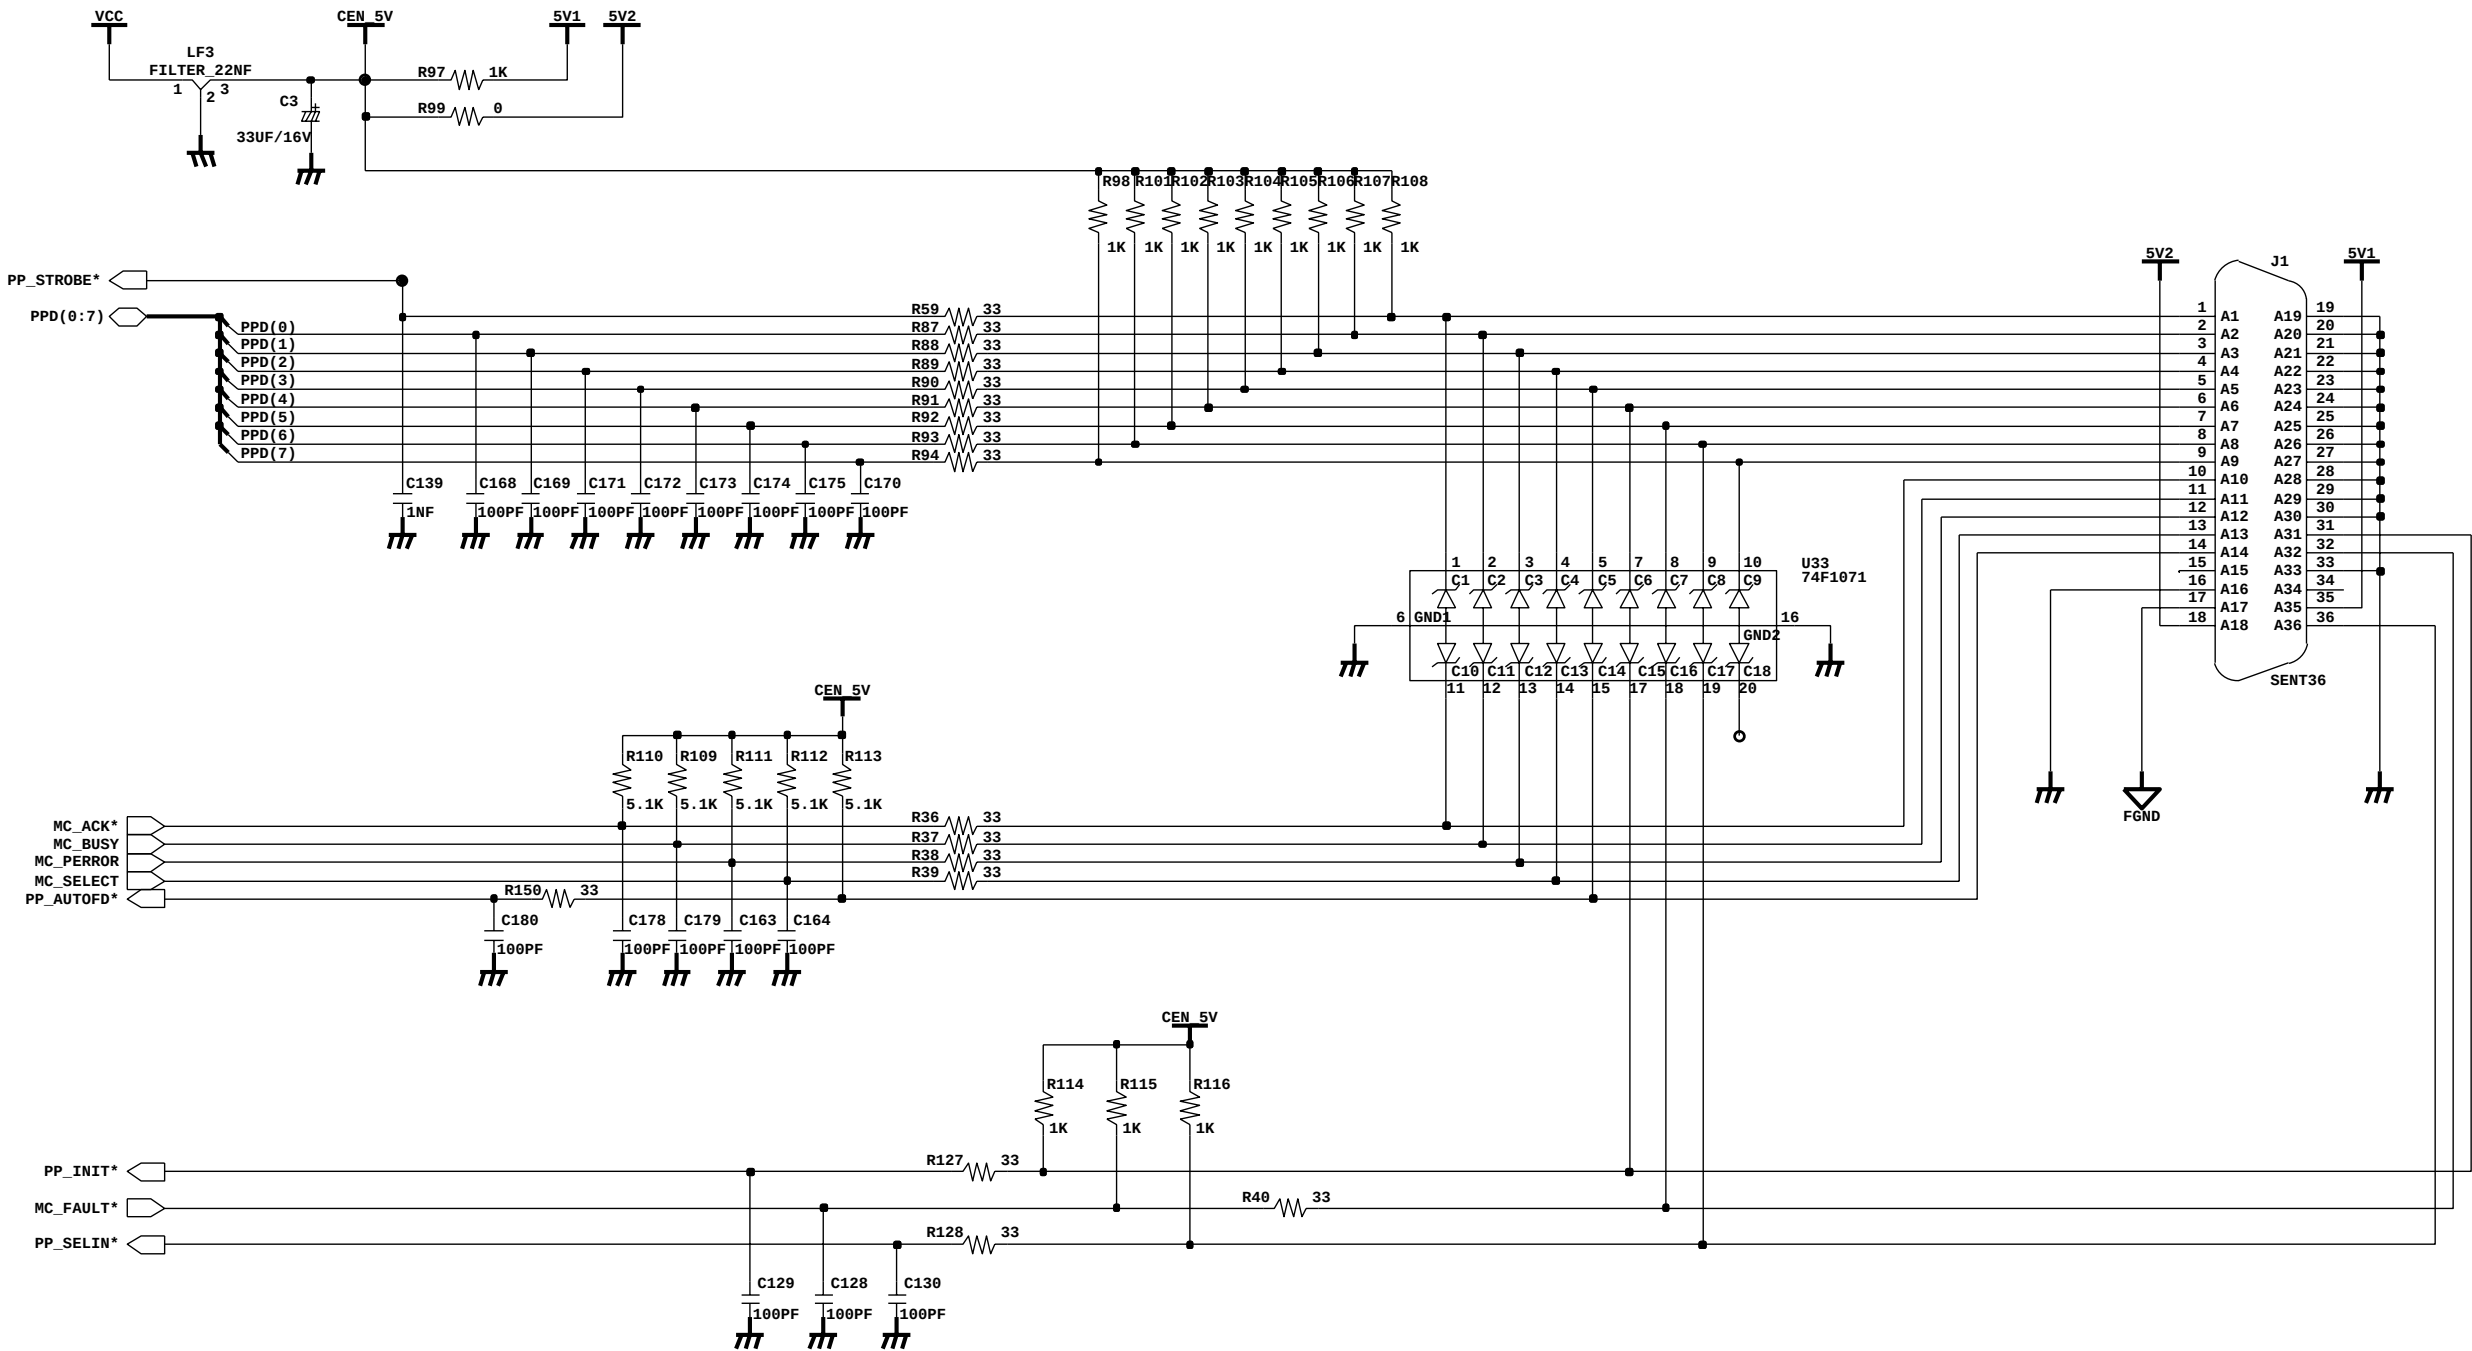


Controller 6/9

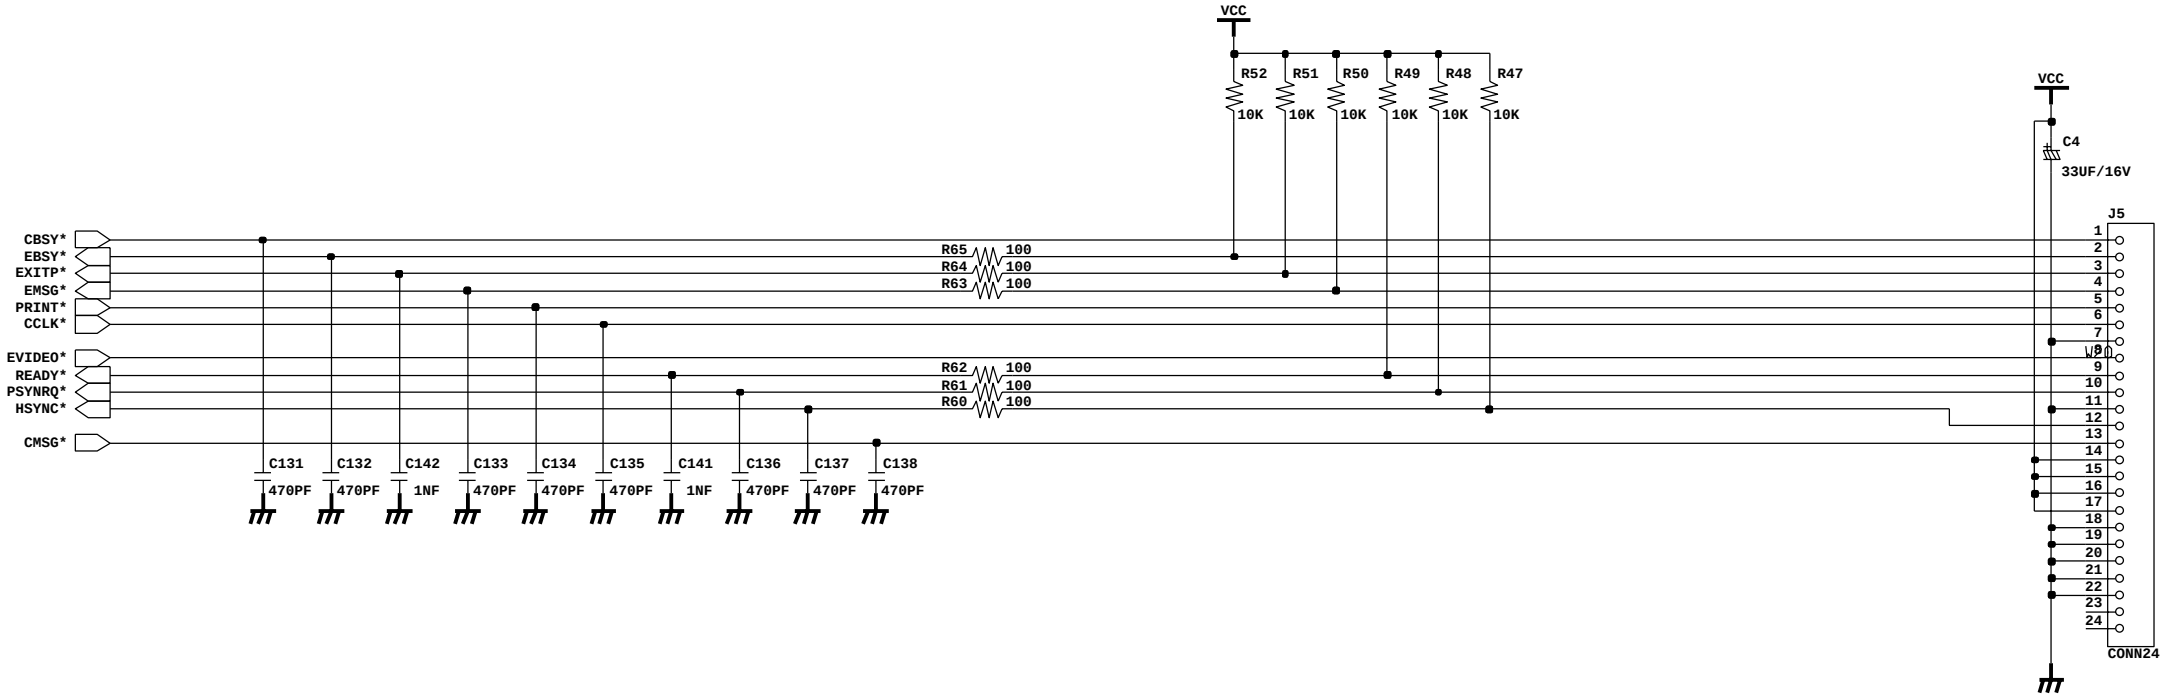


Controller 7/9

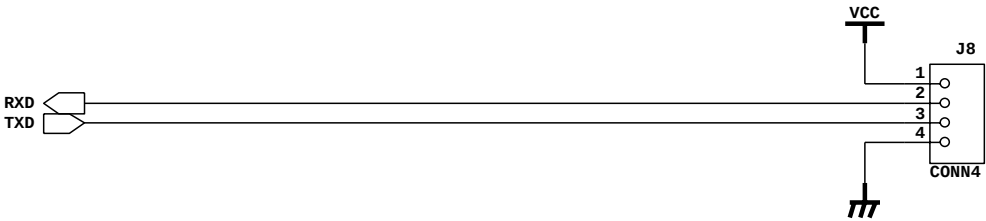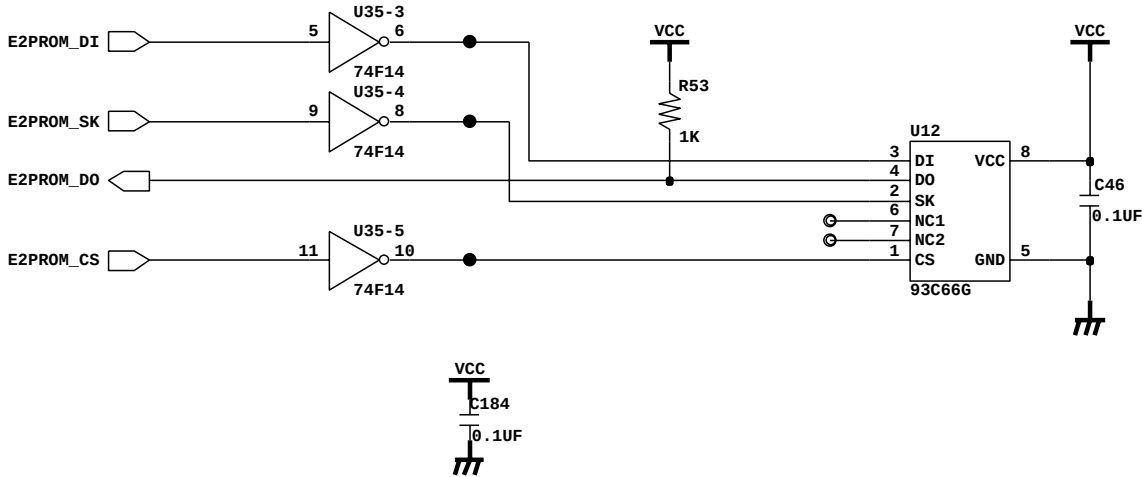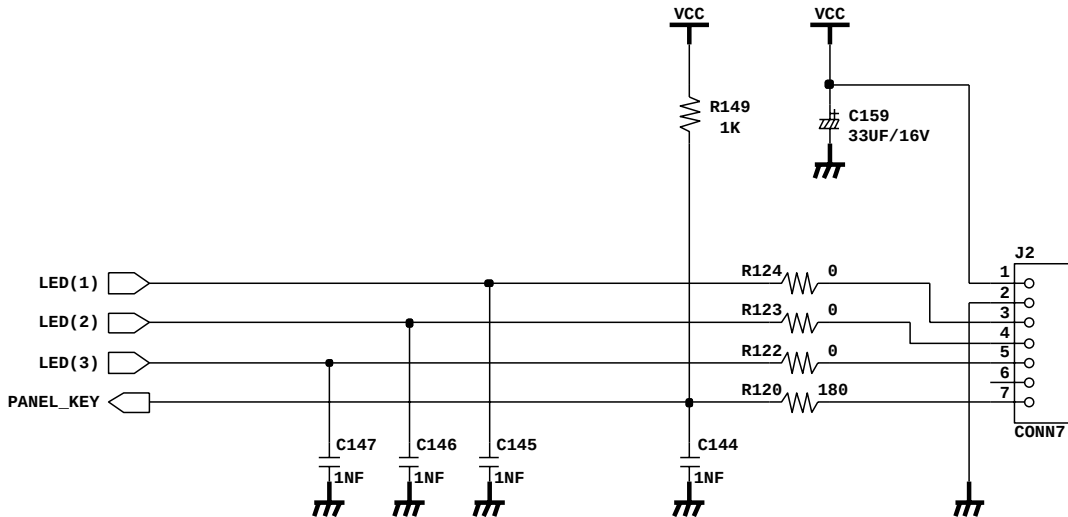


Controller 8/9

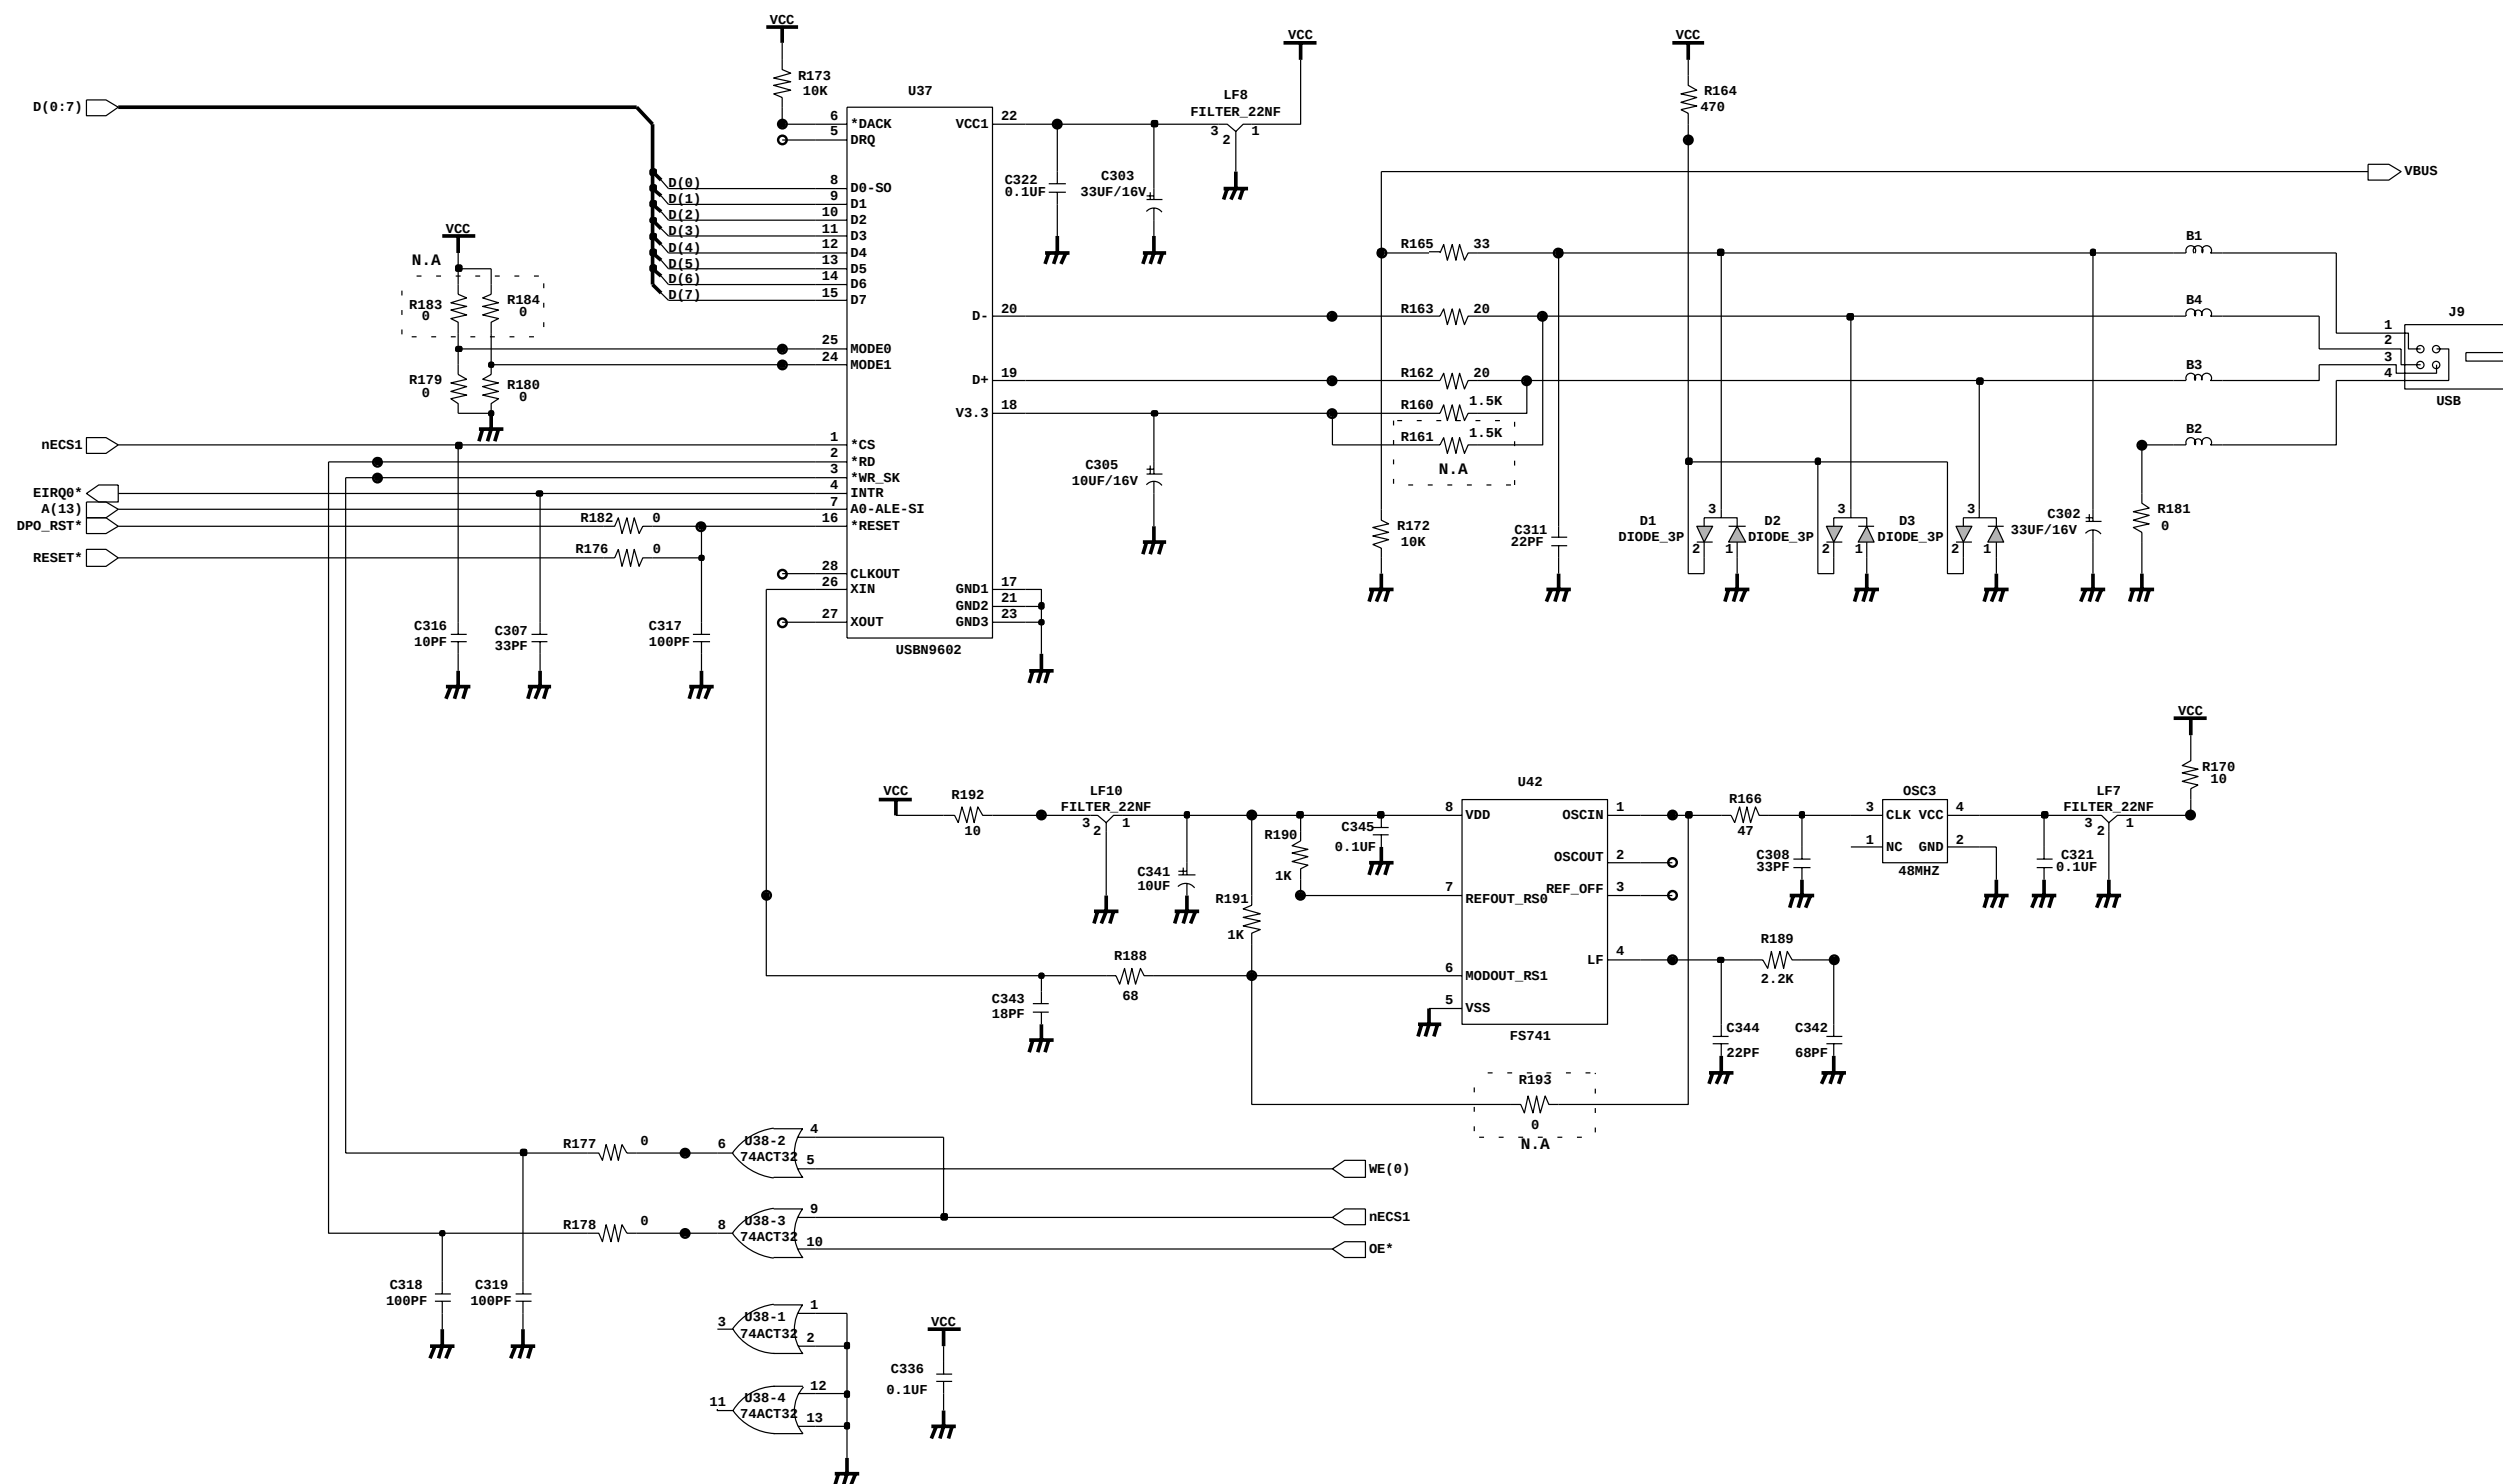

Controller 9/9

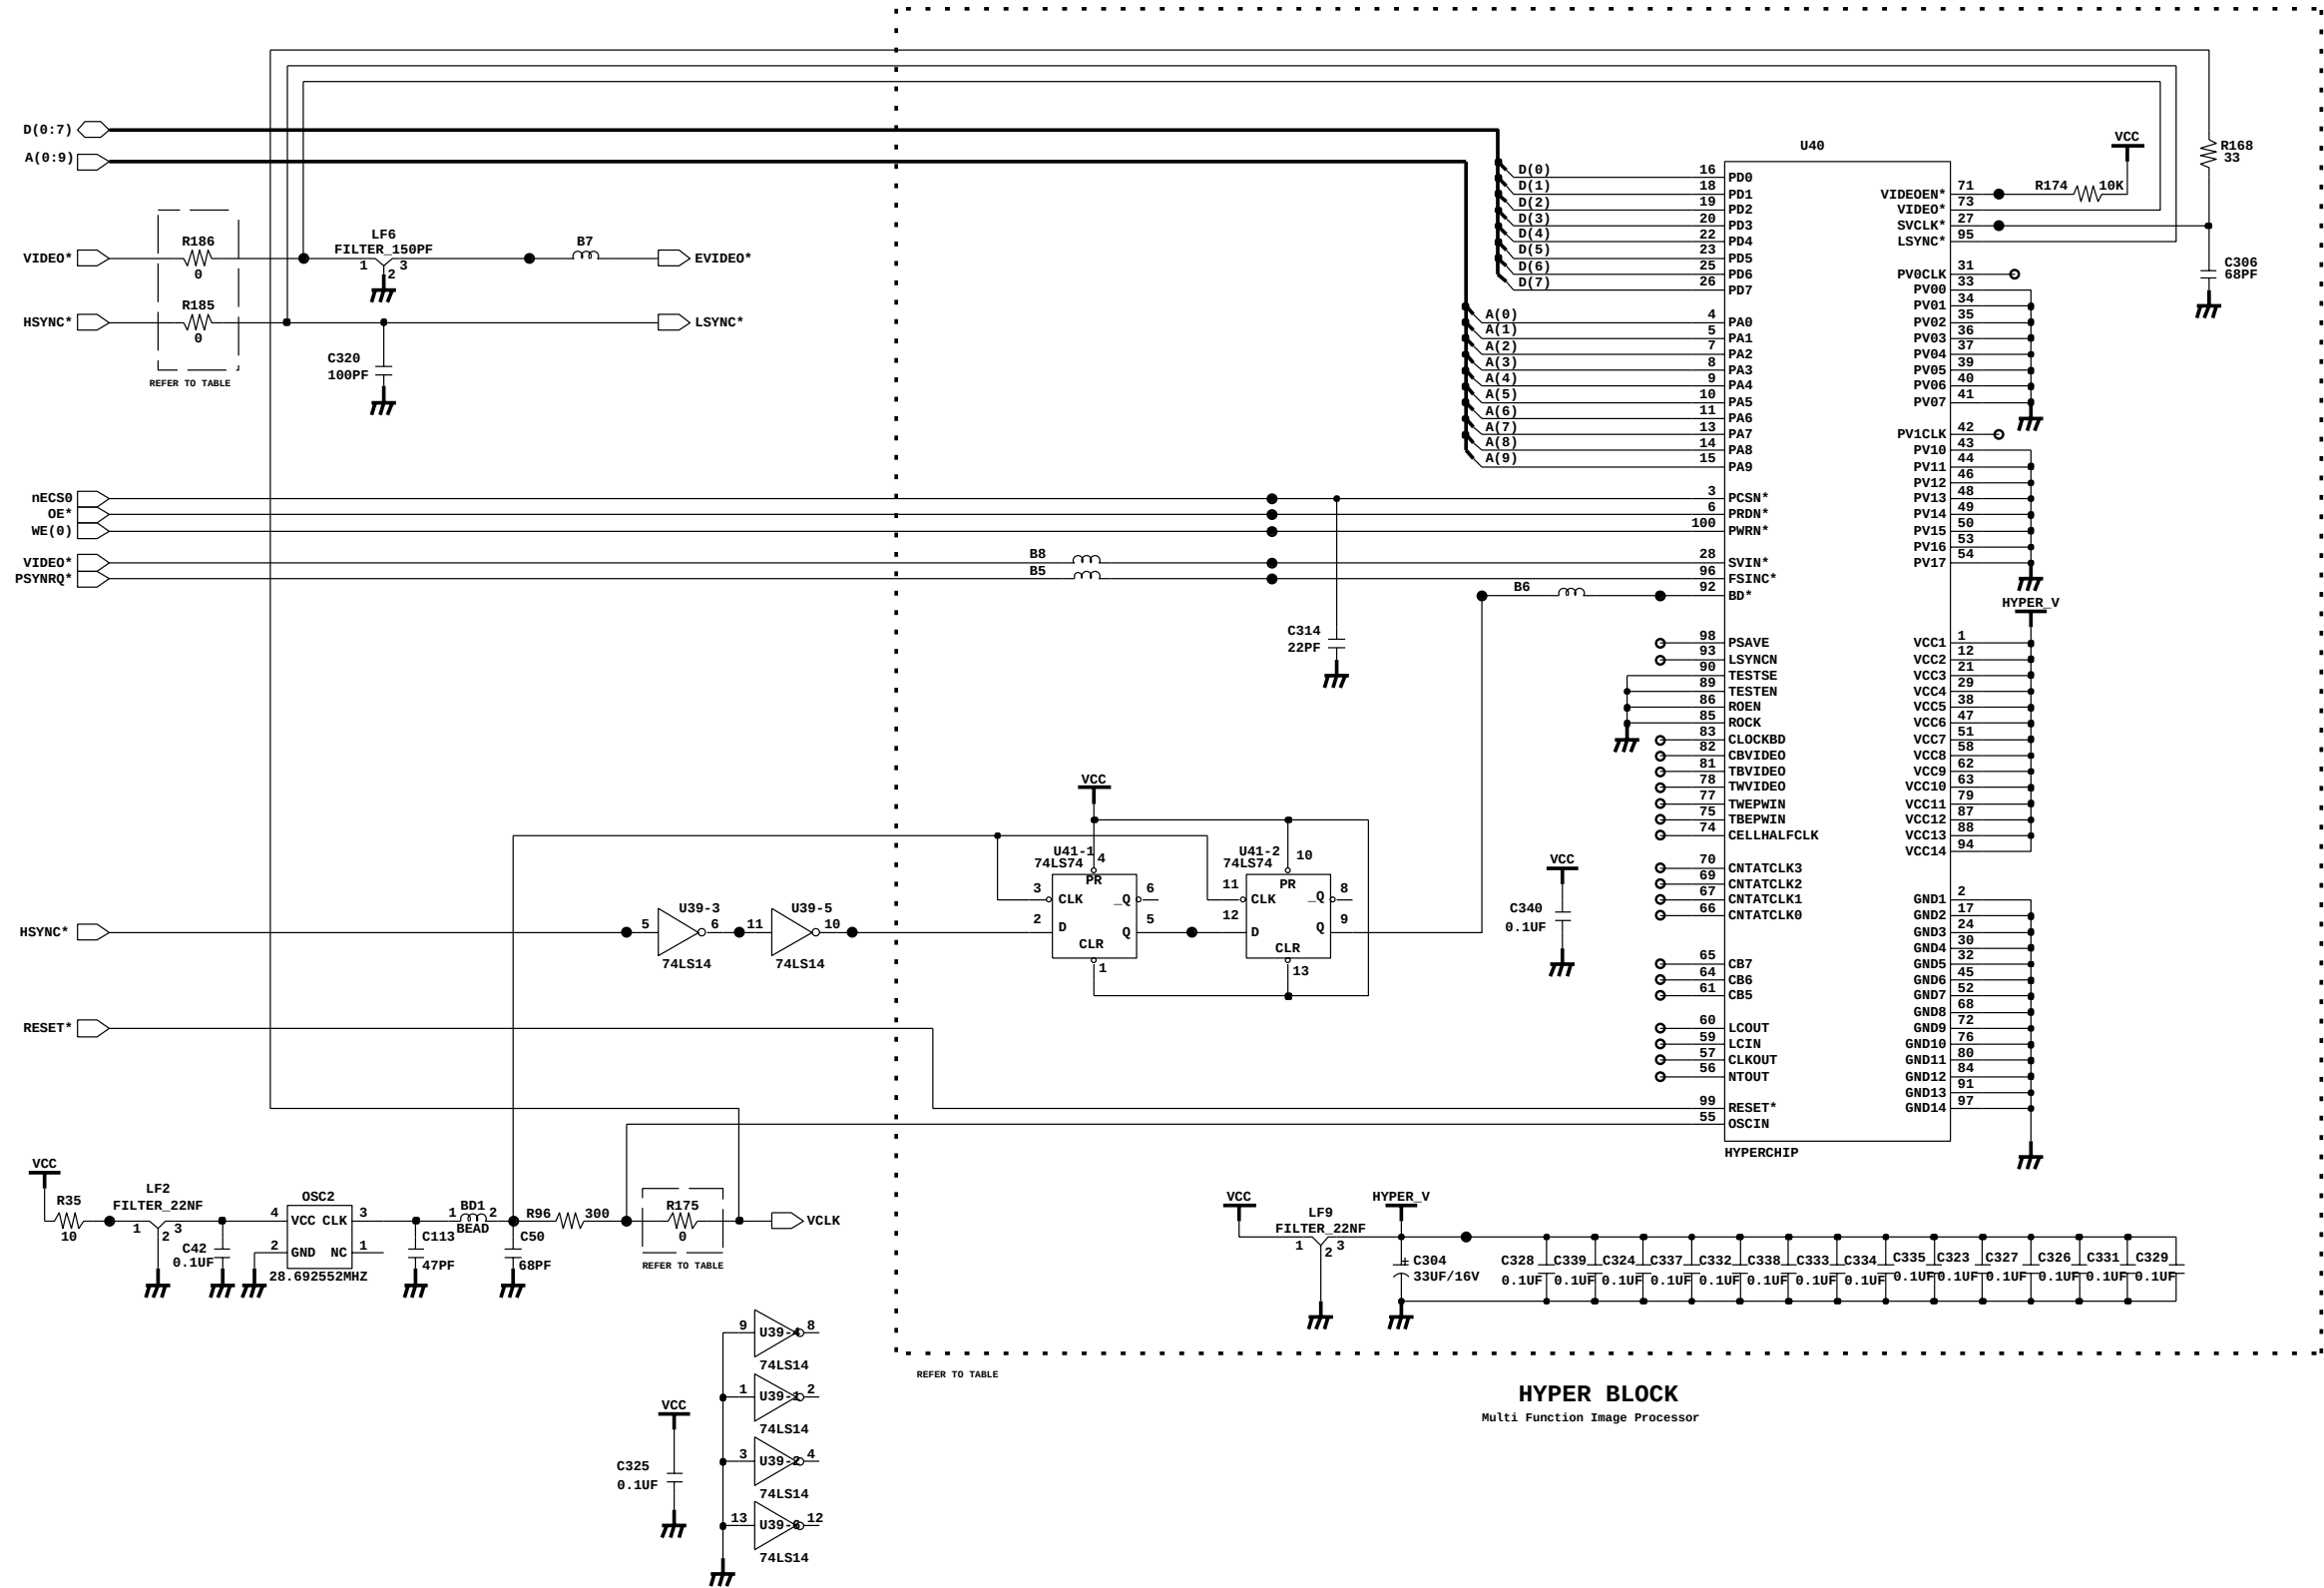


7-2 OPE Panel

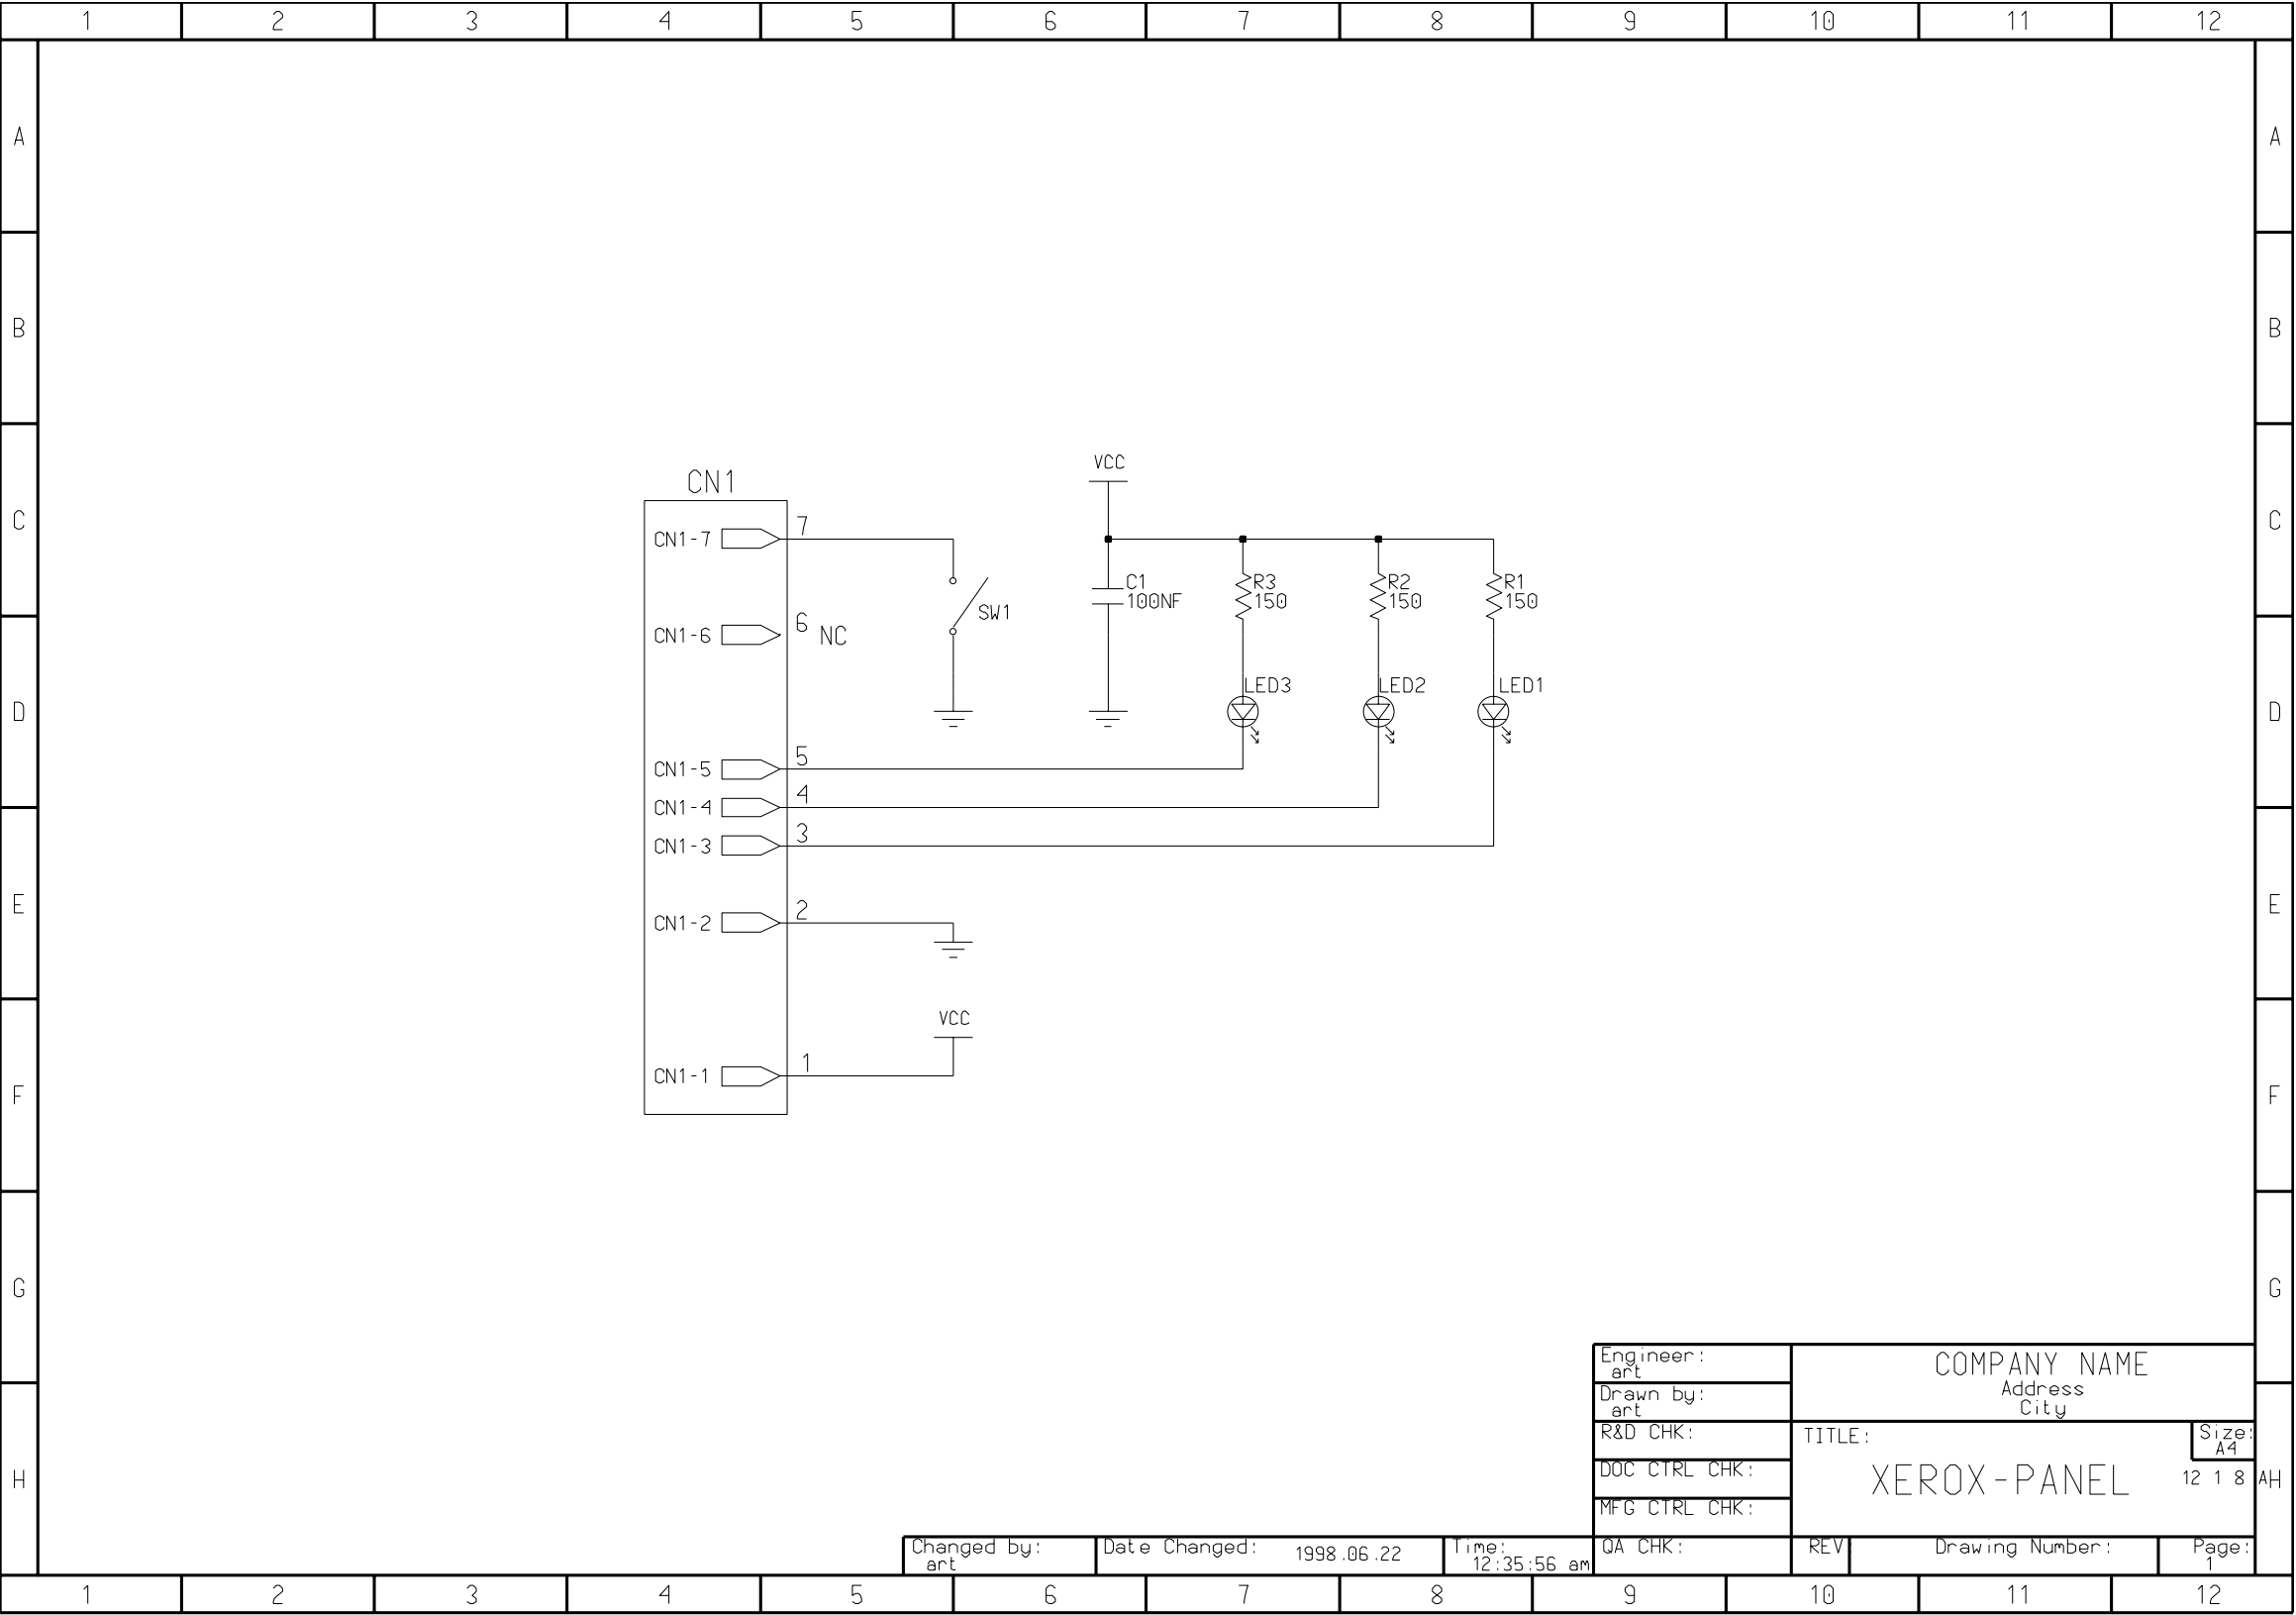





Engine 2/3

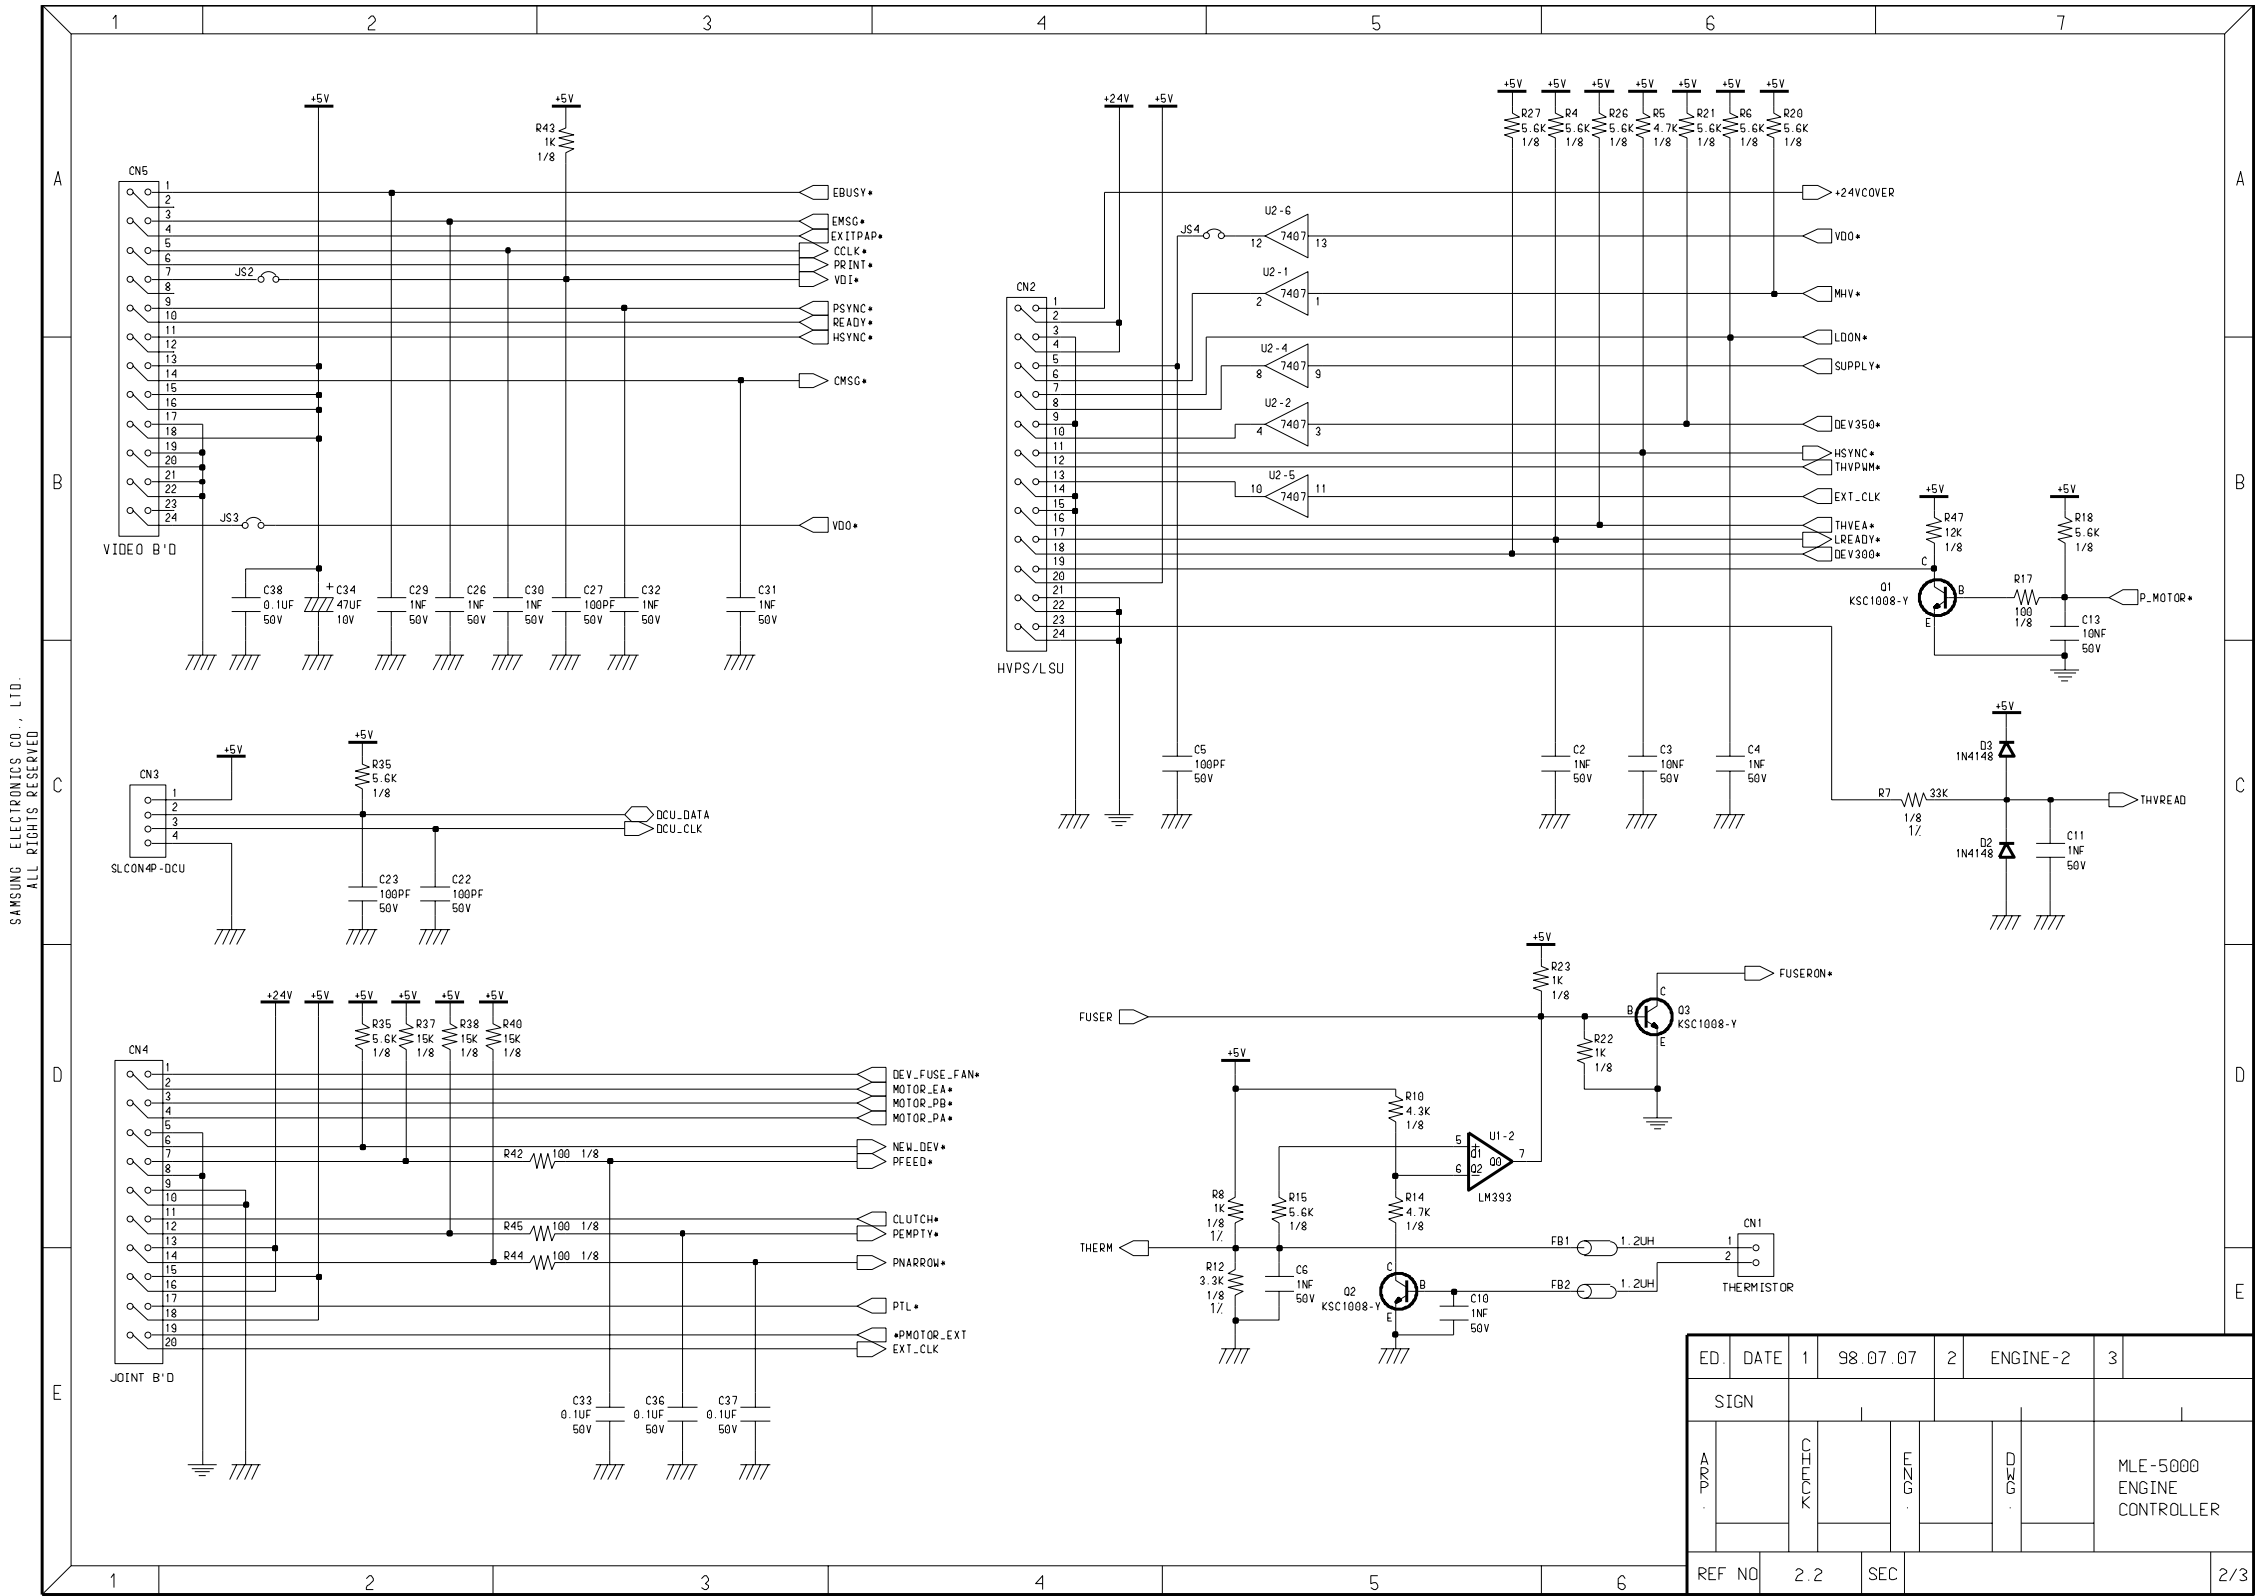


Engine 3/3

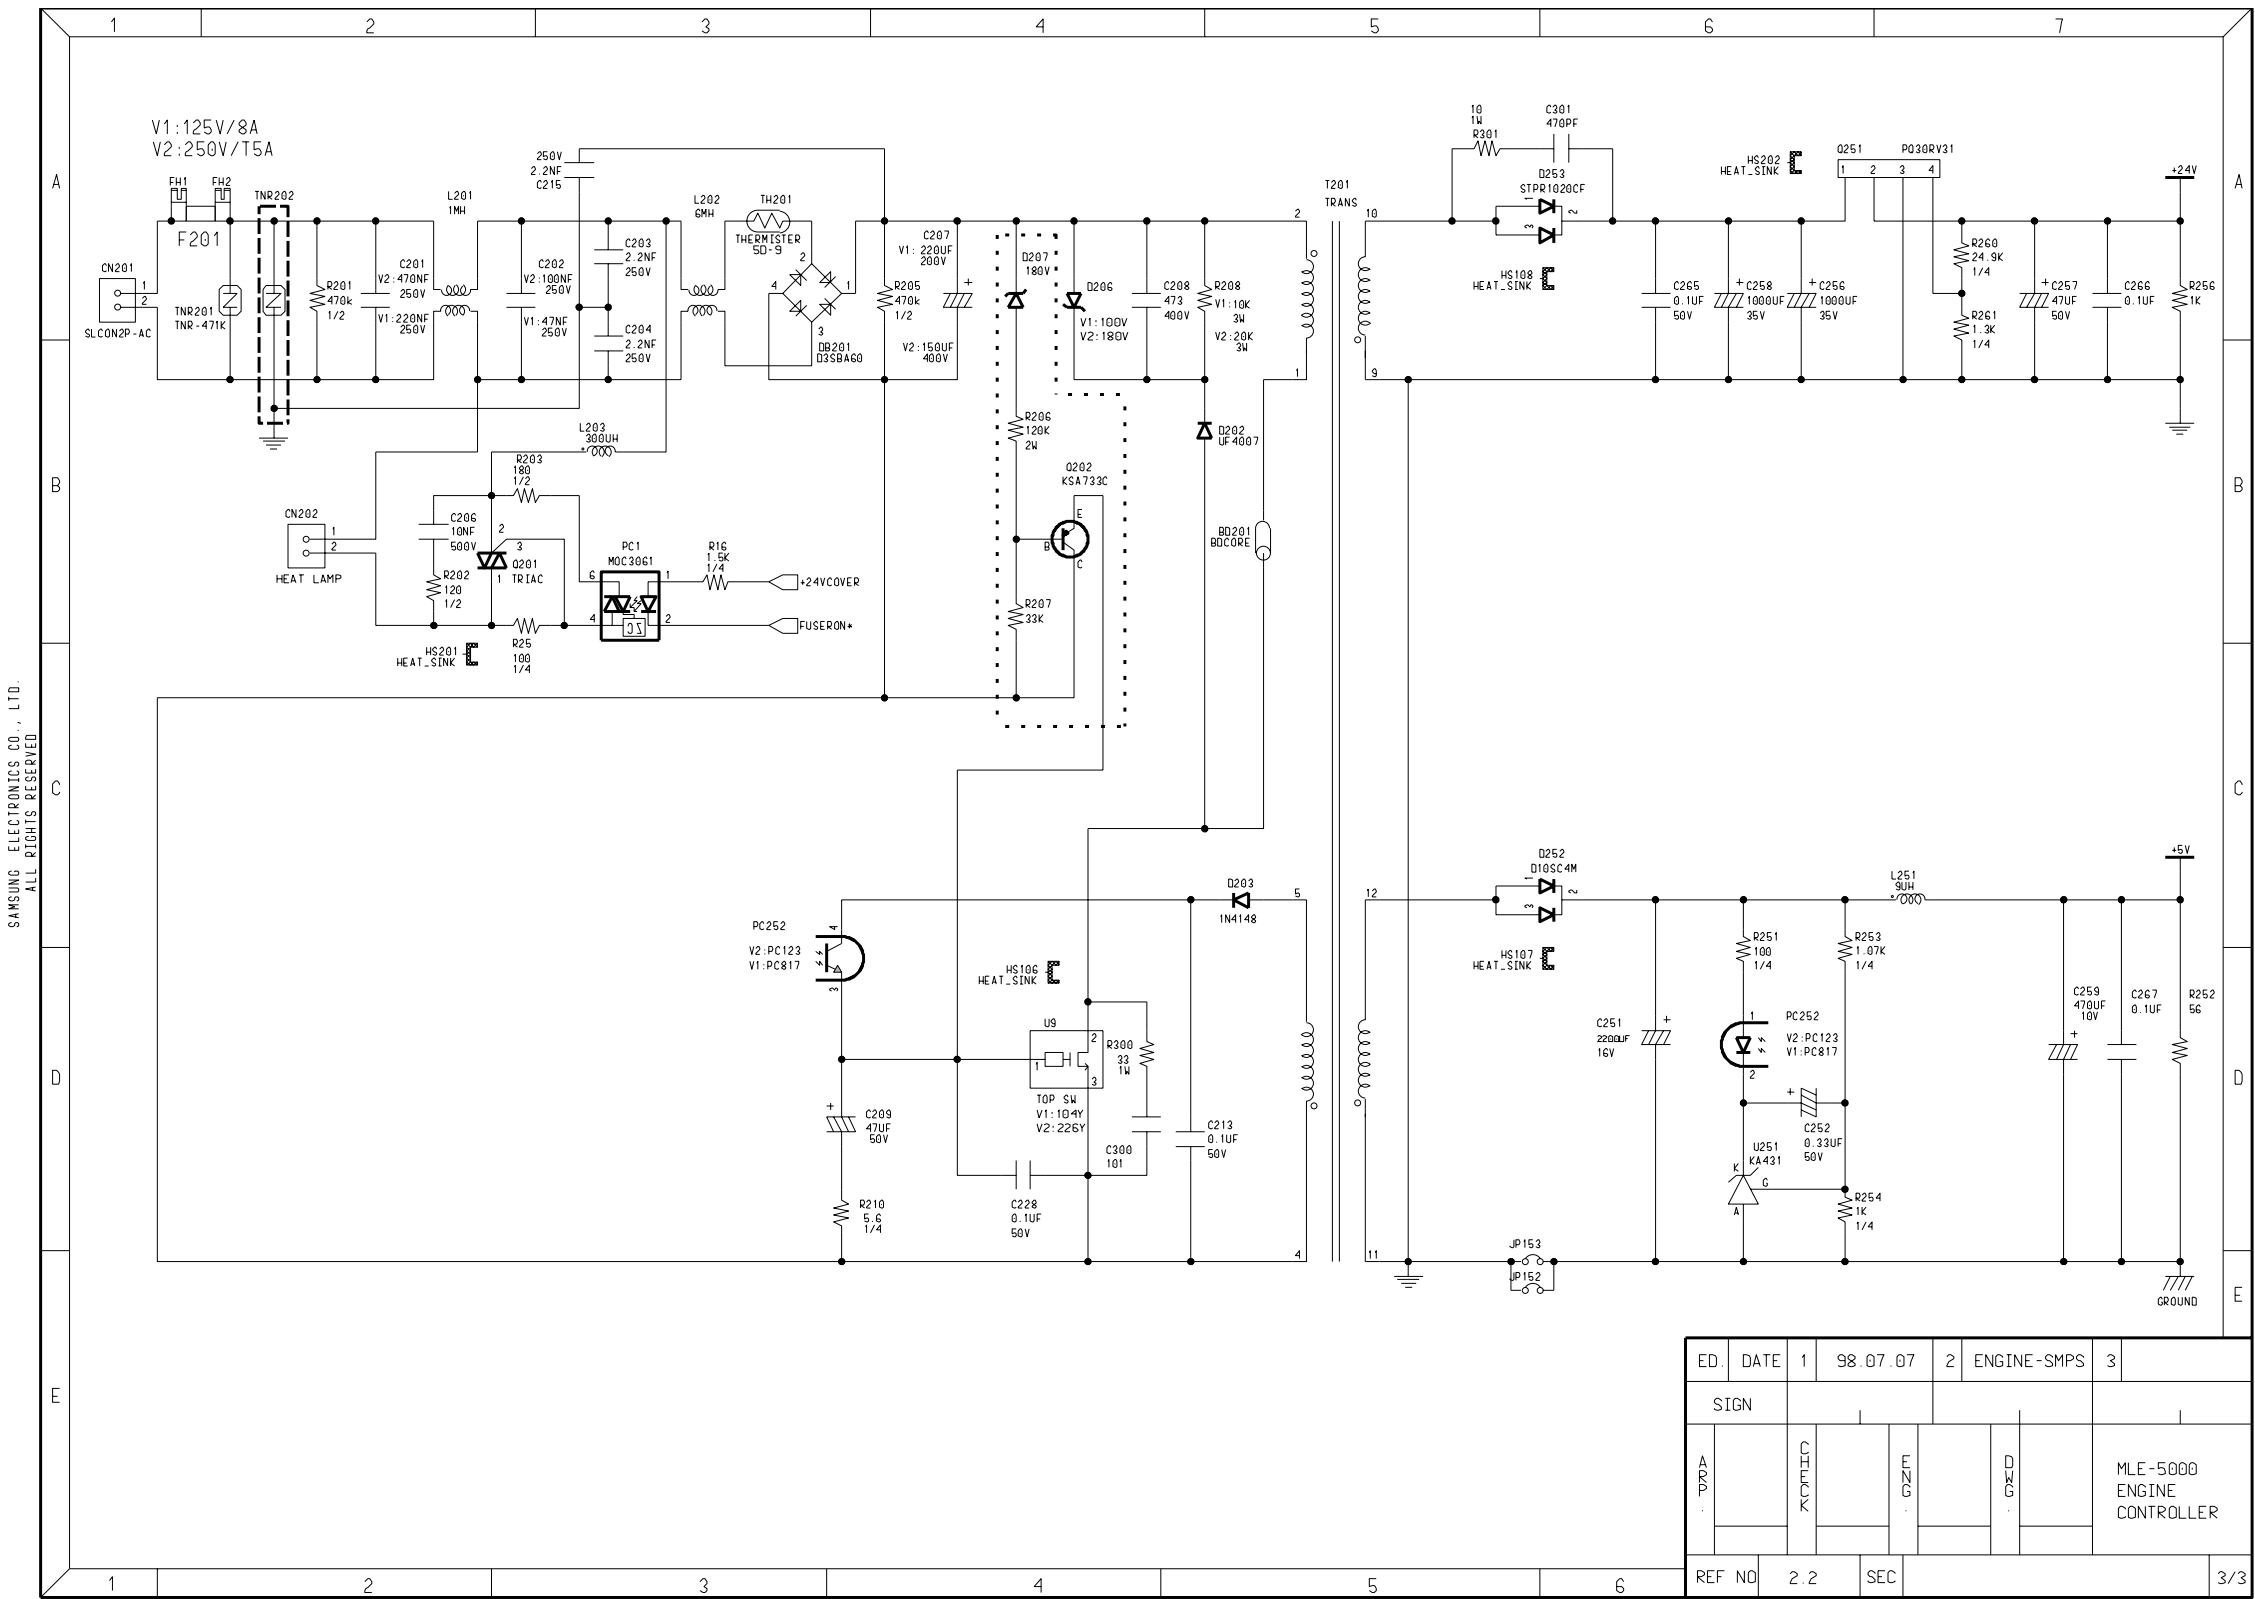

7-4 Joint Board

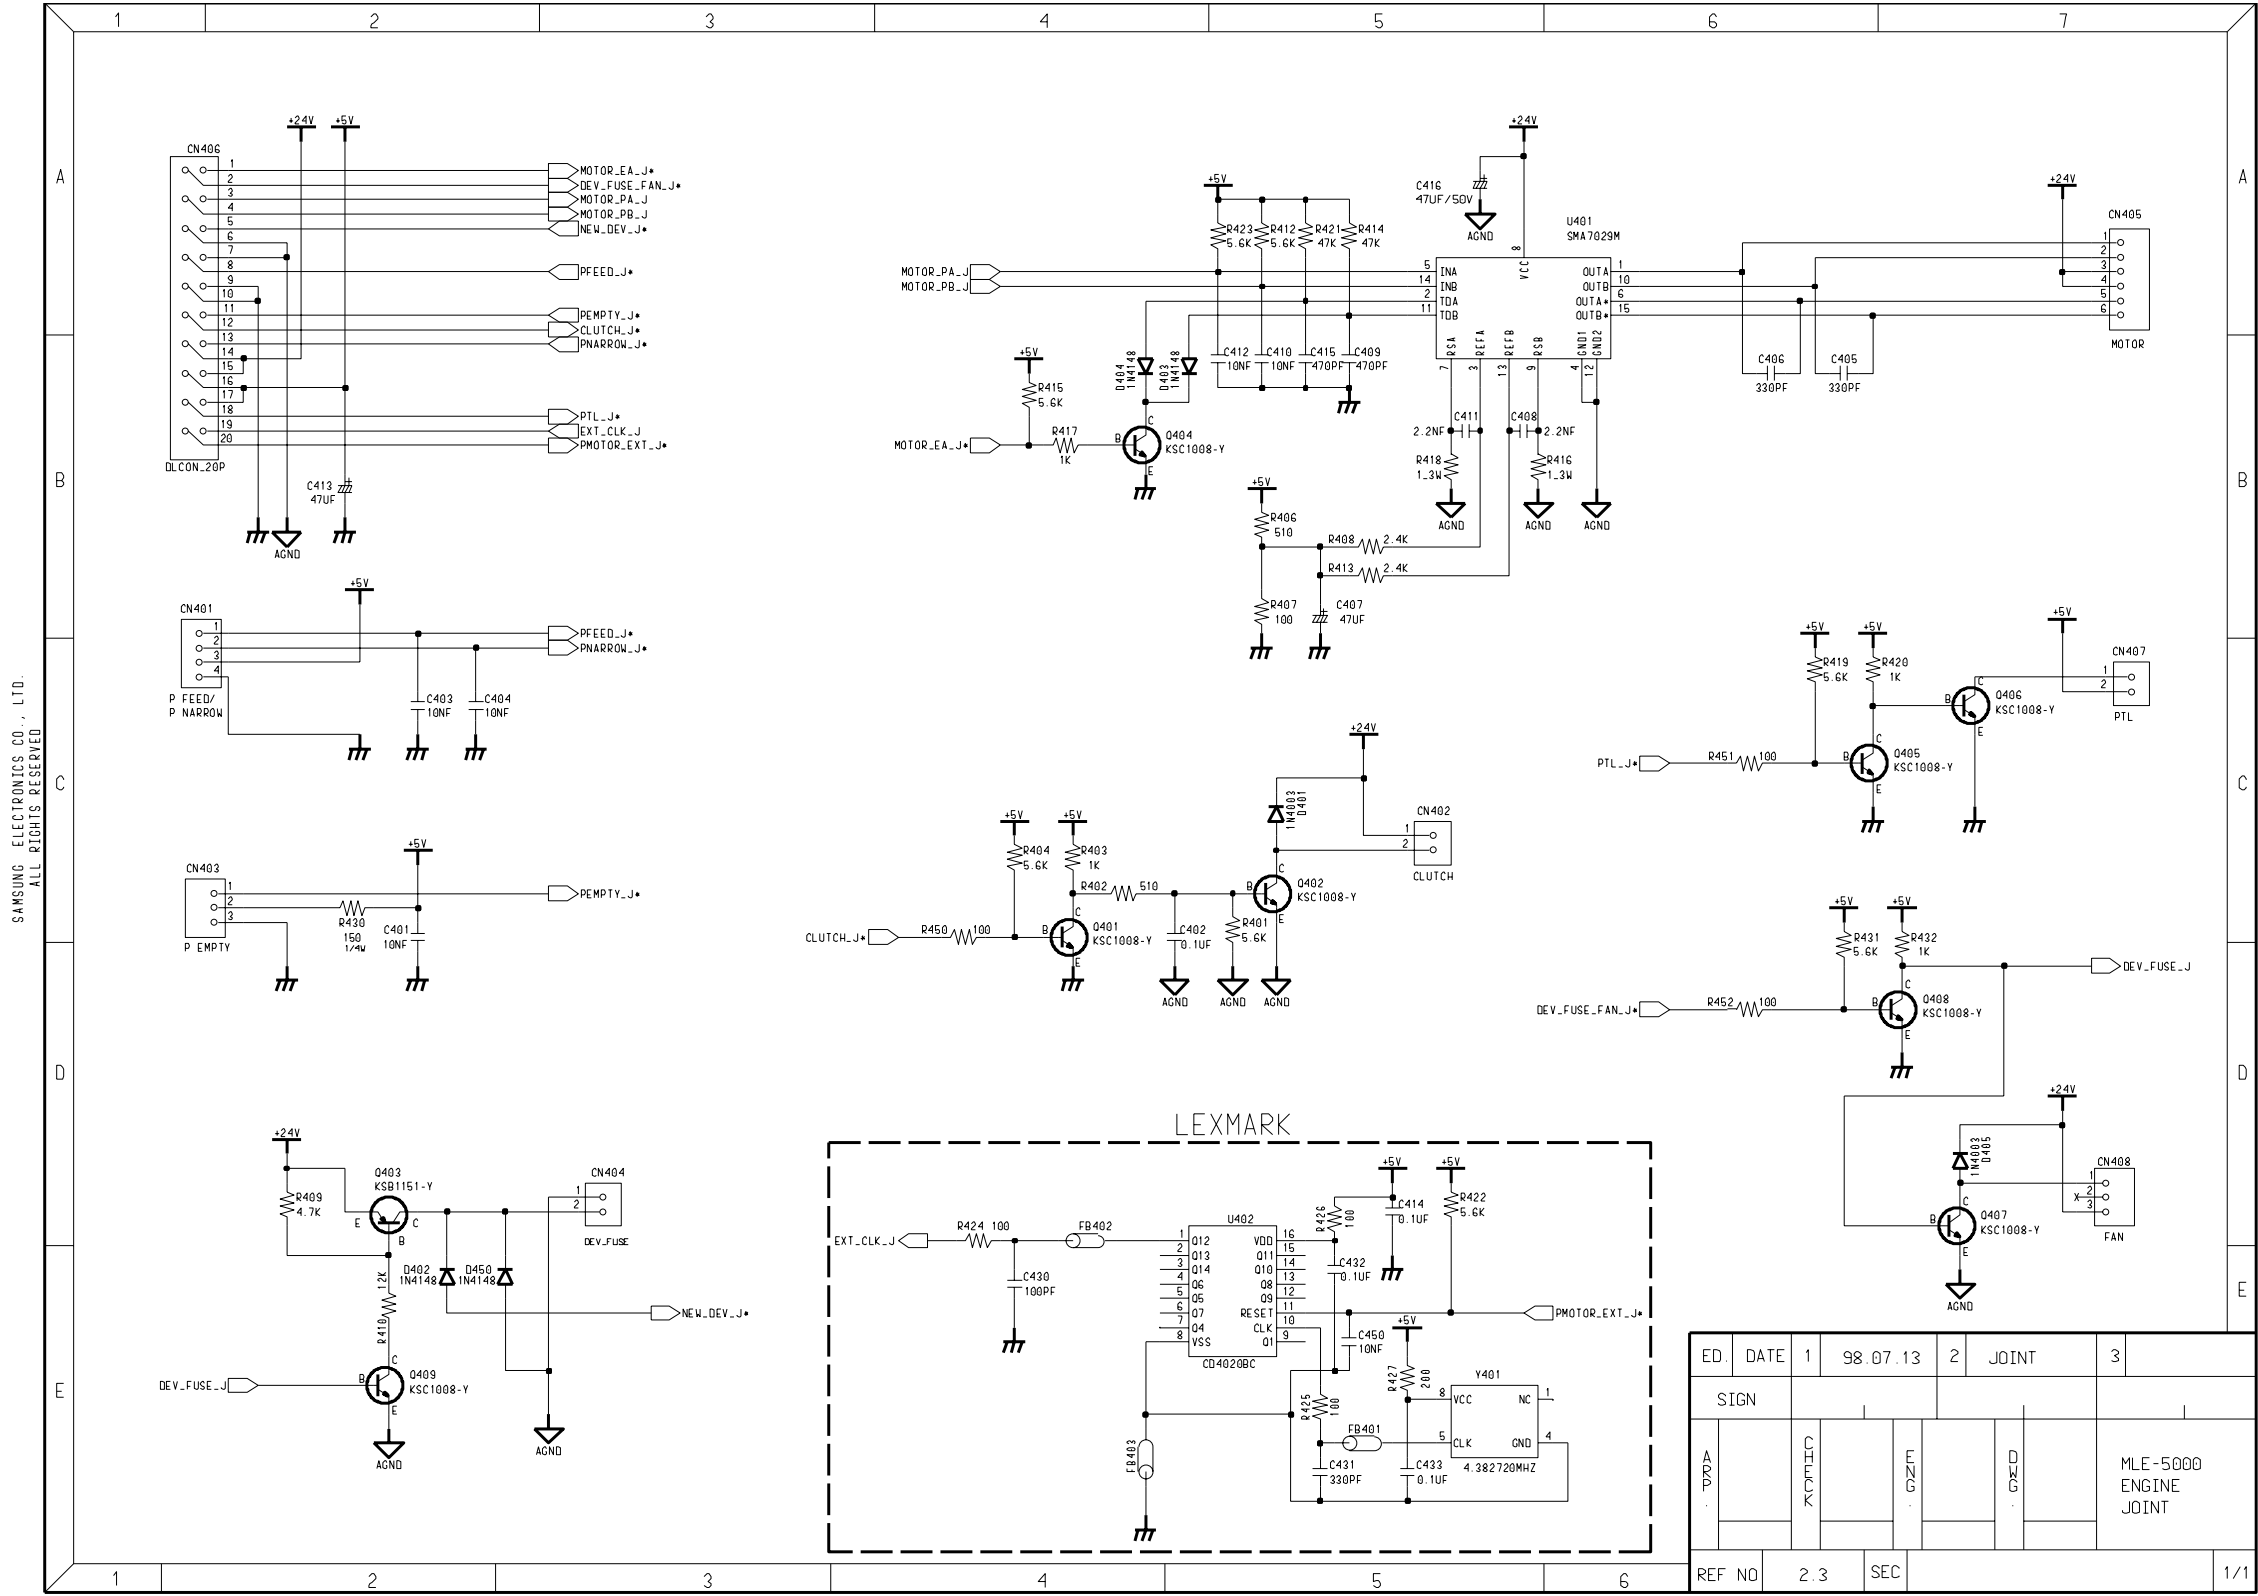

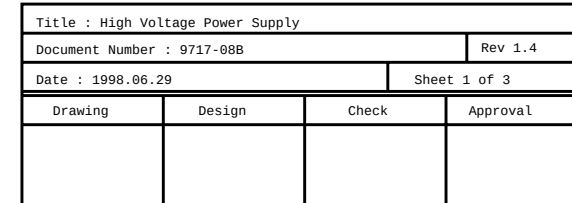



HVPS 3/3

